
OPERATION INSTRUCTIONS

L12



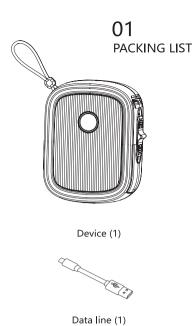

QUICK SETUP

Start a brand-new marking experience in just two steps

Please search and download "SharpFox" on App Store (iOS) or Google Play (Android).

You can also scan QR Code below to download APP.



 







Google play or App Store

03 **BASIC USE**



① Opening method

 


2 Opening size



③ Consumable installation Load paper with sticker face down



④ Correct closure

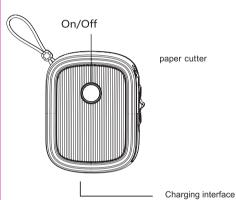

Press and hold the On/Off button to turn on the machine.

Connect the machine with the APP to set the specifications of consumables. Edit the print content and confim the print.

- Green light: fully charged/in normal use
- . Red light: charging/ paper shortage/overheating/cover opening
- Red light flashing: low power will cause the printed handwriting to be weak, please charge it in time
- Blue: Changliang/ Bluetooth connected

04 **WARNINGS**

- 1. Make sure that the paper bin is clean before using the printer. If there is any debris in the paper bin, the print head may be damaged during printing. In case of any debris, use a special cleaning device or alcohol to clean the paper bin and print head.

 2. Tum off the power immediately when the printer
- 3. There are complex circuits and devices inside the printer, please do not disassemble the printer without authorization.
- 4. Charge the battery in a cool and airy room. Do not expose the printer and power adapter to high-temperature and high-humidity environments, or water to avoid short circuits that can cause the battery to heat up, smoke, deform, damage, or even explode. If the power adapter comes into contact with water or other liquid, cut off the power immediately. When you notice smoke or an odor from your printer or power adapter, unplug the power.
- adapter immediately and take care to avoid bumes.

 5. Please do not squeeze, mechanical vibration, shake the printer and power adapter, remove or modify the power adapter. It is forbidden to use the power adapter when the power cord is damaged, otherwise it will cause electric
- shock, fire and damage to the power adapter

 When unplugging the printer, grab the power adapter.

 Pulling the power cable will damage the cable.

 Do not use the printer near flammable products such as
- gas stations and fuel warehouses

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.