



Questions? Comments?
We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com



PSBVSN60

Wave Base Wireless BT Streaming Tabletop Soundbar Digital Speaker System

with Remote Control, AUX (3.5mm), Optical In, USB In & HDMI (ARC)



PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATION

Features:

- Designed to Sit Under Your Television
- Home Theater Tabletop TV Stand Mount
- Powerful and Compact Speaker Sound Bar System
- Built-in BT for Instant Wireless Music Streaming
- Works with All of Your Favorite BT-Enabled Devices (iPhone, Smartphone, iPod, MP3 Player, iPad, Tablet, PC, etc.)
- Digital Optical Audio Connector Jacks, USB Port, HDMI/ARC
- System Doubles as TV Speaker Base Entertainment System
- Ported Tube Design for Extended Bass Performance
- Full-Range Audio Spectrum Stereo Sound Reproduction
- Convenient Source Selection with LED Indicators
- Easy Touch Button Audio Select Control Center
- Aux (3.5mm) Input Connector Jack
- Easy-to-Use and Easy-to-Setup

What's in the Box:

- TV Soundbar
- Audio Connection Cables
- Remote Control
- Optical Cable
- Power Adapter

Technical Specs:

- RMS Power Output: 30 Watt (15 x 2)
- Wireless BT Version: 5.0.
- Wireless BT Range: 50 Feet
- Speaker Impedance: 4 Ohm
- Inputs: 3.5mm (AUX), Digital Optical Audio Connector Jacks, USB Port, HDMI/ARC
- Power Supply: AC100-240V~50/60Hz, DC15V/2A
- Frequency Response: 60Hz 20kHz (+/- 6dB)
- Input Sensitivity: 450mV
- S/N: 63dB
- THD: 1%
- Product Dimensions: 23.82 " x 2.36" x 2.36"-inches

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.

Using close to a TV or computer

Some older TVs and computer monitors are magnetically sensitive devices and as such are likely to suffer discoloration or picture distortion when conventional speakers are placed nearby. If discoloration problems persist, try moving the soundbar away from your TV or monitor.

Placement

- Sensitive to extreme temperatures and humidity. Do not put it in locations subject to direct sunlight or in humid places, such as near an air conditioner, humidifier, bathroom, or kitchen.
- Do not put water or other liquids close to the soundbar. If liquid is spilled over the soundbar, it may be damaged.
- The soundbar should be placed on a sturdy, flat surface that is free from vibration, or mounted on a wall. Do not put the soundbar on an uneven or unstable surface, where it may fall and cause damage.

This user manual explains how to correctly install, operate, and get the best performance from your Home Theater Wireless BT Soundbar Speaker. Read this user manual carefully before installing your system, and then keep it handy for quick reference.

FUNCTION DESCRIPTION





- 1. Connect power via 5V 1A adapter.
- 2. Press the key "O/M" to turn ON, Then go directly to BT mode/ Short press to change between modes BT/OPTI/AUX IN.
- 3. Play/pause music.
- 4. Press and hold to decrease the volume/short press to previous track.
- 5. Press and hold to increase the volume/short press to next track.
- 6. HDMI (ARC) In Port.
- 7. OPTICAL Port.
- 8. USB Port.
- 9. AUX IN Port.

Note: The RC sensor is at the front of the sound bar.

REMOTE CONTROL FUNCTIONS

- 1. Power: Switch ON/OFF the sound bar.
- 2. PAIR: Connects/disconnects Wireless BT
- 3. VOL +
- 4. Previous track
- 5. **VOL -**
- 6. TREB -: Reduce the amount of treble.
- 7. BASS -: Reduce the amount of bass.
- 8. Mute
- 9. **INPUT:** Input signal mode conversion.
- 10. Next track
- 11. Play/Pause
- 12. TREB +: Increase the amount of treble.
- 13. EQ: Equalizer button.
- 14. BASS +: Increase the amount of bass.

OPERATION INSTRUCTION

ON/OFF SWITCH

- Connect the DC port of adapter to the sound bar then connect the power cord to a wall socket
- Press the "POWER" to switch ON the sound bar, and it will enter BT mode automatically, press and hold the "POWER" again to switch OFF.

AUX IN FUNCTION

- Plug the AUX cable into the AUX port and the other side to TV or other device with AUX port.
- 2. Short press "MODE" into AUX mode, LED lights (white) will light indicating "AUX", music will start playing.

WIRELESS BT CONNECTION

- 1. Put the soundbar near the BT device.
- Switch ON the PSBVSN60, LED flashes quickly, which means it is ready for pairing.
- Turn ON the BT function of the mobile device, search for "PYLE" and connect to it once found. If a Passkey is requested, enter "0000".
- 4. When connected, the LED light will be on.
- 5. The soundbar will reconnect to the last paired device when switched on, If it doesn't connect, the soundbar will enter pairing mode automatically.

OPTICAL FUNCTION

- Plug the optical cable into the optical port and the other side to TV or other device with optical/digital port.
- Short press "MODE" into optical mode, LED lights (white) will light indicating "optical", music will start playing.

USB FUNCTION

- 1. Directly insert the USB card.
- 2. Press "▶III" on Soundbar or "▶/III" on remote control to play/pause.
- 3. Press " $| \blacktriangleleft \lor V / \triangleright \triangleright | / V + "$ or " $| \blacktriangleleft \lor \triangleright \triangleright | "$ to go to previous/next song.

ARC IN FUNCTION

Connection with HDMI (ARC) cable, e.g. to the HDMI ARC connection of the television set, DVD player.

California Prop 65 Warning

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.cg.gov

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.