

110mm

Bluetooth speaker

LZH-59

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.


In the Box

- ESP-AU24 Audition Wireless Karaoke Speaker with Microphone (x1)
- USB-C Charging Cable (x1)
- Instruction Manual (x1)



Safety Precautions

- This device is NOT a toy, keep away from children and pets.
- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Do not open this device or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose device or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the device or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if device or charging cable is damaged. If device or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

Product

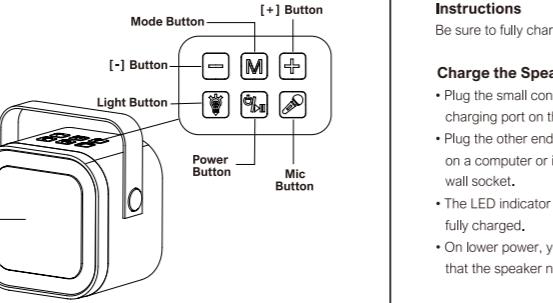

Back of Speaker

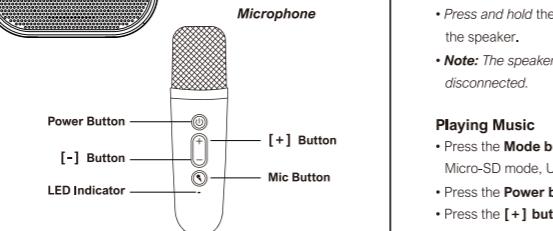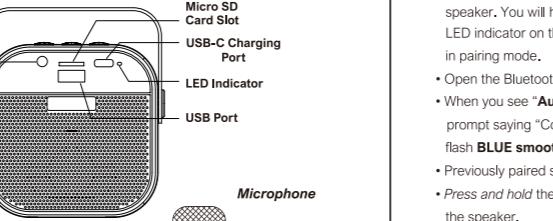

Instructions

Be sure to fully charge the speaker before using for the first time.

Charge the Speaker

- Plug the small connector of the included charging cable into the USB-C charging port on the back of the speaker.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED indicator on the back will glow **RED** when charging and turn off when fully charged.
- On lower power, you will hear a voice prompt saying " Low battery." indicating that the speaker needs to be recharged.

Pair & Connect with a New Device

- Press and hold the **Power button** on speaker for 3 seconds to turn on the speaker. You will hear a voice prompt saying "Power on, Bluetooth mode." The LED indicator on the back of speaker will flash **BLUE rapidly** indicating the in pairing mode.
- Open the Bluetooth menu on your smart device and search for new devices.
- When you see "Audition" listed, tap it to connect. You will hear a voice prompt saying "Connected," and the LED indicator on the back of speaker will flash **BLUE smoothly** when paired successfully.
- Previously paired speaker will pair automatically after they are powered on.
- Press and hold the **Power button** on speaker again for 3 seconds to turn off the speaker.
- Note: The speaker will automatically shut off after 5 minutes when it is disconnected.

Playing Music

- Press the **Mode button** on speaker to switch between Bluetooth mode, Micro-SD mode, USB mode and AUX mode.
- Press the **Power button** on speaker to play/pause your audio.
- Press the **[+]** button on speaker to skip to next track.

Using the Microphone

- Press and hold the **Power button** on microphone for 3 seconds to turn on the microphone. The LED indicator on the microphone will flash **BLUE** indicating the microphone is in pairing mode.
- When the speaker is turned on, the microphone will pair with the speaker automatically. The LED indicator on the microphone will stay **solid BLUE** when paired successfully.
- Press the **Power button** on microphone to mute/unmute the microphone.
- Press the **Mic button** on microphone to switch voice effect (5 different voice effects).
- Press and hold the **Mic button** on speaker or microphone to switch between original mode and accompany mode.
- Press the **[+]** button on microphone to increase volume of voice.
- Press and hold the **[+]** button on microphone to increase volume of voice.
- Press the **[-]** button on microphone to decrease volume of voice.
- Press and hold the **Power button** on microphone again for 3 seconds to turn off the microphone.
- Note: The microphone will automatically shut off after 3 minutes when it is disconnected.

Using the LED Light

- Press and hold the **Power button** on speaker for 3 seconds to power ON.
- The LED light will turn on automatically.
- Press the **Light button** on Speaker to switch light modes.
- Press and hold the **Light button** on speaker for 3 seconds to turn on/off the LED light.

Reset the Speaker

- If you have trouble pairing your speaker, forget the pairing name "Audition" from the list of the connected device and turn off the Bluetooth.
- Follow the instructions under "Pair & Connect with a New Device" to pair with the speaker again.

Tech Specifications

Speaker Output	5W
Impedance	4 ohm
Frequency Response	20Hz ~ 20KHz
S/N Ratio	>80dB
Connection Range	33 feet
Continuous Play Time	Up to 4 hours
Battery Capacity(Speaker)	1800mAh/3.7V 6.66Wh
Battery Capacity(Microphone)	500mAh/3.7V 1.85Wh
Power Input	DC 5V/1A
Charging Time	2 hours
Working Temperature	32°F ~ 122°F (0°C ~ 50°C)

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is


encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure

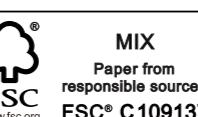

Made in China

5mm



16mm

74 mm

74 mm

74 mm

74 mm

74 mm

74 mm

74 mm