

Applicable model

Name/ Size	Model
iPad mini 6/8.3-inch(2021)	A2567/A2568/A2569
iPad mini 5/7.9-inch(2019)	A2133/A2124/A2126/A2125
iPad Pro 6/12.9-inch(2022)	A2436/A2437/A2764/A2766
iPad Pro 5/12.9-inch(2021)	A2378/A2461/A2379/A2462
iPad Pro 4/12.9-inch(2020)	A2229/A2233/A2069/A2232
iPad Pro 4/11-inch(2022)	A2759/A2435/A2761/A2762
iPad Pro 3/12.9-inch(2018)	A1876/A2014/A1995/A1983
iPad Pro 3/11-inch(2021)	A2377/A2459/A2301/A2460
iPad Pro 2/11-inch(2020)	A2228/A2231/A2068/A2030
iPad Pro 1/11-inch(2018)	A1980/A2013/A1934/A1979
iPad Air 5/10.9-inch(2022)	A2588/A2589/A2591
iPad Air 4/10.9-inch(2020)	A2316/A2324/A2325/A2072
iPad Air 3/10.5-inch(2019)	A2152/A2123/A2153/A2154
iPad 10/10.9-inch(2021)	A2696/A2757/A2777
iPad 9/10.2-inch(2021)	A2602/A2603/A2604/A2605
iPad 8/10.2-inch(2020)	A2270/A2428/A2429/A2430
iPad 7/10.2-inch(2019)	A2197/A2198/A2200
iPad 6/9.7-inch(2018)	A1893/A1954






Note: Early iPad versions, iPhone, Android and Microsoft devices are not supported. Please confirm the above iPad models before purchasing.

Common faults and troubleshooting methods

Faults	Troubleshooting methods
Broken wire elimination	<ol style="list-style-type: none"> Check whether the nib is equipped in place, can be tightened and tested again Replace the spare nib and test again Whether the tempered film is severely damaged or it too thick Tablet device reboot
can't write	<ol style="list-style-type: none"> Check if it is on or not Does the tablet device support the stylus Does APP support stylus Check if the original pen is connected, if it's connected please Disconnect and use again
unable to power up	<ol style="list-style-type: none"> Check if the product is powered Is the power on according to the operation

Note: still can not use please contact customer service for replacement processing

7

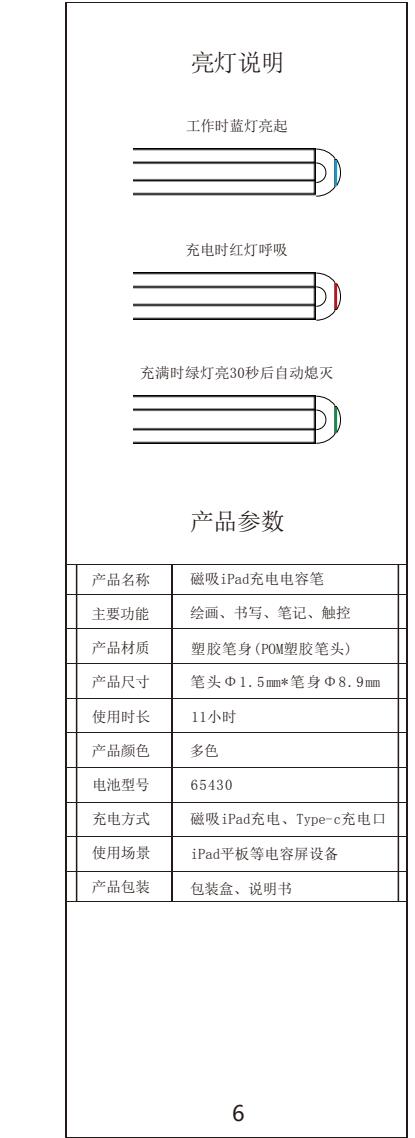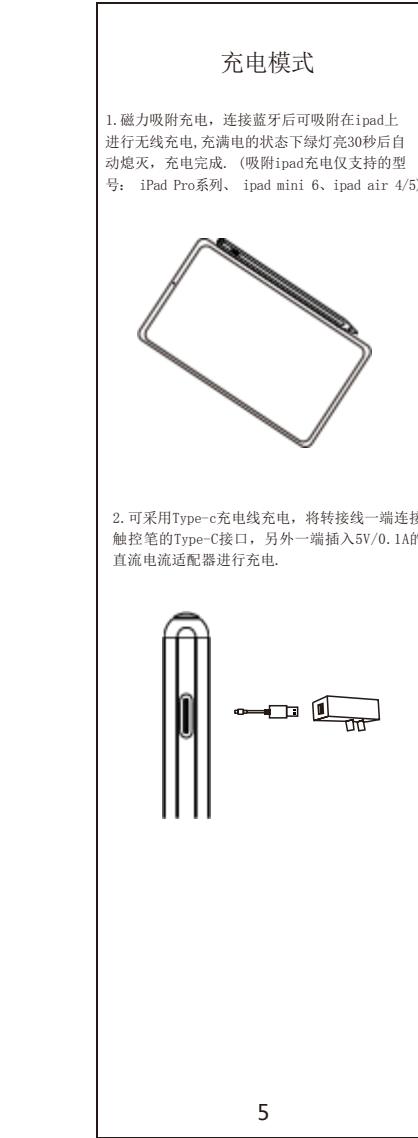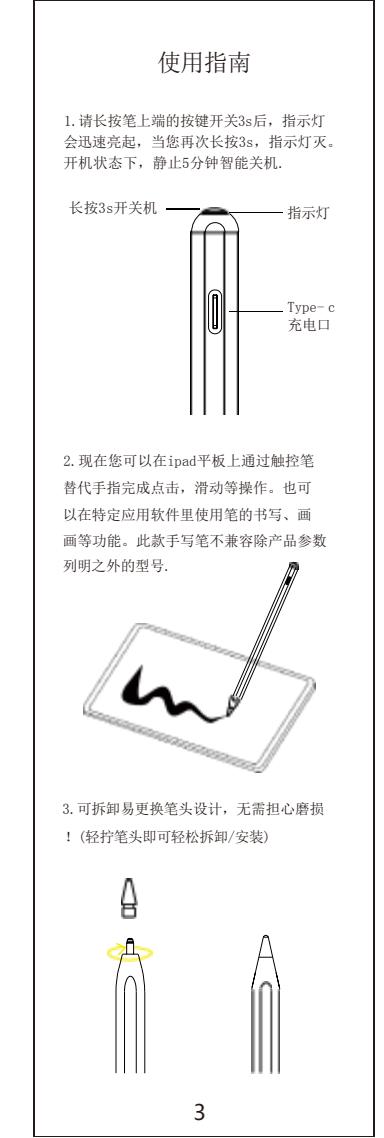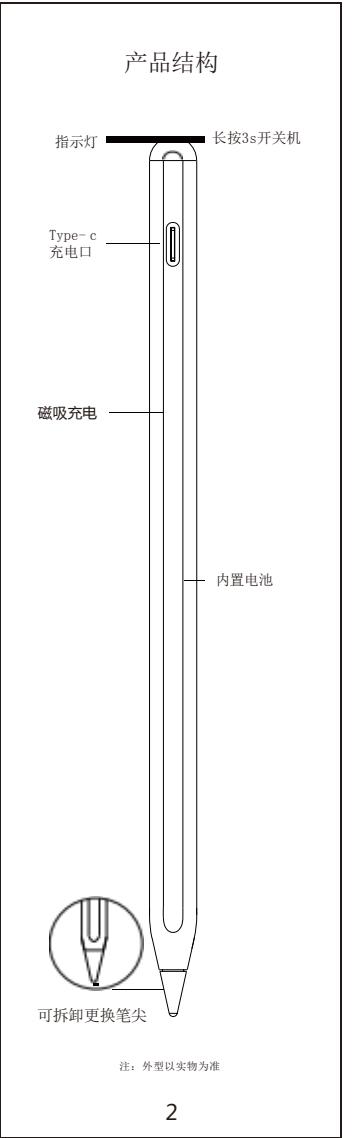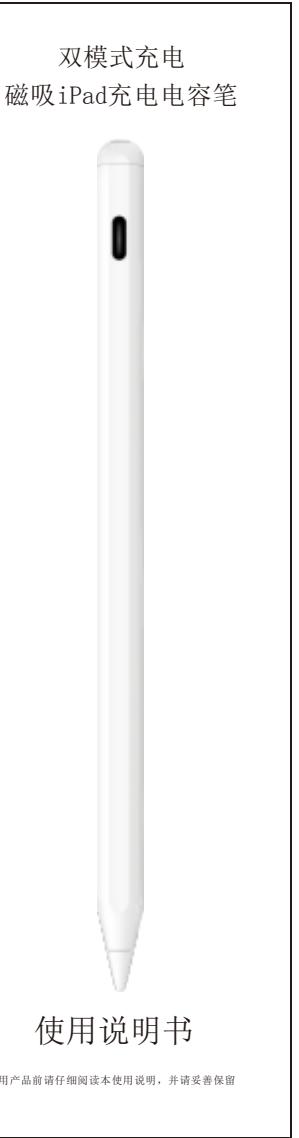

适用型号

名称/尺寸	型号
iPad mini 6/8.3-inch(2021)	A2567/A2568/A2569
iPad mini 5/7.9-inch(2019)	A2133/A2124/A2126/A2125
iPad 6/12.9-inch(2022)	A2436/A2437/A2764/A2766
iPad Pro 5/12.9-inch(2021)	A2378/A2461/A2379/A2462
iPad Pro 4/12.9-inch(2020)	A2229/A2233/A2069/A2232
iPad Pro 4/11-inch(2022)	A2759/A2435/A2761/A2762
iPad Pro 3/12.9-inch(2018)	A1876/A2014/A1895/A1983
iPad Pro 3/11-inch(2021)	A2377/A2459/A2301/A2460
iPad Pro 2/11-inch(2020)	A2228/A2231/A2068/A2030
iPad Pro 1/11-inch(2018)	A1980/A2013/A1934/A1979
iPad Air 5/10.9-inch(2022)	A2588/A2589/A2591
iPad Air 4/10.9-inch(2020)	A2316/A2324/A2325/A2072
iPad Air 3/10.5-inch(2019)	A2152/A2123/A2153/A2154
iPad 10.9-inch(2021)	A2696/A2757/A777
iPad 9/10.2-inch(2021)	A2602/A2603/A2604/A2605
iPad 8/10.2-inch(2020)	A2270/A2428/A2429/A2430
iPad 7/10.2-inch(2019)	A2197/A2198/A2200
iPad 6/9.7-inch(2018)	A1893/A1954

注意事项：不可以用在早期ipad版本、iPhone、安卓、微软设备。请在购买之前确认以上的iPad型号。

常见故障及排除方法

故障	排除方法
1、检查笔尖是否装备到位，可拧紧再测试	
2、更换备用笔尖再测试	
3、钢化膜是否破损严重，是否太厚	
4、平板设备重新开机启动	
1、检查是否开机	
2、平板设备是否支持手写笔	
3、APP是否支持手写笔	
4、检查是否连接原装笔，如有连接请断开再使用	
1、检查产品是否有电	
2、是否按操作进行开机	
注：仍无法使用请联系客服，进行更换处理	

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction