



NEXG

SMART AUDIO GUITAR

USER MANUAL

The power line (with a coil) must be used with this product.

 ENYA MUSIC



ITEMS IN BOX


NEXG Guitar
Leather Case
Two-Way Strap
Audio Cable
Charging Cable
Monitor Earphone
Charger
User Manual


CONTENTS

- 3 GET TO KNOW THE NEXG
- 10 QUICK START GUIDE
- 15 CHARGING INSTRUCTION
- 16 HOW TO CHANGE STRINGS
- 18 WARRANTY
- 20 RETURN POLICY
- 22 THANK YOU



GET TO KNOW THE NEXG

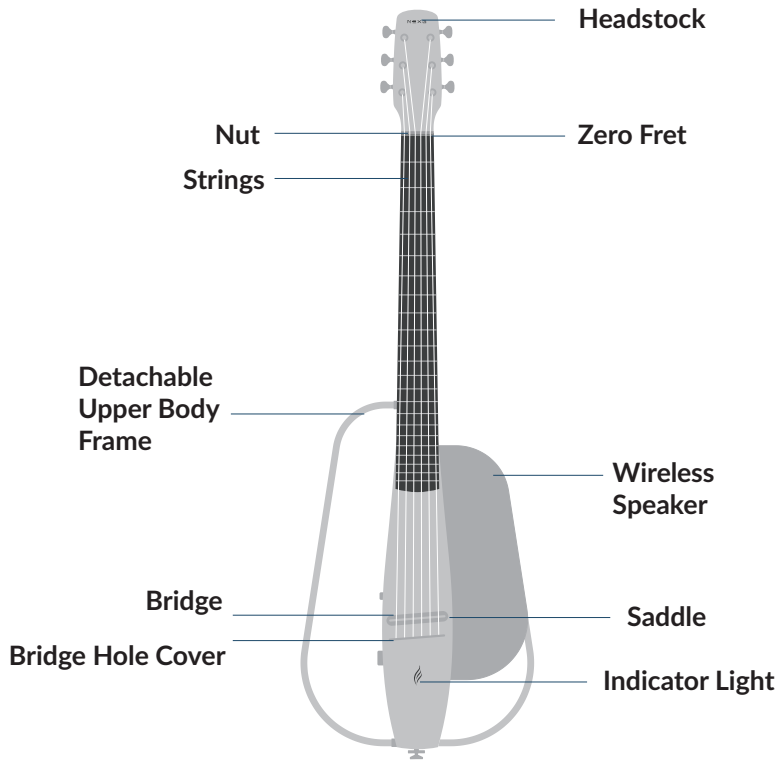

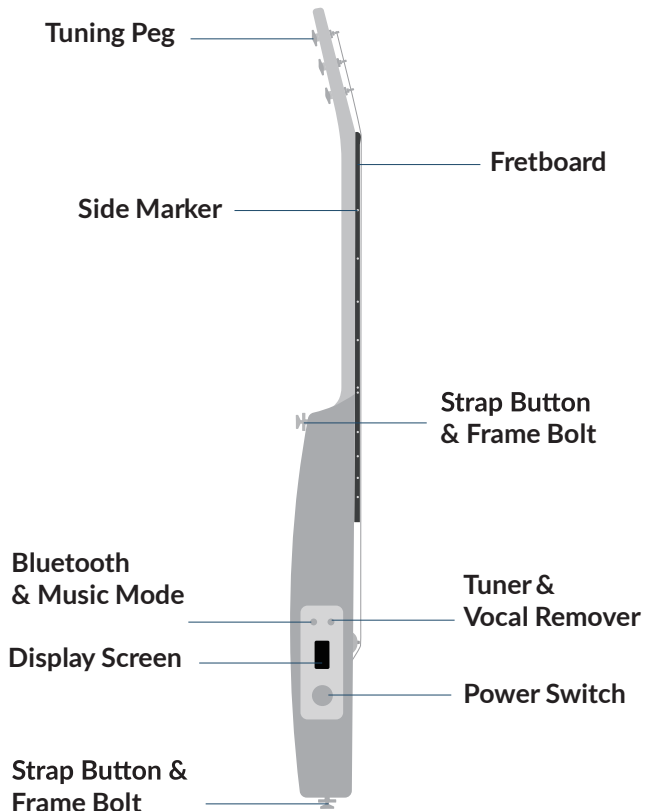







NEXG - SIDE




The Information Display

	Bluetooth	Flashing icon: Pairing mode is on Icon remains on: Bluetooth connected.
	Streaming	Streaming mode is on
	Speaker	Speaker is on
	Earphones	Earphone is connected
	Output	Output line is connected
	Instrumental Music	Vocal removed from a song




Connection Panel

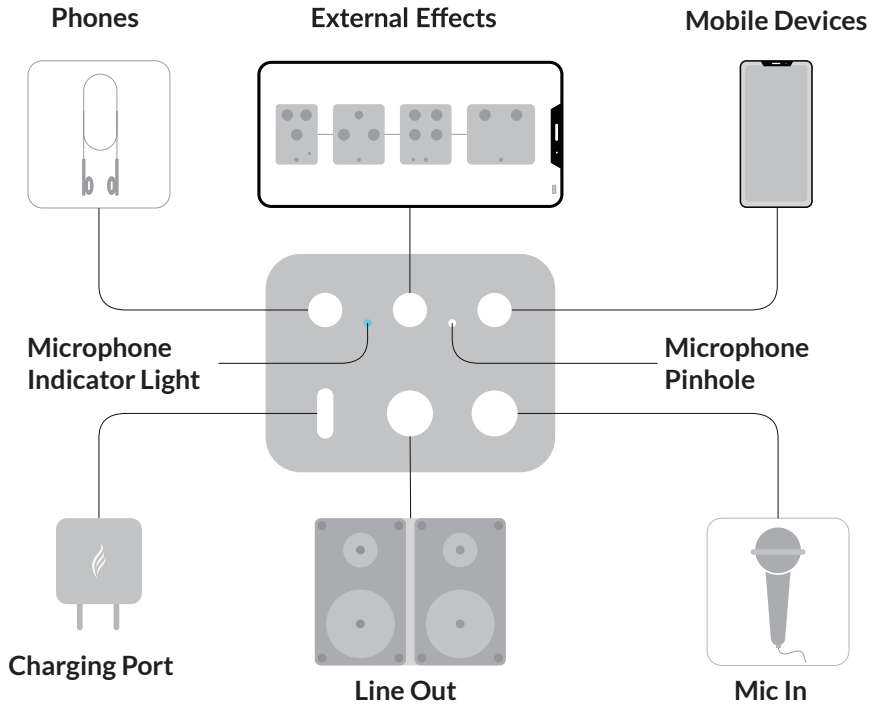



Specifications

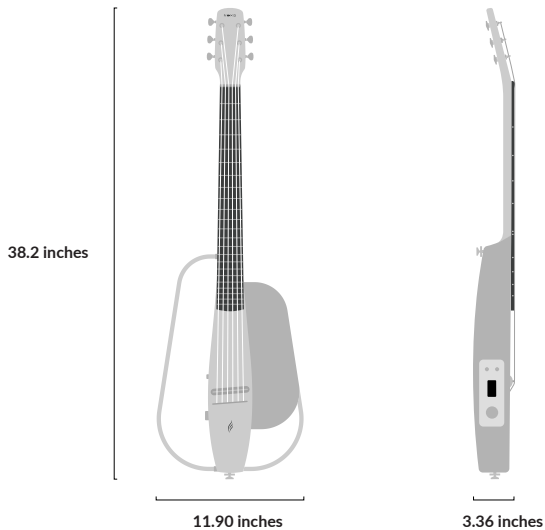

Model

NEXG Smart Audio Guitar

Size

38-inch Silence & Detachable Body

Color Options

Black/White/Blue/Pink




Weight	1.25 LBS
System	Enya ES2 Smart Audio
Body	Carbon Fiber Composite
Fretboard	Carbon Fiber Composite
Bridge	Carbon Fiber Composite
Frets	Round-End Nickel Silver
Tuning Machines	Silver Die-Cast
Scale Length	23.7 inches
Nut	Carbon Fiber & Zero Fret Design
Saddle	Nubone



Strings	D'Addario® EXP 16
Finish	Satin
Battery	14.4 V,2600mAh
Max Charging Power	27W
Display Screen	OLED
Speaker	30W Bass *1 & 10W Treble *2
SNR	>80dB



QUICK START GUIDE

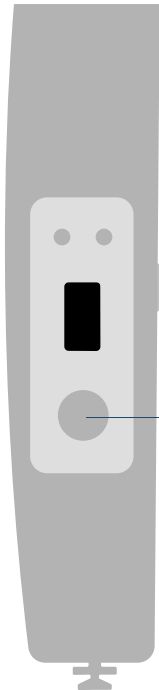

GET STARTED

Press and hold the knob to power on/off the NEXG;

Tab the knob to switch tone effects;

Turn the knob to control volume.



Bluetooth


Press and hold the button to turn on/off bluetooth




Once the mobile device is connected successfully, the bluetooth icon will show on the top left corner of the screen as the image above.

Music Mode

After the mobile device is connected, music mode will be activated. Your NEXG can be used as a bluetooth speaker now.

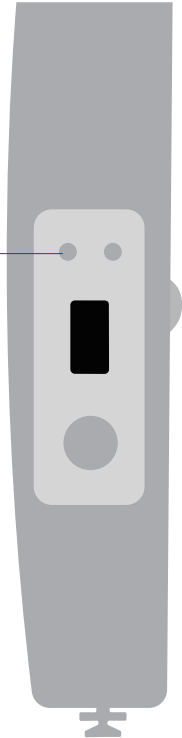

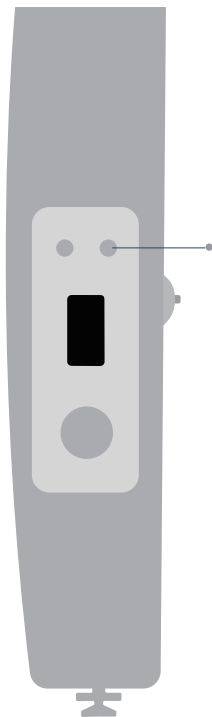

Tuner

Tab the button to turn on the tuner.



Low (Tune up)



High (Tune down)




Ready to Play

Vocal Remover

Press and hold the button to extract vocal from the song.



Connect the wireless microphone to a designated NEXG: (The Microphone is optional)

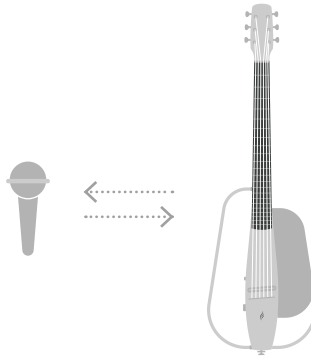

- Step 1:** When the microphone is off, press and hold the power button until the indicator light turns on and off. Then tab twice to turn on connection mode. The microphone's indicator light flashes, which means connection mode is on.
- Step 2:** Insert a paper clip or a SIM-eject tool into NEXG's microphone's pinhole. The microphone's indicator light will turn red and flash four times to confirm the NEXG's connection mode is on.



Step 3: Press the microphone's power button once to connect with the NEXG. The microphone's blue indicator light stops flashing and NEXG's red indicator light (on connection panel) keeps on to prove the microphone is successfully connected.

NOTE: The above steps only apply to the situation that multiple devices are being used in one room, and the purpose is to connect a microphone to a designated NEXG. A NEXG is not compatible with other brands' wireless microphones.

ENYA APP

Connect your NEXG to the ENYA MUSIC App to discover more features. Please download it from App Store or Google Play.




Enya Music



CHARGING INSTRUCTION

Either a charging cable or the NEXG charging stand is needed.

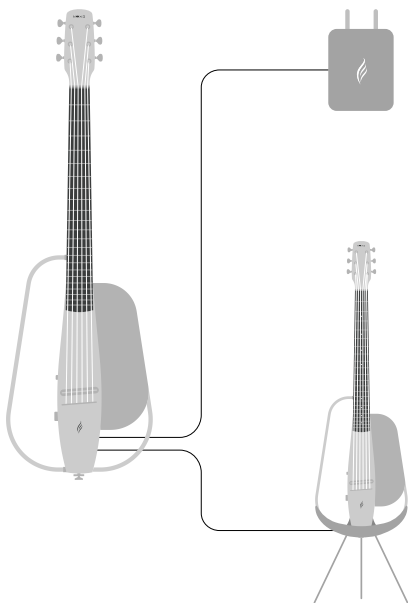


The charger and USB to TYPE-C charging cable are included.


The NEXG charging stand is available to purchase on the Enya official website.




HOW TO CHANGE STRINGS

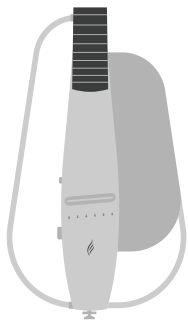


Loose the strings, remove the bridge hole cover and all strings.

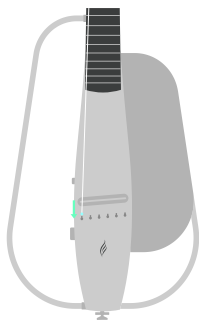

Insert the string knot into the slot on the bridge.

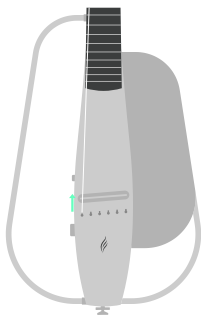

Pull up and tighten the strings.

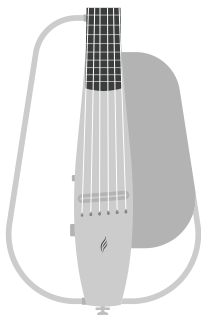

Put the bridge hole cover back on after changing all strings.



WARRANTY

Your Enya instrument is warranted against defects in materials and workmanship by Enya Music, Inc. for a period of one year starting from the date of original purchase from an authorized dealer.

If a defect exists, Enya Music, Inc., at its option will either (1) repair the product at no charge using new or refurbished parts,

(2) exchange the product with a functional equivalent product that is new or refurbished.

(3) refund the original purchase price.

The following items are not covered by this warranty

- Any instrument on which any part has been disassembled.
- Any instrument that has been damaged due to an accident, negligence or misuse.



- Normal “wear and tear”, including but not limited to any discoloration, fading or damage to the original finish, or worn frets, strings, tuners, hardware and plating.
- Any instrument not purchased from an authorized dealer, or upon which unauthorized repair or service work has been carried out.



RETURN POLICY

To be eligible for a return and refund, items must be returned in original, as-shipped condition with all original packaging and no signs of use. All returned items must include all original packaging and accessories. Returned items not adhering to this policy may be subject to a 20% restocking/handling fee. The paid shipping fee is not refundable unless the item was damaged during shipping or not received as described.

To return your product, please contact us at service@enya-music.com to require the RMA number and prepaid shipping label. All orders can be returned within 30 days of the purchase. Customers are responsible for return shipping on returned items unless the item was damaged during shipping or not received as described. If 30 days have gone by since your purchase, unfortunately, we cannot offer you a refund or exchange. Unsolicited returns to enya-music.com or any of its authorized dealers will not be accepted.

Disclaimers: ENYA MUSIC, INC. ASSUMES NO LIABILITY FOR ANY INCIDENTAL AND CONSEQUENTIAL DAMAGE.



Any recovery is limited to the original purchase price. No other person is authorized to modify this limited warranty. This warranty gives you specific legal rights, and you may have other rights that vary by state and jurisdiction. These rights shall not be affected by this limited warranty. This warranty cannot be transferred or assigned.

To obtain warranty service, contact Enya Music, Inc. at service@enya-music.com,

Using the information provided at www.enya-music.com.

Proof of purchase is required to verify eligibility.

© 2019 Enya Music, Inc. All Rights Reserved.

Enya Music, Inc.
6132 Westline Dr
Houston, TX 77036 USA



THANK YOU FOR CHOOSING ENYA INSTRUMENT.

If you have any questions, please feel
free to contact us.

service@enya-music.com
support@enyamusical.com



CAUTION

Risk of explosion if the battery is replaced by an incorrect type disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; leaving a battery in an extremely high temperature surrounding environment that can result in a n explosion or the leakage of flammable liquid or gas ; a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



Battery's operation temperature range: 32-113°F (0-45°C)

FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5mm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



ENYA MUSIC (CHINA)

Qiuchang , Huiyang, Huizhou, Guangdong 516221

www.enyamusical.com

Email:enyaservice@enyamusical.com

ENYA MUSIC (USA)

6132 Westline Dr. Houston, TX 77036

www.enya-music.com

Email: service@enya-music.com

