
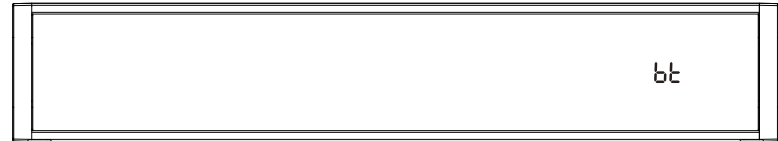 


S100说明书  
 尺寸: 120mm x 170mm  
 80g书写纸, 黑白印刷, 折页, 双面印  
 料号: 416-0D3P091-W00R






# USER MANUAL

## Hi! Let's get started.



Model: S100

Scan the code to visit our youtube channel

Scan the code to find soundbar setup instructions according to your TV brand

Scan the code and fill in the contact form to contact us quickly for any issues

### Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Special note:** When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

**Additional Warnings:**  
 The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
 L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide tel qu'un vase ne doit être placé sur l'objet.

 
Caution marking is located at the rear or bottom of the apparatus.  
 Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.  
 The marking information is located at the rear or bottom of apparatus. Le marquage est situé sur le panneau arrière ou inférieur de l'unité.

**FCC Warnings**  
**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 • Reorient or relocate the receiving antenna.  
 • Increase the separation between the equipment and receiver.  
 • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 • Consult the dealer or an experienced radio/TV technician for help.  
**FCC Radiation Exposure Statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

### 1 What's in the box

Make sure you read all the safety information before you use this product.

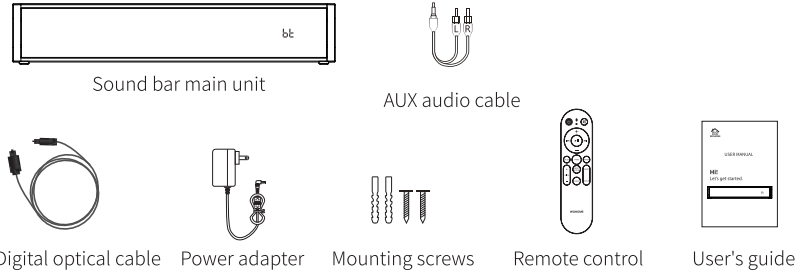

### 2 Overview

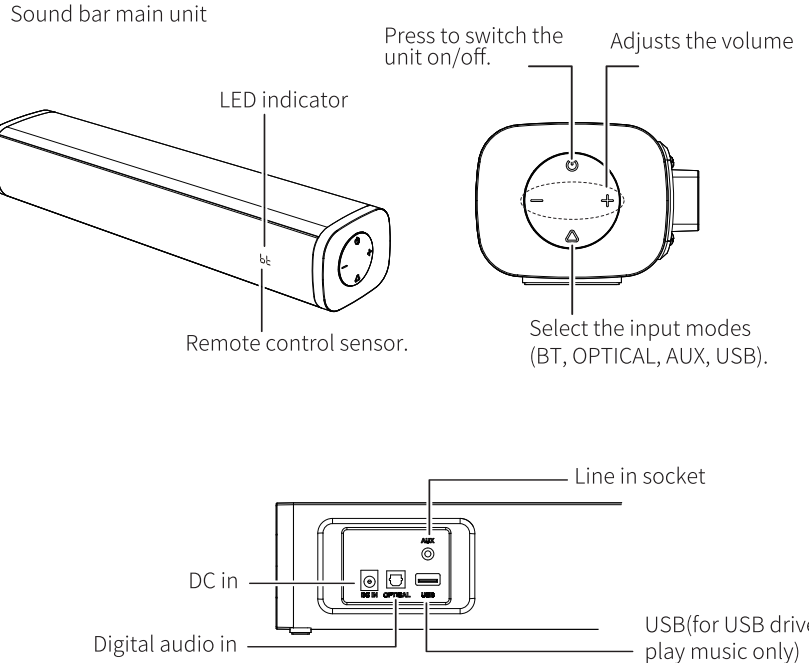 

Press to switch the unit on/off.

Adjusts the volume

Select the input modes (BT, OPTICAL, AUX, USB).

\* Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.


### 3 Sound Bar LED Indicator

 The LED indicator on the sound bar gives you information about the status of the sound bar.

--	Standby Mode	0-32	Volume 0-32
OPT	Optical Mode	EQ 1	Music Mode
USB	USB Mode	EQ 2	News Mode
AUX	AUX Mode	EQ 3	Movie Mode
bt	BT Mode	UD-6	Voice Value 0-6

### 4 Install or replace the remote batteries

Battery type: 1.5V AAA Alkaline battery x 2 (Battery not supplied, please use yours)

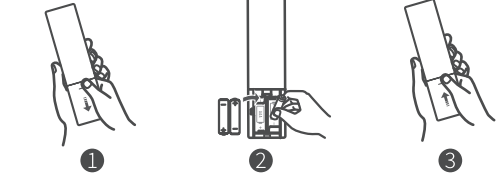

### 5 Using the Remote

Button	Function	Button	Function	Button	Function
Power on/off (Short Press)	Power on/off (Short Press)	Mute/recover the volume	Mute/recover the volume	Volume turning up	Volume turning up
Volume turning down	Volume turning down	Previous Track	Previous Track	Next Track	Next Track
Play/Pause	Play/Pause	Shifting into Music mode	Shifting into Music mode	Shifting into News mode	Shifting into News mode
Shifting into Movie mode	Shifting into Movie mode	Voice volume turning up	Voice volume turning up	Voice volume turning down	Voice volume turning down
Sound restores to default Settings	Sound restores to default Settings	Switch between OPT/ BT/USB/AUX	Switch between OPT/ BT/USB/AUX	Toggle volume to low volume with one button	Toggle volume to low volume with one button
Turn on/off LED display	Turn on/off LED display				

### 6 Using & Connect to your TV

 
#### 6a Optical

Step 1, Turn off the sound bar and TV, connected the sound bar to the TV through the optical cable. **(Remove the white cover on cable).**

Step 2, Turn on the sound bar, press the "INPUT" on the sound bar remote, then select the input mode "OPT" which is shows on the LED display.

Step 3, Turn on the TV, press the home on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** or turn off **TV speaker**, save the **setting**, then back to **audio** (sound setting) → select **expert setting** → **digital audio output** (or optical output) → select **PCM** (some TV called **SPDIF** or **optical**), Save the **setting**.

Step 4, Play TV show to test the sound bar.

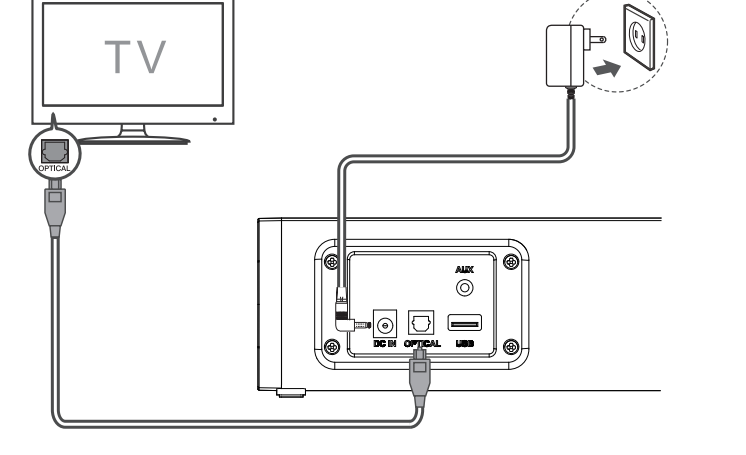

**Kindly Note:** for optical connection, please change TV audio output to PCM (or SPDIF and optical) and external speaker, otherwise you will get cracking noise or no sound.

TV Brand	Setting Steps
Roku Stick	① Setting → Audio → Digital Output Format → Select Stereo. ② Setting → Audio → Audio Mode → Select Stereo.
Fire Stick	① Settings → Display & Sounds → Audio → Surround Sound → PCM.
Samsung	① Setting → Sound → Sound Output → Turn off TV Speaker or select External Speakers. ② Setting → Sound → Expert Setting → Digital Output Audio Format → PCM.
Vizio	① Setting → Audio → TV Speakers → OFF. ② Setting → Audio → Digital Audio Out → PCM.
Sony	① Setting → Display & Sounds → Audio Output → Speakers → Audio System. ② Setting → Display & Sounds → Audio Output → Digital Audio Out → PCM. ③ Setting → Display & Sounds → Audio Output → Pass Through Mode → OFF.
LG	① All Setting → Sound → TV Speakers → OFF or select External Speakers. ② All Setting → Sound → Advance Settings → Digital Sound Output → PCM.
TCL Rock	① Setting → Audio → Audio Out → Auto. ② Setting → Audio → Digital Audio Format → Select Stereo.
TCL (Android system)	① TV Setting → Audio → TV Speakers → OFF or select External Speakers. ② TV Setting → Audio → Advance Setting → Digital Audio Out → Select PCM. ③ TV Setting → System → T-Link → Select ON.
Hisense Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Out → Select Stereo.
ONN Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Format → Select Stereo.
Sharp	① TV Setting → Sound → Advance Audio Setting → Digital Audio Out → Select PCM. ② TV Setting → Sound → Advance Audio Setting → TV Speakers → Select OFF or select External Speakers.
Sharp (Android system)	① Setting → Devices Preferences → Sound → Digital Output → Select PCM. ② Setting → Devices Preferences → Sound → Speakers → Select External Audio System.
Insignia Fire & Toshiba Fire	① TV Settings → Display & Sounds → Audio Output → TV speakers → Select OFF. ② TV Settings → Display & Sounds → Audio Output → Digital Audio Format → Select PCM.
Panasonic	① Menu → Audio Settings → Advance Audio → TV speakers → Select OFF. ② Menu → Audio Settings → Advance Audio → Digital Audio Out → Select PCM.

**Kindly Note:** TV settings may differ according to TV models difference, if the listed method can not work, or your TV is not listed, please contact us via service mail: [support@wohomeshop.com](mailto:support@wohomeshop.com), or contact the TV manufacturer for help, thank you!


### 6b AUX

 Step 1, Choose line in cable (3.5mm to 3.5mm) or RCA cable connect the soundbar to your TV.

Step 2, Turn on the sound bar, press the "INPUT" on the sound bar remote, then select the input mode "AUX" which is shows on the LED display.

Step 3, Turn on the TV, press the **home** (or menu) on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** (turn off TV speaker), save the **setting**. (For some TVs, please back to **audio(sound)** → select **analog output** → select the **Variable**, save the setting).

Step 4, Play TV show to test the sound bar.

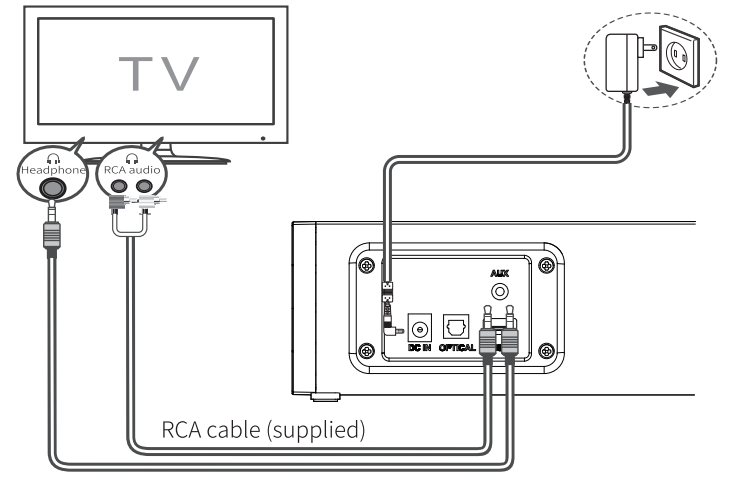


3.5mm to 3.5mm cable (not supplied)

### 6c BT

 The BT connection

- Press the "INPUT" on the sound bar remote, then select the input mode "BT" which is shows on the LED display, the "BT" will be flash.
- Turn on BT on the BT device. (see the device's manual for more information)
- Select **"Soundbar S100"** from the device BT list, connect it. When your BT device is connected, the LED display will stop flash.
- Play music files from the connected device via BT, through the Soundbar.

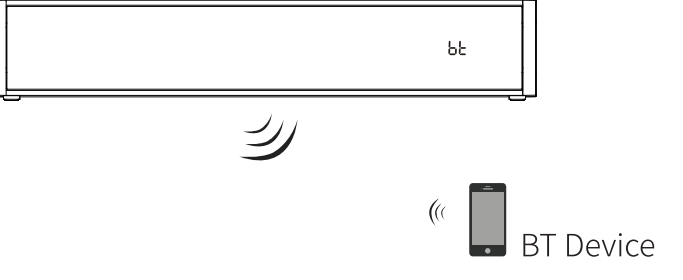

\* You cannot connect more than one BT device at a time.


\* If your device requests a password, enters the default "0000".

\* Only work with the device which can output BT signal, it can not work with some devices can not output BT signal such as headphones.

\* Disconnect the Bluetooth connection when the connection fails or **"Soundbar S100"** cannot be found in the device list.

### 6d USB

 - Connect your USB drive to the USB jack on the soundbar.
- Press the "INPUT" on the sound bar remote, then select the input mode "USB" which is shows on the LED display.
- Play music to test.

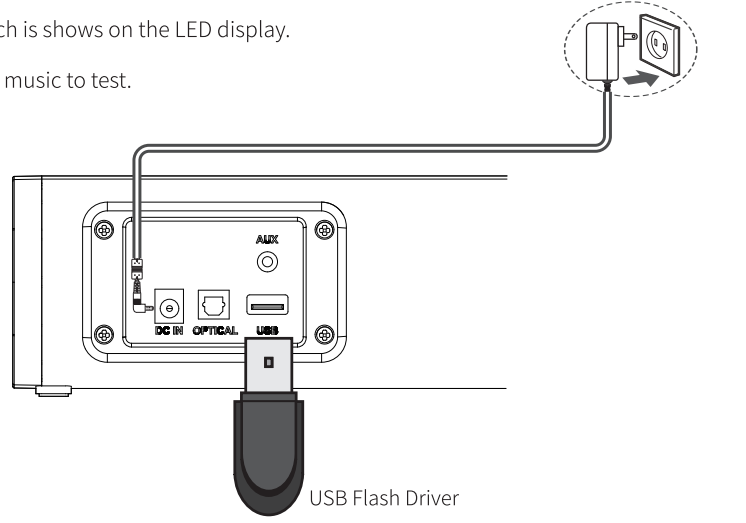

Kindly Note: only for USB flash drive to play MP3 music and update firmware, can not compatible with other usb devices.

### 7 Specifications

Model	S100
Power Supply	DC15V
Driver	2.25" x3
Volume Level	0-32
BT Version	5.0
Distortion	<1%
Product Weight	2.73lb
Product Dimension	15.93(L) x 3.54(D) x 2.87(H) inch

### 8 FAQ and trouble shooting

**Q1, Cracking or popping sound or Static sound when optical connection:**  
**Answer:** press the home (or menu) on the TV remote, go to TV setting → audio (sound) → TV speaker → select external speaker (turn off TV speaker), save the setting, then back to audio (sound setting) → select expert setting → digital audio output (or optical output) → select PCM (some TV called SPDIF or optical), Save the setting, then try again. More detail refer page 6, or your TV manual.


**Q2, Cracking noise or static sound when see a video from Youtube, Netflix, HBO, Amazon Prime or other streaming video APPS:**  
**Answer:** please disable the Dolby and DTS on your APPS or TVs, if you do not know how to set, please contact the APPS support or us for help.

**Q3, Sound is not synced with the picture.**  
**Answer:** please press the menu or home button on the TV remote go to the TV setting → sound (audio) → select sound (audio) delay → adjust the delay time to try, this will fix the issue.

**Q4, Why soundbar is very weak?**  
**Answer:** Please kindly note the max volume of this soundbar is very loud, there are several Answers that you can try to fix the problem:  
 1, Please make sure your sound source volume is high, if the sound source is in low volume, you will not get loud sound, so we suggest you adjust the TV and APPS volume to max.  
 2, Adjust the soundbar volume to max to test again  
 3, Please kindly use your phone to connect the soundbar through to play the music to test the sound.  
 4, Please unplug and plug the adapter to restart the soundbar to test again.  
 5, Disable the hearing protection setting on your devices such as phone, tablet, TV.

**Q5, Why sound quality is poor?**  
**Answer:** please kindly note the soundbar we offered is entry-level, for small rooms not for Audiophile, can not be compared to the soundbar priced at \$200 or above. If the sound quality is very poor, you may receive the defective unit, please contact us, we will guide you to update the firmware to fix the issue.

**Q6, May I connect the sound bar to Amazon Echo?**  
**Answer:** Sure, you can connect this soundbar to your Amazon Echo through BT connection, please scan below QR code to find the connect method  
**Kindly note:** except the BT, you also can use the aux cable to connect the soundbar to your Amazon echo dot. (Please note BT connection only for music play, the soundbar DOES NOT have the built-in Alexa)



**Q7, soundbar can not turn on.**  
**Answer:** Please use the attached adapter to connect the speaker to the socket, wait about 3 seconds, the speaker indicator will show white light, press the on/off button on the remote control to turn on the speaker. If the speaker does not show white light, please check whether the adapter indicator light can be on. If not, it means that the adapter is dead, please contact us and we will replace a new adapter for you free of charge.

**Q8, May I connect the soundbar to a headphones?**  
**Answer:** please note both headphones and soundbar only can receive the audio signal, can not output, so you can not connect the soundbar to headphones to play music.

**Q9, How can I use the TV remote, universal remote, or cable remote to control the volume?**  
**Answer:** Sound bar can not support TV remote or universal remote, but here is a solution: please kindly use aux cable connect the sound bar to your TV headphones jack or RCA jack, then you can use your TV remote or cable remote to control the volume, more detail, please refer the AUX cable connection guide on the quick start card, please kindly try.

Kindly note: when you contact us, please kindly provide your Amazon order ID, model number, address, and exact issue with us.

For more information, please follow us:  
 Web: [www.wohomeshop.com](http://www.wohomeshop.com)  
 Email: [support@wohomeshop.com](mailto:support@wohomeshop.com)

NOTE: One year warranty, 45 days money back guarantee, lifetime technical support, 100% satisfaction service, please feel free to contact us for any questions.