


S111说明书  
尺寸: 120mm x 170mm  
80g书写纸, 黑白印刷, 折页, 双面印  
料号: 416-D33L091-W00R

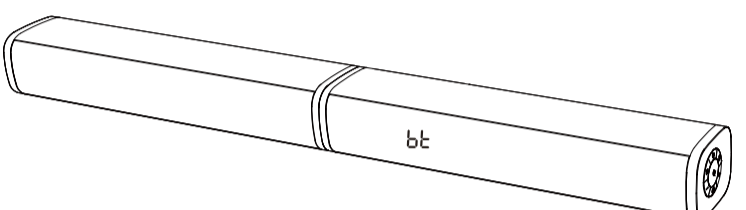


## USER MANUAL

# Hi!

### Let's get started.



Model: S111

Scan the code to visit our youtube channel

Scan the code to find soundbar setup instructions according to your TV brand

Scan the code and fill in the contact form to contact us quickly for any issues

### Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Read all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not use the apparatus on a surface that could become excessively hot.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Special note:** When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

**Additional Warnings:**  
The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
L'appareil ne doit pas être exposé aux éclaboussures ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.


Caution marking is located at the rear or bottom of the apparatus.  
Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.  
The marking information is located at the rear or bottom of apparatus. Le marquage est situé sur le panneau arrière ou inférieur de l'unité.

**FCC Warnings**  
WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.  
FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.  
FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

### 1 What's in the box

Make sure you read all the safety information before you use this product.

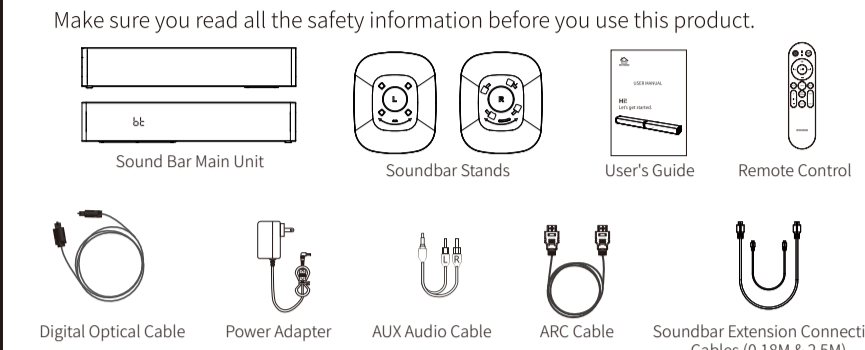


### 2 Overview

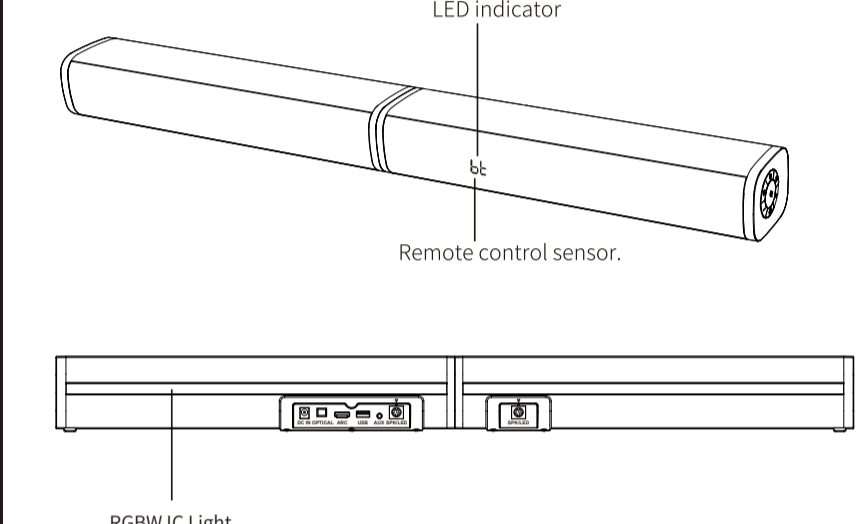

### 3 Installation

#### A. Install the Host

##### 1. Table Placement

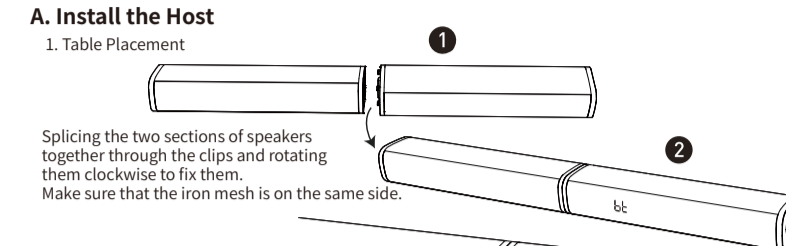


Splicing the two sections of speakers together through the clips and rotating them clockwise to fit them. Make sure that the iron mesh is on the same side.

Connect the left and right sound bar via the short connection cable.

**To ensure sound effects, place the soundbar on a solid surface.**

##### 3. Split Audio Tower

Install the left and right bases to the corresponding bases. Please pay attention to distinguish the left and right bases. Connect the left to the right speaker via the long connection cable.

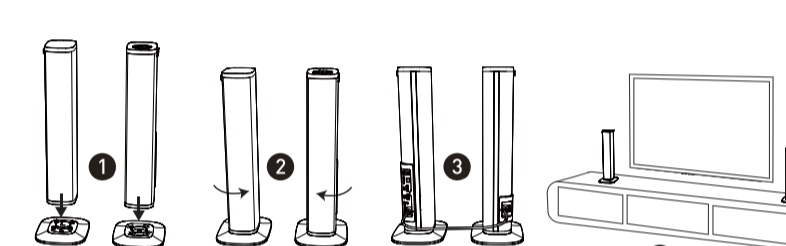


### 4 Sound Bar LED Indicator

The LED indicator on the sound bar gives you information about the status of the sound bar.


--	Standby Mode	0-32	Volume 0-32
Opt	Optical Input	09 1	Music Mode
USB	USB Input	09 2	News Mode
AUX	AUX Input	09 3	Movie Mode
bt	BT Input	00-6	Voice Intensity 0-6

### 5 Install or replace the remote batteries

Battery type: 1.5V AAA Alkaline battery x 2 (Battery not supplied, please use yours)

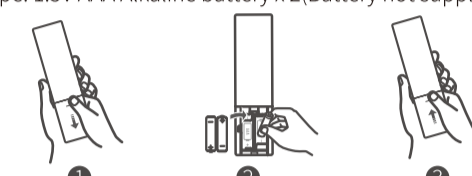

### 6 Using the Remote

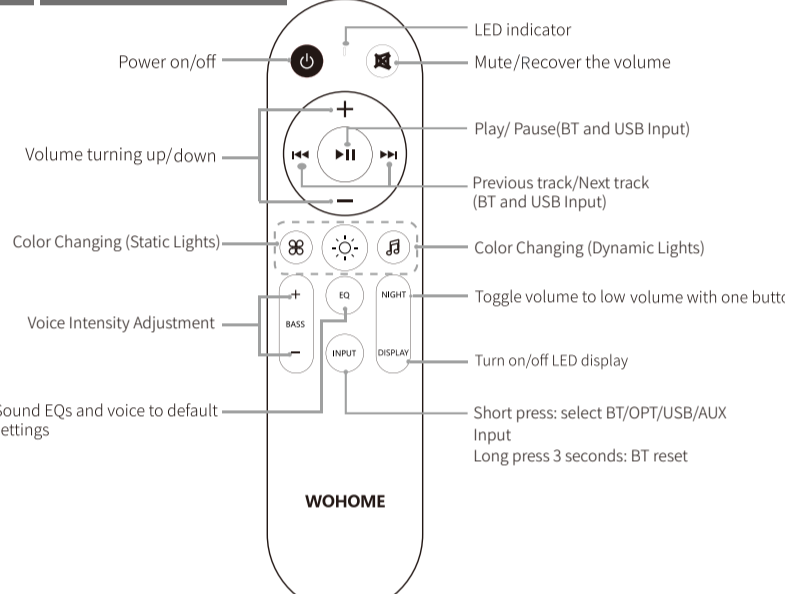

### 7 Using & Connect to your TV


#### 7a Optical

Step 1, Turn off the sound bar and TV, connected the sound bar to the TV through the optical cable. **(Remove the white cover on cable).**

Step 2, Turn on the sound bar, press the "INPUT" on the sound bar remote, then select the input mode "OPT" which is shown on the LED display.

Step 3, Turn on the TV, press the home on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** or turn off **TV speaker**, save the **setting**, then back to **audio** (sound setting) → select **expert setting** → **digital audio output** (or optical output) → select **PCM** (some TV called **SPDIF** or **optical**). Save the **setting**.

Step 4, Play TV show to test the sound bar.

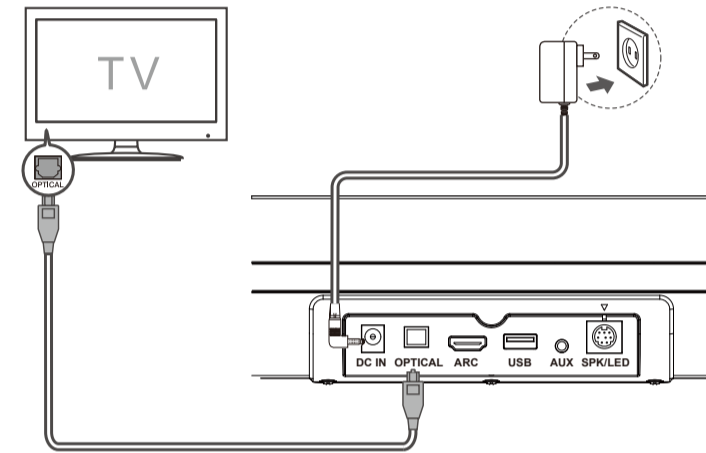

**Kindly Note:** for optical connection, please change TV audio output to PCM or SPDIF and optical) and external speaker, otherwise you will get cracking noise or no sound.

TV Brand	Setting Steps
Roku Stick	① Setting → Audio → Digital Output Format → Select Stereo. ② Setting → Audio → Audio Mode → Select Stereo.
Fire Stick	① Settings → Display & Sounds → Audio → Surround Sound → PCM. ② Setting → Sound → Sound Output → Turn off TV Speaker or select External Speakers. ③ Setting → Sound → Expert Setting → Digital Output Audio Format → PCM.
Samsung	① Setting → Audio → TV Speakers → OFF. ② Setting → Audio → Digital Audio Format → PCM.
Vizio	① Setting → Display & Sounds → Audio Output → Speakers → Audio System. ② Setting → Display & Sounds → Audio Output → Digital Audio Out → PCM. ③ Setting → Display & Sounds → Audio Output → Pass Through Mode → OFF.
Sony	① All Setting → Sound → TV Speakers → OFF or select External Speakers. ② All Setting → Sound → Advance Settings → Digital Sound Output → PCM.
LG	① All Setting → Sound → TV Speakers → OFF or select External Speakers. ② All Setting → Sound → Advance Settings → Digital Sound Output → PCM.
TCL Rock	① Setting → Audio → Audio Out → Auto. ② Setting → Audio → Digital Audio Format → Select Stereo.
TCL (Android system)	① TV Setting → Audio → TV Speakers → OFF or select External Speakers. ② TV Setting → Audio → Advance Setting → Digital Audio Out → Select PCM. ③ TV Setting → System → T-Link → Select ON.
Hisense Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Out → Select Stereo.
OMN Roku	① Setting → Audio → TV Speakers → Select Disabled. ② Setting → Audio → Digital Audio Format → Select Stereo.
Sharp	① TV Setting → Sound → Advance Audio Setting → Digital Audio Out → Select PCM. ② TV Setting → Sound → Advance Audio Setting → TV Speakers → Select OFF or select External Speakers.
Sharp (Android system)	① Setting → Devices Preferences → Sound → Digital Output → Select PCM. ② Setting → Devices Preferences → Sound → Speakers → Select External Audio System.
Insignia Fire & Toshiba Fire	① TV Settings → Display & Sounds → Audio Output → TV speakers → Select OFF. ② TV Settings → Display & Sounds → Audio Output → Digital Audio Format → Select PCM.
Panasonic	① Menu → Audio Settings → Advance Audio → TV speakers → Select OFF. ② Menu → Audio Settings → Advance Audio → Digital Audio Out → Select PCM.


**Kindly Note:** TV settings may differ according to TV models difference, if the listed method can not work, or your TV is not listed, please contact us via service mail: support@wohomeshop.com, or contact the TV manufacturer for help, thank you!

### 7b ARC

**TV-ARC**

- Connect the Sound Bar with your TV through an ARC cable.
- Select "ARC" on LED screen by pressing the "INPUT" button on the remote.
- Play TV show to test the soundbar.

**Note:** If no sound or cracking noise, please set the TV audio output to external speaker (refer to 08), saving the setting. Then back to audio (sound setting) → select expert setting → digital audio output → select TV-ARC (per some TV, please choose CEC, then activate the ARC), save the setting.

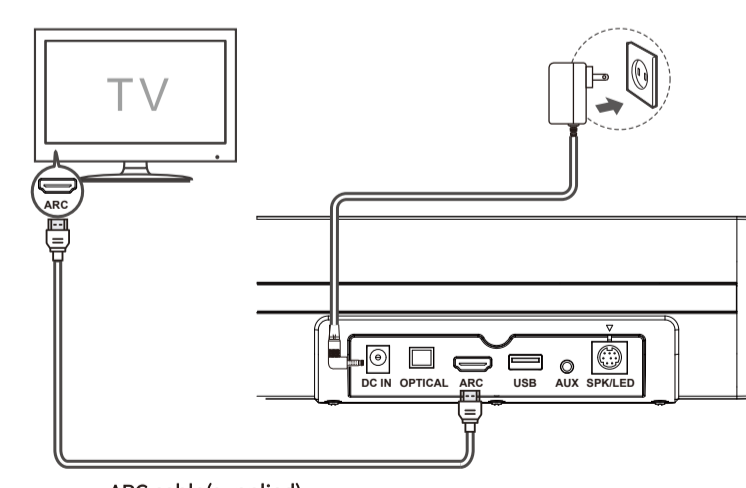

ARC cable (supplied)


### 7c AUX

Step 1, Choose line in cable (3.5mm to 3.5mm) or RCA cable connect the soundbar to your TV.

Step 2, Turn on the sound bar, press the "INPUT" on the sound bar remote, then select the input mode "AUX" which is shown on the LED display.

Step 3, Turn on the TV, press the **home** (or menu) on the TV remote, go to **TV setting** → **audio(sound)** → **TV speaker** → select **external speaker** (turn off TV speaker), save the **setting**. For some TVs, please back to **audio(sound)** → select **analog output** → select the **Variable**, save the setting).

Step 4, Play TV show to test the sound bar.

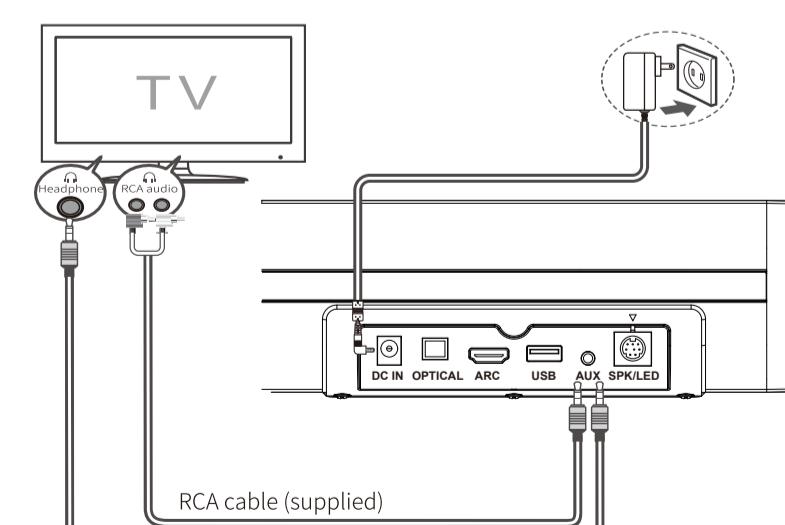


3.5mm to 3.5mm cable (not supplied)

### 7d BT

The BT connection

- Press the "INPUT" on the sound bar remote, then select the input mode "BT" which is shown on the LED display, the "BT" will be flash.
- Turn on BT on the BT device. (see the device's manual for more information)
- Select **"Soundbar S111"** from the device BT list, connect it. When your BT device is connected, the LED display will stop flash.
- Play music from the BT device to test the sound bar.

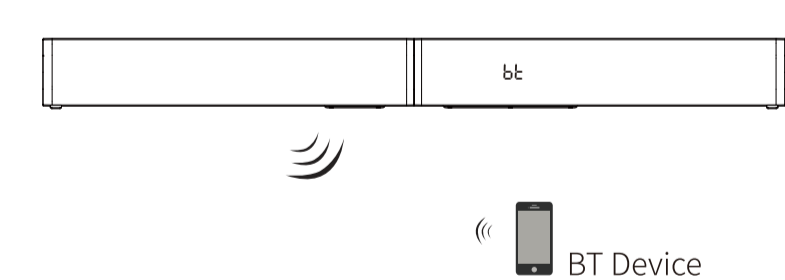


BT Device

\* You cannot connect more than one BT device at a time.  
\* If your device requests a password, enters the default "0000".  
\* Only work with the device which can output BT signal, it can not work with some devices can not output BT signal such as headphones.  
\* Long Press "INPUT" on the remote or "BT" on the sound bar for 3 seconds to reset the BT, when the connection fails or "Soundbar S111" cannot be found in the device list.

### 7e USB

- Connect your USB drive to the USB jack on the soundbar.
- Press the "INPUT" on the sound bar remote, then select the input mode "USB" which is shown on the LED display.
- Play music to test.

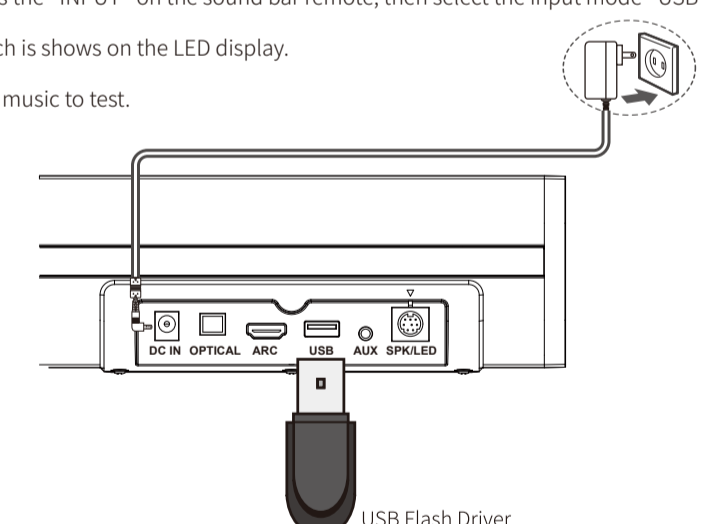

USB Flash Driver

**Kindly Note:** only for USB flash drive to play MP3 music and update firmware, can not compatible with other usb devices.

### 8 Specifications

Model	S111
Power Supply	DC18V
Speaker	2.25" x4
Volume Level	0-32
BT Version	5.0
Distortion	<1%
Product Weight	2.75lb
Product Dimension	31.69(L) x 3.54(D) x 2.87(H) inch

### 9

**Light on/off Button:** short press: light on (Bright) → low light → light off

**Color Change Button:** short press: white light → purple light → blue light → yellow light → pink light → colorful breathing light → colorful flow light

**Dynamic Light Button:** short press: dynamic light on/off; the brightness of the light changes with the rhythm of the music, bringing you an immersive effect. (Dynamic light button need to work with color change button, you can select different color to fluctuate)

**Kindly Remind:**  
\* Solid color static light as background light can protect your eyes when you watch TV programs.  
\* Dynamic light especially suitable for parties and bars, the combination of music and lighting brings a wonderful experience.

### 10 FAQ and trouble shooting

**Q1, Cracking or popping sound or Static sound when optical connection:**  
**Answer:** Press the home (or menu) on the TV remote, go to TV setting → audio (sound) → TV speaker → select external speaker (turn off TV speaker), save the setting, then back to audio (sound setting) → select expert setting → digital audio output (or optical output) → select PCM (some TV called SPDIF or optical). Save the setting, then try again. More detail, refer page 7, or your TV manual.

**Q2, Cracking noise or static sound when see a video from Youtube, Netflix, HBO, Amazon Prime or other streaming video APPs:**  
**Answer:** Please disable the Dolby and DTS on your APPs or TVs, if you do not know how to set, please contact the APPs support or us for help.

**Q3, Sound is not synced with the picture.**  
**Answer:** Please press the menu or home button on the TV remote go to the TV setting → sound (audio) → select sound (audio) delay → adjust the delay time to try, this will fix the issue.

**Q4, Why soundbar is very weak?**  
**Answer:** Please kindly note the max volume of this soundbar is very loud, there are several Answers that you can try to fix the problem:  
1, Please make sure your sound source volume is high, if the sound source is in low volume, you will not get loud sound, so we suggest you adjust the TV and APPs volume to max.  
2, Adjust the soundbar volume to max to test again  
3, Please kindly use your phone to connect the soundbar through to play the music to test the sound.  
4, Please unplug and plug the adapter to restart the soundbar to test again.  
5, Disable the hearing protection setting on your devices such as phone, tablet, TV.

**Q5, Why sound quality is poor?**  
**Answer:** Please kindly note the soundbar we offered is entry-level, for small rooms not for Audiophile, can not be compared to the soundbar priced at \$200 or above. If the sound quality is very poor, you may receive the defective unit, please contact us, we will guide you to update the firmware to fix the issue.

**Q6, May I connect the sound bar to Amazon Echo?**  
**Answer:** Sure, you can connect this soundbar to your Amazon Echo through BT connection, please scan below QR code to find the connect method  
**Kindly Note:** Except the BT, you can also use the aux cable to connect the soundbar to your Amazon echo dot. (Please note BT connection only for music play, the soundbar DOES NOT have the built-in Alexa)

**Q7, Soundbar can not turn on.**  
**Answer:** Please use the attached adapter to connect the speaker to the socket, wait about 3 seconds, the LED display will show "--", press the "POWER" button on the remote to turn on the speaker. If the LED display does not show "--", it means that the adapter is dead, please contact us and we will send a new adapter to you soon.

**Q8, May I connect the soundbar to a headphones?**  
**Answer:** Please note both headphones and soundbar can only receive the audio signal, can not output, so you can not connect the soundbar to headphones to play music.

For more information, please follow us:  
Web: www.wohomeshop.com  
Email: support@wohomeshop.com

NOTE: One year warranty, 45 days money back guarantee, lifetime technical support, 100% satisfaction service, please feel free to contact us for any questions.