

8

social media

for use with
Switch®
Switch Online/PC

Be sure to follow us for the latest news and product releases.

-  retrofighters
-  retrofightersco
-  retro.fighters
-  retrofighters

Tag #retrofighters for a chance to be featured on our social media!

RETRO® FIGHTERS

brawler64


wireless gamepad

Quick Start Instruction Manual



1

2

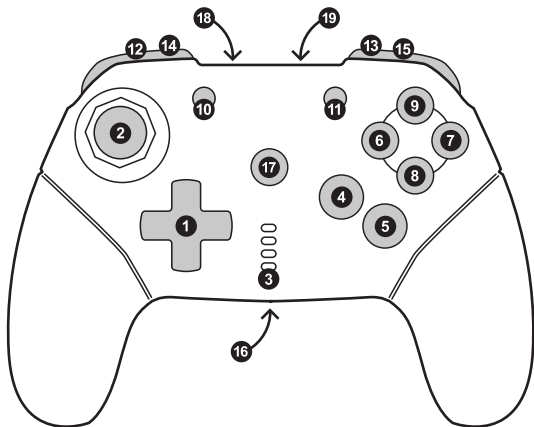

- | | | |
|-----------------|-----------------------|----------------------------|
| 1 D-Pad | 8 C Down | 15 Z Button (Right) |
| 2 Analog Stick | 9 C Up | 16 Pairing Button (Back) |
| 3 LED Indicator | 10 "-" Button | 17 Home Button |
| 4 B Button | 11 "+" Button (Start) | 18 Screen Shot (Top L) |
| 5 A Button | 12 L Shoulder Button | 19 Swapping Button (Top R) |
| 6 C Left | 13 R Shoulder Button | |
| 7 C Right | 14 Z Button (Left) | |

notes

7

6

customer service

We strive to make our fellow gamers happy. If you experience any issues with this product please contact us directly. We are here to help and we will make it right! You can send us an email at: support@retrofighters.com

how to pair

1. Make sure that "Pro Wired Communication" is turned "OFF" in system settings.
2. Press the back pairing button for at least 3 seconds until LEDs flash quickly.
3. Switch will connect to the gamepad automatically.

powering off

Press back button to turn off your gamepad.

Xinput to Dinput mode

Gamepad defaults to Xinput mode, to switch between modes press "-" and "START" for 3 seconds

gamepad reset

Press and hold the "HOME" button lasting at least 10 seconds to reset the gamepad.

3

4

Vibration Motor power adjustment

To INCREASE the rumble power press "+" and analog stick UP to increase
To DECREASE the rumble power press "-" and analog stick DOWN to decrease
Range: 0%-30%-70%-100%

LED indicators

- | | | | |
|---------------|---------------|------------|------------|
| ● Player 1 | ● Player 2 | ● Player 3 | ● Player 4 |
| ● | ● | ● | ● |
| ● | ● | ● | ● |
| ● | ● | ● | ● |
| ● | ● | ● | ● |
| ● Dinput Mode | ● Xinput Mode | | |
| ● | ● | | |

FAQs

How do I charge?
Use the provided USB-C cable with a USB compatible charging block (not included). Once charging the LED light on the controller will continuously blink indicating it is currently charging. Once the controller is fully charged it will stop blinking. This process takes approximately 2.5 hours on low / empty battery.

How long is the battery life?
Approximately 10 hours before you need to recharge.

What systems are compatible?
The gamepad is compatible with Switch and PC.

What is the default button layout?
The default button layout is the button layout for NSO. To switch to "Pro Controller" layout simply press the Swap button.

How do I make it work on PC?
Connect your USB-C cable directly to your PC, it connects via wired connection.

How do I awaken my Switch system?
Simply press the Home button to awaken your Switch system and reconnect.

5

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements, the device can be used in portable exposure conditions without restriction