
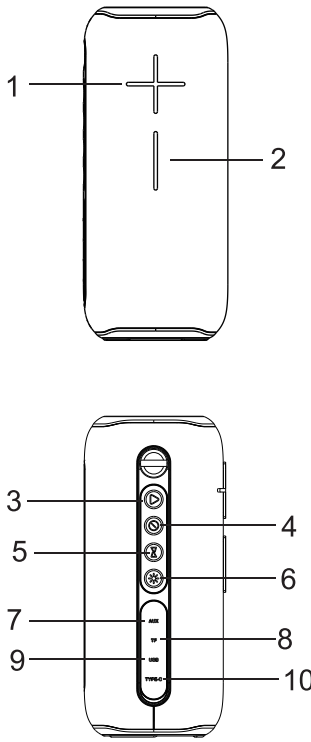



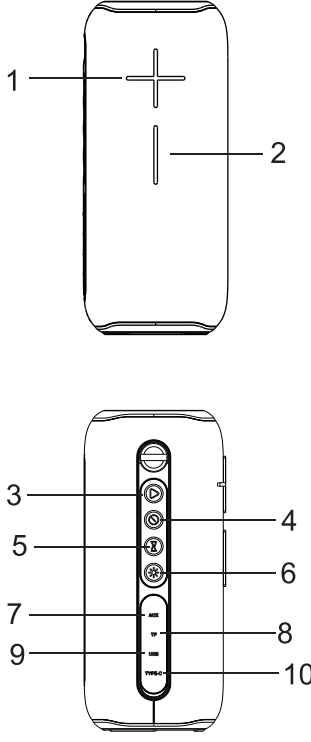
SPEAKER M20S Pro说明书

成品尺寸: 122.5x70mm

材质工艺: 128g双铜, 单张双面四色印刷, 风琴折

 <p>SPEAKER - M20S Pro 便携式蓝牙音箱</p>	<p>技术规格:</p> <p>蓝牙版本: 5.0 传输距离: 10米 输出功率: 10W*2 频率效应: 80Hz-15Khz 扬声器: 66mm 4Ω, 10W*2 输入电源: 5V --- 1A 最大电流消耗: 1A 电池类型: 18650 锂离子电池 3000mAh 音频信号输入接口: 标准Φ3.5mm耳机插孔(立体声)</p> <p>特点:</p> <ol style="list-style-type: none"> 1. 无线连接 2. 记忆功能, 断点续播 3. 支持U盘/TF卡/AUX播放模式 4. 内置锂离子电池 5. 支持MP3 6. 使用高保真的扬声器, 发出声音更自然和细腻 7. 6级防水 8. 1+1 设备串连功能 9. 支持收音机功能 	<p>无线扬声器 - M20S Pro</p>  <p>M20S Pro按键指示剖面图</p>	<p>按键说明:</p> <ol style="list-style-type: none"> 1. 按键+ 单击: 音量加 长按: 下一曲 2. 按键- 单击: 音量减 长按: 上一曲 3. 暂停/播放键 单击: 播放/暂停 长按: 退出/回连蓝牙连接 蓝牙模式下双击为回拨电话; 单击: 接听/挂断 来电情况下长按2秒为拒接电话 在收音机模式下 单击: 静音 长按: 收台 4. 开关按键 长按开关机 约3秒/次 5. 串联键 单击: 串联/退出串联 长按: 转换模式 6. 灯光按键 单击: 转换灯光模式 长按: 开/关灯 7. AUX 插孔 标准Φ3.5mm耳机插孔 8. TF插孔 插入TF卡时, 默认为TF卡播放模式 9. USB插孔 插入U盘时, 默认为USB播放模式 10. Type-C 插孔 1. 充电线接口, 插入Type-C充电线时, 默认为设备充电 	<p>无线扬声器 - M20S Pro</p> <p>使用说明:</p> <ol style="list-style-type: none"> 2. 使用收音机功能时, 需插入充电线, 作为收音天线, 收音机功能才能正常使用 1. 无线配对 <ol style="list-style-type: none"> 1.1. 使用无线配对前, 首先打开音频电源, 它已经是默认的无线模式。 1.2. 打开无线设备, 搜索M20S Pro, 连接配对, 连接成功后, 开始播放音乐体验。 2. 适用于各种手机配件无线技术, 无线适配器, 无线播放器。 3. 语音提示 <ol style="list-style-type: none"> 3.1. 开/关机有语音提示音; 3.2. 音量加到最大音量有语音提示, 最小音量无语音提示。 3.3 检测到3.4V低电提示3次后关机; 4. 模式切换 <ol style="list-style-type: none"> 4.1. 开机默认进入无线模式, 模式切换顺序: 无线模式-FM模式-TF卡模式-U盘模式-AUX模式 4.2. 模式: 后插优先。 5. 播放指示灯 无线搜索状态: 白灯快闪, 约0.5秒/次; 无线配对状态: 白灯常亮 播放状态: 白灯灯慢闪约1秒/次; 6. 充电指示灯 充电红灯常亮 充满灭 7. 音量 开机默认音箱70%音量。 即可完成充电。每个电池的播放时间会因使用不同大小的音量而有所不同。 9. 无工作状态, 15分钟后自动关机。 <p>故障排除:</p> <ol style="list-style-type: none"> 1. 自动关机: 电池电量不足时会自动开启电池保护, 请充电4小时后使用。 2. 无法播放音乐: 音乐文件存储路径不能被播放器识别, 音乐文件请存储在可移动设备的根目录下。 3. 连接电脑无声: 电脑界面连接错误, 请选择正确的音频输出口 4. 按键无反应或功能错乱: 关机后重试。 5. 当机器出现异常情况时, 可用细长圆棒, 按压AUX后面孔内的复位键复位
	<p>使用指南</p>			

正面

 <p>SPEAKER - M20S Pro Portable Bluetooth Speaker</p>	<p>Technical Specifications:</p> <p>Bluetooth version: 5.0 Transmission distance: 10 meters Output power: 10W*2 Frequency effect: 80Hz-15Khz Frequency effect: 66mm 4Ω 10W*2 Input power: 5V --- 1A Maximum current consumption: 1A Battery type: 18650 lithium ion battery 3000mAh Audio signal input interface: standard Φ3.5mm headphone jack (stereo)</p> <p>Features:</p> <ol style="list-style-type: none"> 1. Wireless connection 2. Memory function, breakpoint resuming 3. Support U disk / TF card / AUX playback mode 4. Built-in lithium ion battery 5. Support MP3 6. Using high-fidelity speakers, the sound is more natural and delicate 7. Level 6 waterproof 8. 1+1 device serial connection function 9. Support radio function 	<p>Wireless speaker - M20S Pro</p>  <p>M20S Pro button indication section view</p>	<p>Button instruction:</p> <ol style="list-style-type: none"> 1. Button + Click: volume up Long press: next song 2. Buttons - Click: volume down Long press: previous song 3. Pause/Play key Click: Play/Pause Long press: Exit/Reconnect to the Bluetooth connection Double-click in Bluetooth mode to call back; single-click: answer/hang up In case of incoming call, long press for 2 seconds to reject the call In radio mode single click: mute long press: close the station 4. Switch button Press and hold the switch for about 3 seconds/time 5. Tandem keys Click: Concatenation/Exit Concatenation Long press: switch mode 6. Light button Single click: switch the light mode Long press: turn the light on/off 7. AUX jack Standard Φ3.5mm headphone jack 8. TF jack When inserting a TF card, the default is TF card playback mode 9. USB jack When inserting a U disk, the default is USB playback mode 10. Type-C jack 1. The charging cable interface, when plugged into the Type-C charging cable, the default is to charge the device 2. When using the radio function, you need to insert the 	<p>charging cable as a radio antenna, and the radio function can be used normally.</p> <p>Directions for use:</p> <ol style="list-style-type: none"> 1. Wireless pairing <ol style="list-style-type: none"> 1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model. 1.2. Turn on the wireless device, search for M20S Pro, connect and pair, connect After success, start playing music experience. 2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player. 3. Voice prompt <ol style="list-style-type: none"> 3.1. There is a voice prompt when turning on/off. 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3 Shut down after detecting 3.4V low power prompt 3 times; 4. Mode switching <ol style="list-style-type: none"> 4.1. It enters the wireless mode by default when it is turned on. The sequence of mode switching is as follows: Wireless mode-TF card mode-USB mode-AUX mode. 4.2. Mode: Post-insertion priority. 5. Play indicator Wireless search status: white light flashes quickly, about 0.5 seconds/time; Wireless pairing status: white light is always on Playing status: the white light flashes slowly about 1 second/time; 6. Charging indicator Charging red light is always on, full off 7. Volume Turn on the default speaker volume at 70%. 8. Charging and using: 	<p>This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours Charging is complete. The play time of each battery will vary depending on the volume used rather different.</p> <p>9. If there is no working state, it will automatically shut down after 15 minutes.</p> <p>Troubleshooting:</p> <ol style="list-style-type: none"> 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use. 2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device. 3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port 4. There is no response to the keys or the function is disordered: try again after shutting down. 5. When the machine is abnormal, you can use a slender round bar to reset the reset button by pressing the reset button in the hole on the rear of the AUX. <p>FCC Statement:</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.This device may not cause harmful interference, and 2.This device must accept any interference received,</p>	<p>including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
	<p>OPERATING GUIDE</p>					

反面