


KIDSVIEW

Instruction

Electric baby swing

IMPORTANT! READ CAREFULLY
AND KEEP FOR FUTURE REFERENCE!

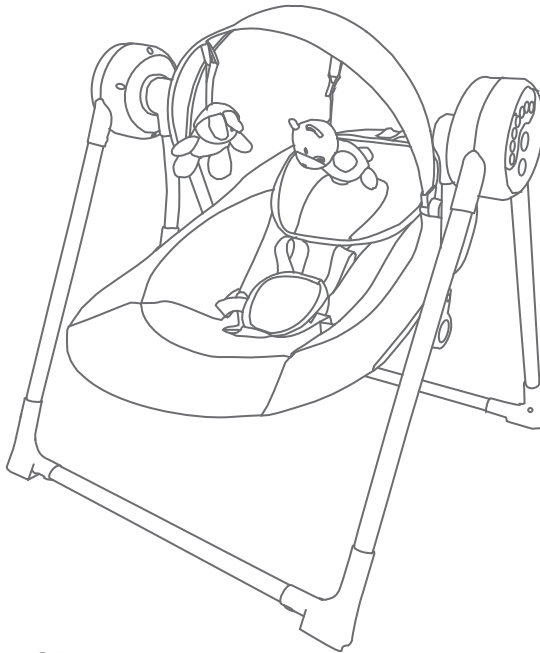

Product Model: CR001

Implementation Standards:

ASTM F2088-20, CPSC 16 CFR Part 1223, CPSC 16 CFR Part 1130
CPSIA 103 Tracking Label for Children Products.

Manufacturer name: Zhongshan City Cironbaby Co.,Ltd.

Address: No.6, Yongxing North Road, Yongxing Industrial Zone,
Henglan Town, Zhongshan City, Guangdong, China

Product summary

I、 Home page	1
II、 Instruction	2
General	2
Parts list	3
Installation details	4 ~ 7
III、 Function introduction		
Panel function	8
Remote function	8
MP3 function	9
Bluetooth function	9
Folding function	10
Fxiend function	11
IV、 Washing and Cleaning	12
V、 Attention	13

Product introduce

Product summary:

Name	Electric baby swing
Model No.	CR001
Input voltage	100-240V~ 50/60Hz 0.3A
Output voltage	DC5.8V/1A
Suited ages	0-6months
Standard	ASTM F2088-20
Production date	See on the package or product
Warning	Never use the adapter or other accessories provided by non manufacturer



Warning


- 1) Power supply terminal must not short-circuit.
- 2) Never use the adapter provided by non manufacturer, otherwise this product may be damaged.
Input voltage of adapter is,AC 100-240V~50/60HZ 0.3A, output voltage is DC5.8V/1A
- 3) Keep away from child when using the adapter.
- 4) Check the cord,plug,accessory and other parts of adapter before using the adapter in order to avoid any damages.
Adapter should be stopped using once any damages happend.

Product introduce


Product list:

No.	Name	Qty
A	Main model	1
B	Assist model	1
C	Toys bar	1
D	Seat frame	1
E	Feet tube	2


Accessories: Instruction*1pc,Adapter*1pc,Remote controller*1pc

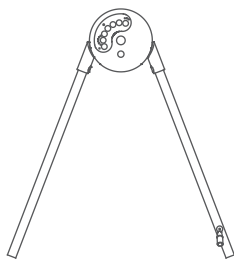

A

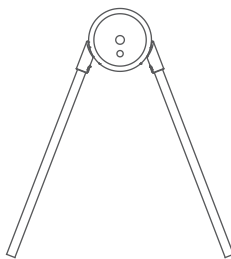

B

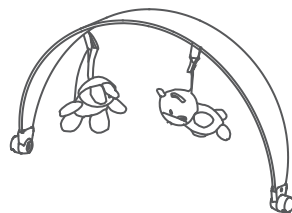

C




D




E

Product introduce


 **WARNING!** It should be installed by adult.

Installation details


- 1) Insert main model and assist model into feet tube according the picture below to make sure the shrapnel pop-up.
- 2) Match D shape of lifting arm,main model and assist model,press slightly the lifting arm with figure 2 into mainmodel, and lifting arm with figuel 1 into assist model to finish the installation.

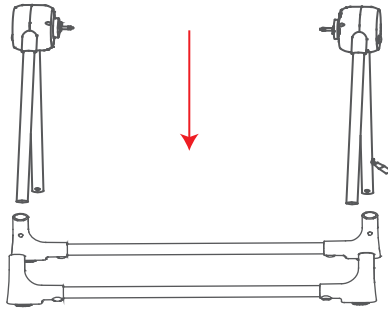

Warning: Pull out the lifting arms after finishing the installation to make sure they can be locked well then can use this product.

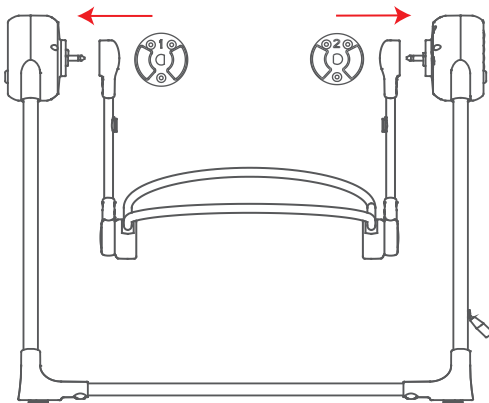


Keep the same direction of D shape and D shape shaft

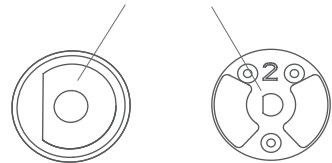


Product introduce

Seat cover installation

- 1) Folding the seat frame then assembly the folding seat cover into the seat frame and open the seat frame according the pictures below.

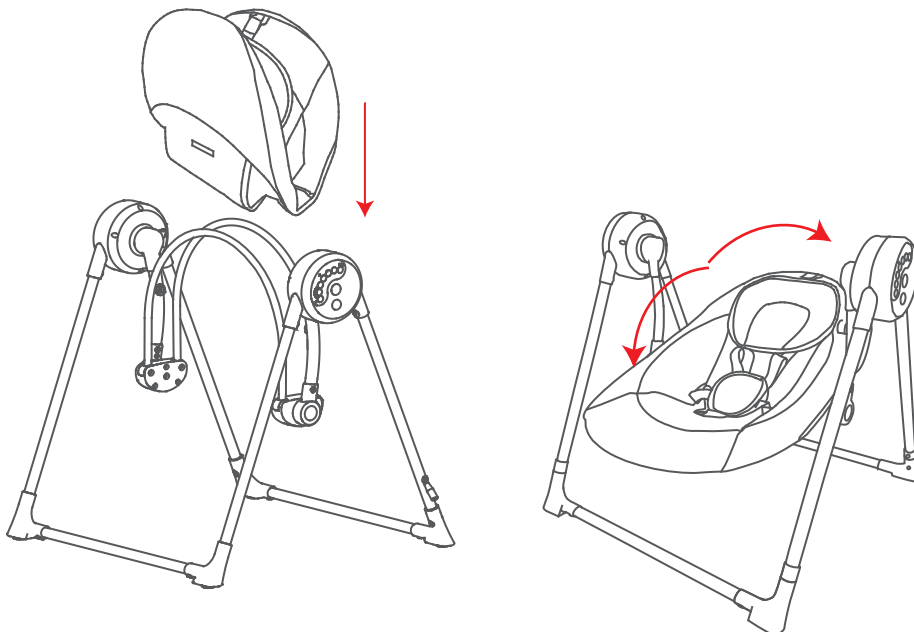


- 2) Buckle the shoulder belt well on the seat backrest, then adjust the belt length according the picture below.

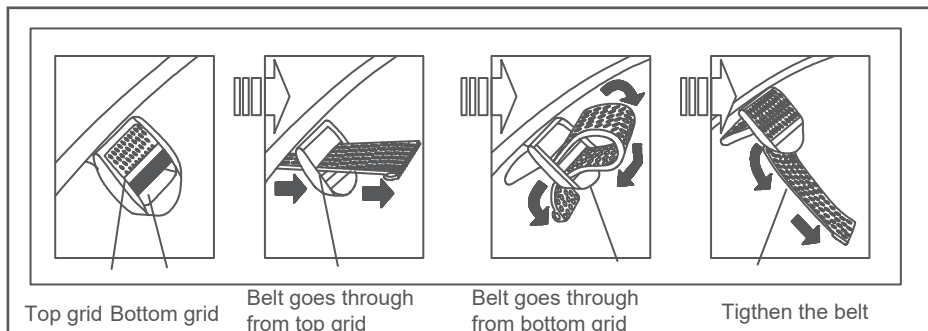

Product introduce

Toys bar installation

- 1) Insert the toys bar into the plastic base of both sides, then can rotate the toys bar in different positions.

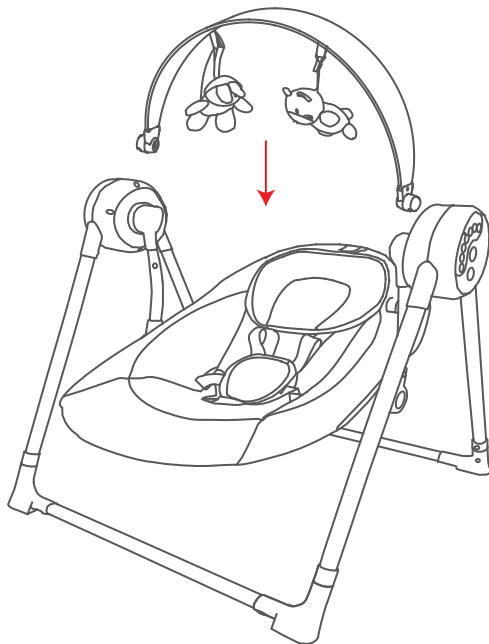


Product introduce

Adapter: if include the adapter, pls follow the below procedure.



Power supply:

- 1) AC plug can connect the AC power with 100~240V, 50/60Hz 0.3A.
- 2) Output voltage of adapter is 5.8V, output current is 1A. Don't use adapters supplied by non manufacturer.

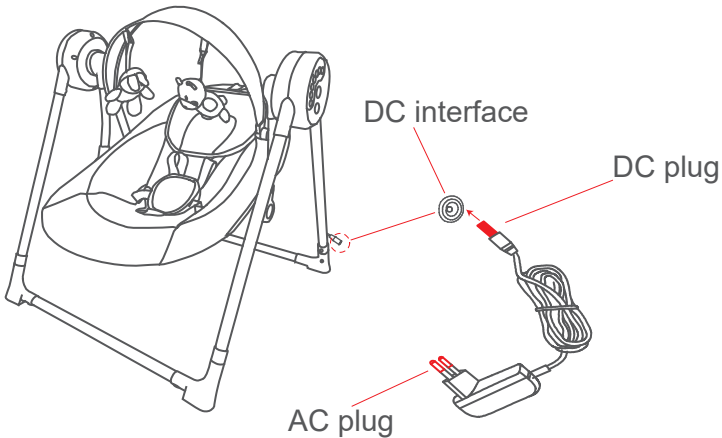

Batteries:


- 1) Battery power supply: 4pcs AAA batteries.
- 2) The polarity of the battery must not be reversed during installation.
- 3) Please remove the battery when not in use for a long time.
- 4) Note: You cannot mix old and new batteries.
- 5) Alkaline batteries, standard carbon zinc batteries and rechargeable NiCd batteries should not be mixed.

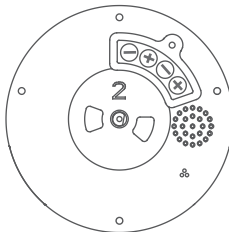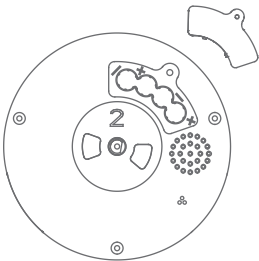





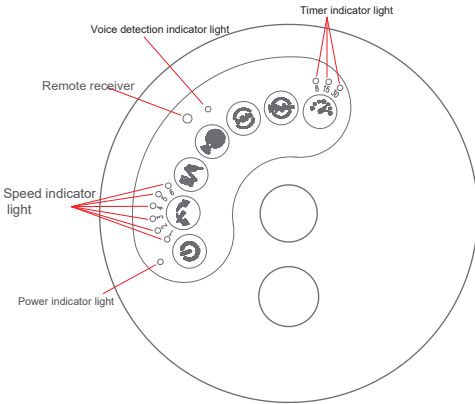


- 1) Loosen the screw of battery cover, remove the battery cover.
- 2) Please install the battery according to the polarity.
- 3) Install batteries in correct polarity, cover battery well, tighten the screws.

Function introduce













Panel function




Voice detection function: Press down voice detection button, the voice detection indicator light, all function of this product stop into standby state. Product swing in speed 1, play melodies in small voice, timing is 8mins, After 8mins, product stop into power-saving standby state.

-  Power switch
-  Speed up and down
-  Water and bird sound
-  Voice detection
-  Play/Pause
-  Melodies selection/
Volume adjustment
-  Timer

Remote function :

 Power switch	 Play/Pause
 Timer	 Last melody
 Switch melodies and Mp3	 Next melody
 Volume up	 Water/bird sound
 Volume down	 Voice detection
 Speed up	 Speed down

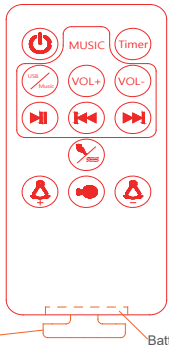


Warning: Take out power-down plastic sheet before using remote controller.

Function introduce


MP3 function:

- 1) Insert USB device into USB socket,press down the melodie button to play the music stocked in USB device.
- 2) Remove USB device to play the melodies in the product.

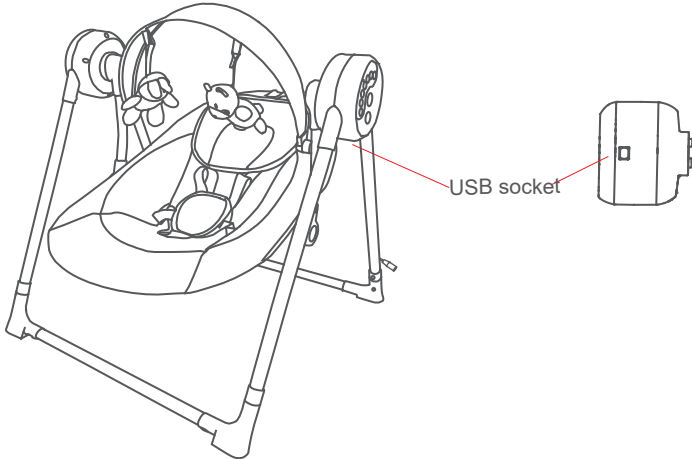

Bluetooth function:


- 1) Turn on the bluetooth in the phone,search and match bluetooth device BT3403,the product will play the music stocked in the phone after matching well.

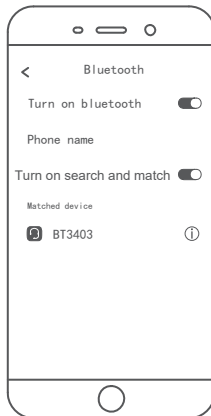

Function introduce


Folding function

1. Press the folding button of main model and assist model at the same time, gently lift the product, and the support tube automatically fold inward.

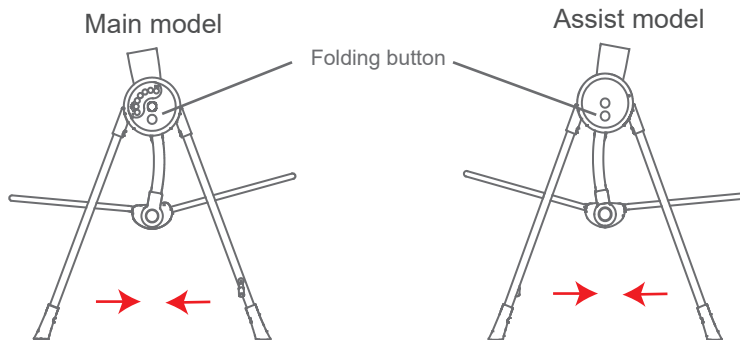

Backrest adjustment


1. Press the seat adjustment button of left and right sides at the same time to adjust the seat backrest position.

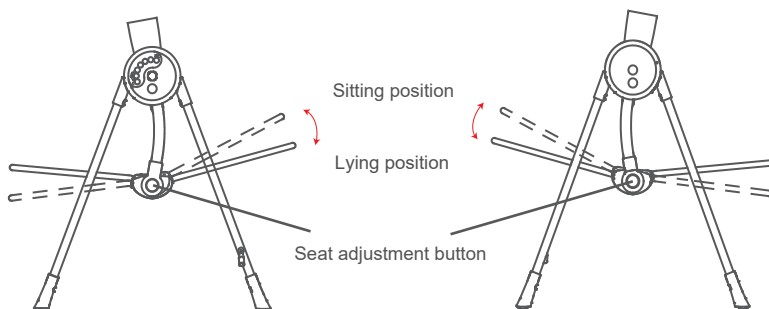

Function introduce

Lock and unlock function


- 1) Push the lock button to the left to the end will lock the swing function. Push the lock button to right to the end will unlock the swing function. (**Warning:** Swing function need to be stop before using the lock and unlock function)

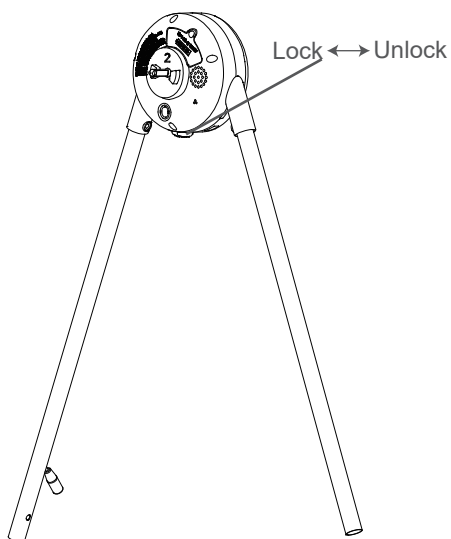


Washing and Cleaning

Remove seat cover

1) Folding the seat frame and unite the seat belt of backrest to remove the seat cover.

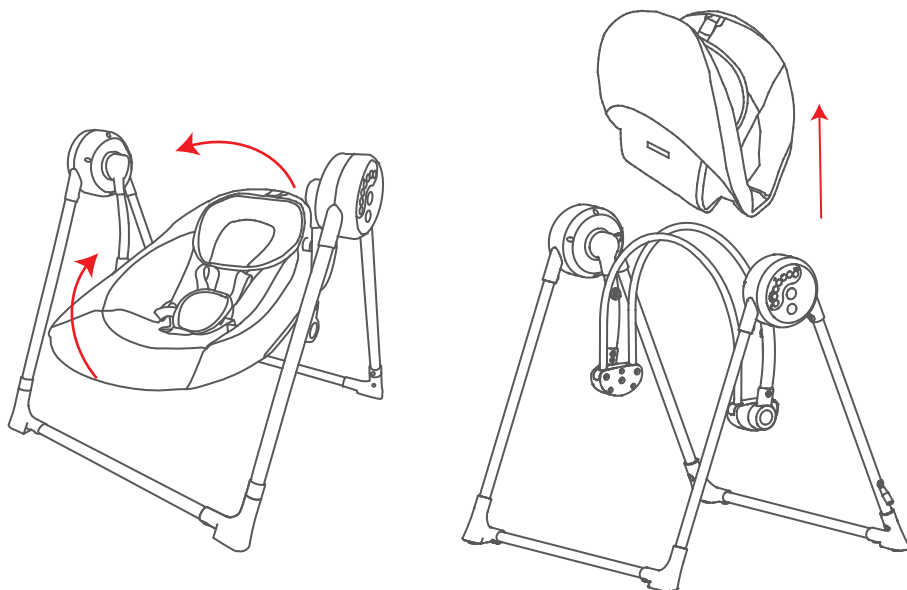

Attention for washing:

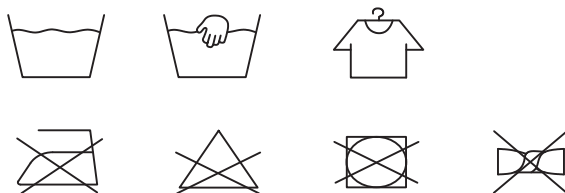

Warning!

- 1.Never leave the child unattended !
- 2.Always use the restraint system!
- 3.Do not use this product once your child can sit up unaided or weighs more than 9kgs.
- 4.This product is not intended for prolonged periods of sleeping.
- 5.Non-rechargeable batteries are not to be recharged,different types of batteries or new and used batteries are not to be mixed !
- 6.Batteries are not to be inserted with the correct polarity. Exhausted batteries are to be removed from the infant swing.
- 7.Do not move or lift this product with the baby inside it !
- 8.Never use this product in high position such as tables,stairs or other high position) to prevent drop danger !
- 9.Never use this product on an elevated surface (e.g. a table)!
- 10.Attention to suffocation hazard:do not use on soft objects to prevent suffocation caused by overturned(e.g. bed,sofa etc).
- 11.Do not let children play with this product !
- 12.To avoid injury ensure that children are kept away when unfolding and folding this product.
- 13.This product does not replace a cot or a bed. Should your child need to sleep,then it should be placed in a suitable cot or bed.
- 14.When the product is connected to a Mp3 device,ensure that the volume of the Mp3 device is set to a low value !
- 15.Never use the product if any components are broken or missing。 Never use the accessories or replacement parts other than those approved by the manufacturer.
- 16.Never near the fire !
- 17.Cord, plug, accessories and other parts of infant swing need for regular inspections. Do not use once any parts found to be damaged.
- 18.Never use the adapter approved by the non-manufacturer.

19. FALL and STRANGULATION HAZARDS: Infants have suffered head injuries falling from swings and have stangled in straps.
20. ALWAYS use restraints. Adjust to fit snugly.
21. STOP using product when infant attempts to climb out (approximately 9 months).
22. Stay near and watch infant during use. This product is not safe for unsupervised use or unattended sleep.
23. SUFFOCATION HAZARDS: Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.
24. ALWAYS keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.

KIDSVIEW

9105 Burrough Dover Lane,
Pennsauken, NJ 08110
Phone Number-9088681088

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.