 


尺寸:95x135mm
材质128克铜版纸
四色印刷
骑马钉

Digital Camera

Easy Guide

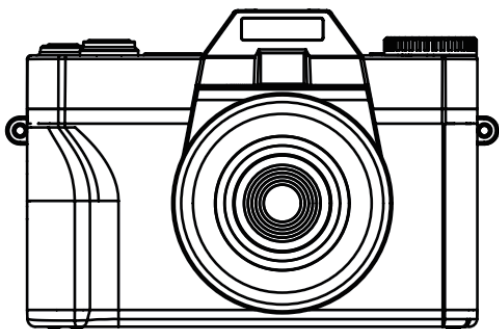

Contents

WARNING	1
CAUTION	1
About the camera	2
System requirement	2
Parts and controls	2
Charging the battery	5
Power on/off the camera	7
Set the camera	7
Insert and format the memory card	8
Format the memory card	9
Using the camera	10
Focus function	11
Auto focus	12
Manual focus	12
Fill light	12
Playback	13
Playback in HDTV	14
Connect to computer	15
Charging Mode	15
Mass Storage Mode	16
PC Camera	16
Download the app and connect the camcorder's Wi-Fi network	16
System requirement (of smartphone)	17
Camera cleaning and maintenance	18
Troubleshooting	18
Additional notes	19

WARNING

To reduce the risk of fire or electric shock,

- 1 . Do not expose the unit to rain or moisture.
- 2 . Do not place objects filled with liquids, such as vases, on the apparatus.
- 3 . Do not expose the batteries to excessive heat such as sunshine, fire or the like.
- 4 . Do not ingest battery, chemical burn hazard.
- 5 . Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- 6 . If you think batteries might have been swallowed or placed inside any part of body, seek immediate medical attention.

CAUTION

If the battery is mishandled, the battery pack can burst, cause a fire or even chemical burns. Observe the following cautions.

Do not disassemble.

Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.

Do not short circuit and do not allow metal objects to come onto contact with the battery terminals.

Do not expose to high temperature above 60 °C (140 °F) such as in direct sunlight or in a car parked in the sun.

Do not incinerate or dispose of in fire.

Do not handle damaged or leaking lithium ion batteries.

Keep the battery pack out of the reach of small children.

Keep the battery pack dry.

Replace the battery with the specified type only. Otherwise, burst, fire or injury may result.

Dispose of used batteries according to the instruction.

Use a nearby wall outlet(wall socket) when using the AC Adapter/Battery charger. If any malfunction occurs, disconnect the plug from the wall outlet immediately to disconnect from the power source. If you use the product with a charge lamp, note that the product is not disconnected from the power source even when the lamp turns off.

Do not use the AC adapter/ Battery charger placed in a narrow space, such as between a wall and furniture.

If static electricity or electromagnetism cause data transfer to discontinue midway (fair), restart the application or disconnect and connect the communication cable (USB, etc.) again.

About the camera

 
System requirement

Users can transfer videos and photos to computers with the following configurations:

Intel Pentium 2.0GHz or higher/ Microsoft Windows XP or higher operating system 2GB RAM 40GB above available disk memory/ Standard USB interface / 1GB GPU or higher 1920x1080 pixel or higher resolution.

Parts and controls

Rear view

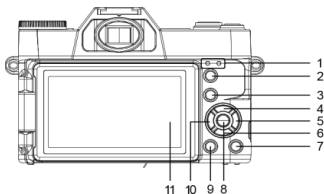

1: Charging/working indicator light

2:T- Digital zoom in

3:W-Digital zoom out

4: Up button/shortcut button for fill light

5: Right button

6: Down button/Delete button

7: Menu button/menu return button

 
8: Confirm button

9: Playback button

10: Left button


11: Display screen

Top side view

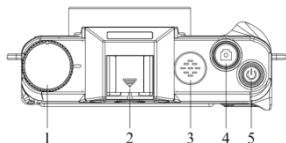


- 1: Mode Dial
- 2: Hot shoe
- 3: Speaker
- 4: Photo button

 Bottom side view

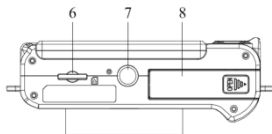


- 5: POWER button
- 6: Memory card slot
- 7: Tripod hole
- 8: Battery compartment

 Front view

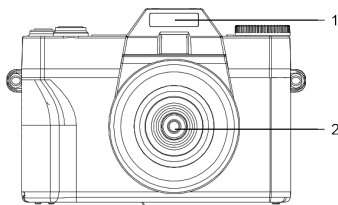

Left side view

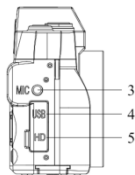 

- 1: Fill light
- 2: Lens
- 3: External MIC interface
- 4: Type-C USB interface
- 5: HDMI output interface

Buttons/ Indicators	Functions
POWER	Power on / off
PHOTO button	Shoot video/take photo start/end
	Manual focus
W	Digital zoom out
T	Digital zoom in
Up	Upward
	Turn on/off the fill light
Right	Rightward/Long press the right button to open wifi
Down	Downward
	Delete photo/video
Left	Leftward/Short press the left button to switch filters
OK	Confirm
MENU	Open / Close menu settings
Playback	Open/Exit Media Playback
Indicator light	Working / Charging indicator light
Hot shoe	Base for installing microphone and fill light
MIC interface	External microphone interface(3.5mm)
HD	TV HDMI cable interface
USB	USB cable charging
	Connect the computer with USB cable

Charging the battery

1. Power off your camera, open the battery cover and insert the battery in the direction as the shown of following picture, then close the battery cover.



2. You can use supplied USB cable to charge your camera via a adapter (5V/1A~5V/2A) .



- * The charging indicator will be turned on in red when the battery is in charging.
- * The charging indicator will be turned off automatically when the battery is fully charged.

3. Charge the battery with a standard external charger, put the battery directly into the charger.



Normally it takes around 2 hours to full charging of the battery.
When the battery is fully charged, the battery life is around 90 minutes for recording

Model

Wide-angle lens assembly



straight tube lens assembly

 


To install a lens: Align the wide-angle or straight tube lens with the camera lens interface and turn it clockwise until it is tightened.

To remove a lens: Turn the wide-angle or straight tube lens counterclockwise.

Power on/off the camera

Press the power button, the camera will turn on automatically.



Power button

To turn off the camera, press and hold the power button for 3 seconds.

 
Note: When you turn on the camera for the first time, you need to press and hold the power button to turn it on.

When there is no battery in the battery compartment, you need to press and hold the power button to turn on the camera after you put the battery in.

Set the camera


You can make custom settings of the camera.

After the camera is turned on, press the menu button to open the menu settings.

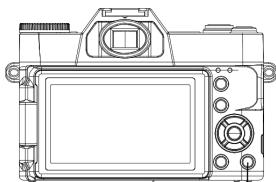

MENU button

 Menu Settings

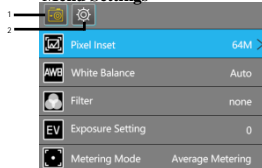

1 :Sub-menu for current mode

2 :System settings

Sub-menu	Menu content
Image Rotation	Turn On/Turn Off (Press OK to switch)
Icon Display	Turn On/Turn Off (Press OK to switch)
Video Focus Mode	Fully automatic focus/Manual focus/Fixed focus mode
Wi-Fi	Turn On/Turn Off (Press OK to switch)
Reset Wi-Fi	Confirm/Cancel
Light Source Frequency	Auto/50Hz/60Hz
LED Indicator	Turn On/Turn Off (Press OK to switch)
Auto Screen Saver	Turn Off/30s/1min/2min
Auto Power Off	Turn Off/3min/5min/10min
Button Prompt	High/Middle/Low/Turn Off
On/off Music	Open/Close
Language	Simplified Chinese/traditional Chinese/English/Japanese/Korean/Russian/German/French/Italian/Spanish/Portuguese/Thai
Time Format	YYYY/MM/DD MM/DD/YYYY DD/MM/YYYY
Time Set	hour minute second
Date Set	Year month day
Format	(TF Card)Format/Cancel
Device Info	Product model and version number
Factory Reset	Confirm/Cancel

Insert and format the memory card

A class 10 or higher speed memory card is recommended to normal use.

1. Insert the memory card into the memory card slot until you hear a "click".



 
 
Insert the memory card in the direction shown in the diagram, paying attention to the edges and corners..

2.To remove the memory card:Push the memory card in and it will automatically pop out.

Format the memory card

It is recommended to format the memory card before the first use.

To format the memory card, press the menu button to open the menu system. Then press the left or right button to switch to system settings. Press Up or Down to find "Format" and press OK to get the sub-menu. Select Format to format the memory card.

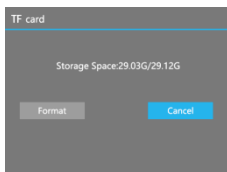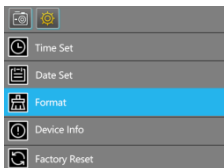

Note: If the memory card is not native format, the screen will pop-up a prompt: "Unsupported file system,do you want to format? " please format the memory card as above operation.










Formatting the memory card will erase all the data stored on it and the data will be irrecoverable. Save your important data on PC before formatting.

Using the camera

After the camera is turned on, it defaults to video shooting mode.



Rotate the mode dial to select the desired mode

icon	Mode	illustrate
	Photo	Take a single photo normally
	Auto	Automatically cycle take photos after a specified number of seconds
	Timed	Take a single photo after a specified number of seconds
	Burst	Take a specified number of photos in succession
	Video	Normal recording mode
	Slowly	Slow motion shooting
	lapse	Compress time to record video
	Loop	Recording infinite loop
	Video+Photo	During the recording video, you can capture according to the set capture interval single photo

Note: The camera supports setting the corresponding mode menu in different modes.

After selecting the desired mode, press the menu button to open the menu and select the desired setting if desired.

Press the photo button to take a photo, and the photo will be automatically saved to the memory card.

In video recording mode, press the photo button to start recording, and then press to end recording. You can also press the power button to pause/continue recording while recording



1: Photo button (video start/end button)

Press to start recording, then press to end recording

2: Indicator light

The working indicator light flashes when recording

3: Digital zoom button

T button digital zoom zoom in/W button digital zoom zoom out

Focus function

This function includes 3 focus modes: automatic focus, manual focus and fixed focus mode. Press the menu button to open the menu, then press the left/right button to switch to system settings, press the up/down button to find "focus mode", press OK button to enter focus mode. Choose your desired focus mode.

Fully automatic focus

In this mode, when taking a photo or recording a video, just keep the camera steady and it will automatically focus. After focusing is complete, press the photo button to take the photo or start recording.

Manual focus




In this mode, when taking a photo or recording a video, half-press the photo button and the focus frame will appear on the display until the camera focuses clearly. Then press the photo button all the way down to take the clearest photo or start recording with the clearest image.

Fixed focus mode

In this mode, you need to keep half-pressing the shutter button to focus while taking a photo or recording a video. The screen will clearly display the image of the object being photographed. Then press the photo button all the way down. If you release the photo button while taking a photo or recording a video, the resulting photos and videos will be blurry.

Fill light

In video mode, pressing the up button can quickly turn on or off the fill light. In photo mode, the fill light has three flash modes and pressing the up button can quickly switch between the three modes.

	No flash
	Auto flash
	Mandatory flash

Note: When the fill light is in automatic flash mode, it will only flash when taking photos in a relatively dark environment. When switched to forced flash mode, the fill light will always be on.

Playback

Rotate the mode dial to switch to media playback or press the playback button to quickly enter media playback. Press the left/right buttons to view videos and images stored on the camera's memory card.

Current/total number of images



Figure 1: Video playback


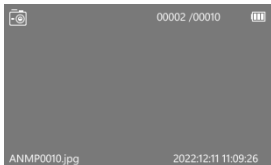 


Figure 2: Photo playback

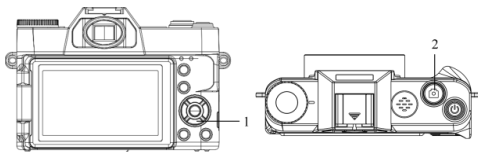 

1: Press the down button to delete a photo/video.

Note: Once deleted, it cannot be recovered.

2: Press the photo button to play/pause a video.

 
Playback in HDTV

The high-definition interface of this camera can only be connected to a high-definition TV, not to a computer.

Please insert the public port of the HD cable into the HD interface of the camera, and connect the other end of the port to the HD input interface of the HD TV.


Please Note: Please stop recording/playing images before connecting/unplugging the HD cable. (The TV signal source needs to be adjusted to high-definition mode)
The HD cable is suitable for the Mini HDMI to HDMI Cable.

Note: After connecting the HDTV, the camera display content will automatically switch to the HDTV, and the camera screen will be automatically blacked out. this is not a malfunction.

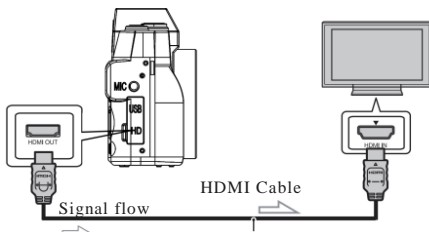


Connect to computer

 1. Connect the Type-C USB port of the camera and the USB port of the computer with supplied USB cable.

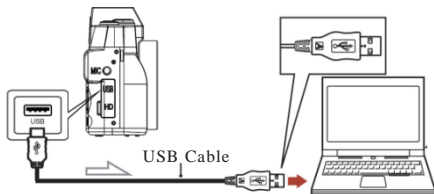

2. The camera will turn on automatically and the screen will display the available options.

 Press the Up/Down button to select the desired option, then press the OK button to confirm the option.

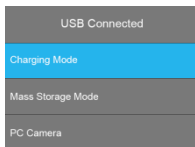

Charging Mode

Select the charging mode, the camera supports the function of recording normally. Power off the camera would be fully charged faster then keep powering on.

Mass Storage Mode

Select “Storage Storage Mode” and the computer will display the camera’s memory card drive. You can transfer files from the storage to the computer on the computer.

PC Camera

 
Select the “PC Camera” mode, the camera can be used as a webcam, live streaming, etc.

Note: When the camera is used as a webcam, only the digital zoom button can be operated on the camera and other functions cannot be used..

Download the app and connect the camera’s Wi-Fi network

Search for “iDC CAM” from Google play (Android) or Apple app store (iOS) to download the app.

After turning on the camera, press the menu button to enter the menu, then press the left/right buttons to switch to system settings, then press the up/down buttons to find the “Wi-Fi” submenu and press the OK button to turn on Wi-Fi. Then the Wi-Fi ID and password will be displayed on the camera screen.

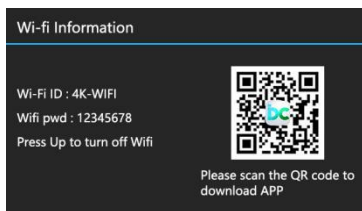


On your smartphone, go to Settings—WLAN—4K_ WIFI and enter the password according to the camera screen.

Note: The camera's Wi-Fi cannot access social networks, only for smartphones to access the camera

System requirement (of smartphone):

 - * Android 6.0 or higher is required
- * iOS 8.0 or higher is required

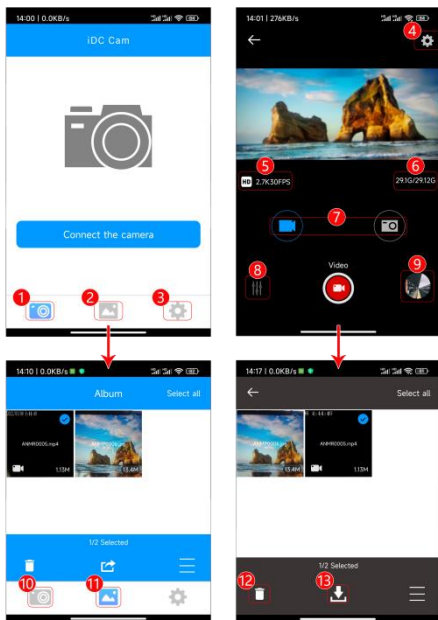

- 1: Click through the APP to view the live view and operate the camera
- 2: View images/videos downloaded to your smartphone from the app
- 3: System Settings
- 4: Camera settings
- 5: When pixel/resolution
- 6: The remaining storage space of the memory card
- 7: Switch the shooting mode of the camera
- 8: Switch the pixel/resolution of the current mode
- 9: View images/videos saved on the camera
- 10: Delete images/videos downloaded from the app to your smartphone
- 11: Share images/videos downloaded from the app to your smartphone to social software
- 12: Delete images/videos from the camera
- 13: Download images/videos from the camera to your smartphone

Camera cleaning and maintenance

- (1) If you do not use the camera for a long time, take out the camera battery and place it in a dust-free, dry environment with a temperature no higher than 30 °C .
- (2) In order to extend the service life of the battery, please discharge it completely before storage.
- (3) Please fully discharge the battery at least once every 3 months after it has been fully charged.
- (4) If there is dust or dirt on the lens or screen, gently wipe it with a clean, soft lens cleaning cloth.
- (5) As this machine is a precision instrument, please do not drop it or suffer from strong impact or vibration.

Troubleshooting:

If you encounter problems with the camera, please refer to this section.

1. The camera cannot be turned on after installing the battery

- (1) The battery power is insufficient, please replace the battery with a new one or charge the battery.
- (2) The battery is installed in reverse, please confirm that the battery is installed in the correct way.
- (3) The battery insulating paper is not removed.

2. The battery is not charging

- (1) If the red light of the charging indicator flashes, the battery is not in place or the contact is poor. Please re-install the battery until the indicator light is on (the indicator light goes out when the battery is fully charged)
- (2) The charging indicator light is off and the charger is not plugged in properly. Please check whether the charger is connected normally.
- (3) The ambient temperature is lower than 10°C, which may lead to slow charging or failure to charge.

3 . Camera crashes

Quickly pressing each button of the camera may cause the camera to freeze. After it crashes, unplug the battery and reboot.

Tip: When the camera is recording or taking pictures, do not quickly press the camera button. Under normal circumstances, the camera will display a waiting icon.

4 . The memory card cannot be recognized:

- (1) Please check whether the memory card complies with TF card (class10), the maximum is not more than 256G.
- (2) Please check whether the memory card is inserted backwards.
- (3) When the memory card is used on the camera for the first time, it is recommended to format it first.

Additional notes

- (1) Do not insert any object into the slot except the memory card.
- (2) After the power is turned on, the camera may show an unstable image about for a few seconds, but this is not a fault.
- (3) Due to the optical properties of the lens, there may be color dispersion (magnification of chromatic aberration) at the edges of the image. This is not a camera fault.
- (4) It is normal for the memory card to get hot after a long period of use.
- (5) It is normal for the camera's screen to heat up after a long period of use.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.