


铜版纸说明书 彩色印刷  
尺寸: 80X103MM



**INSTRUCTION MANUAL**

PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE

**Getting Started**

- Remove the product from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the Package Contents list.

**Package Contents**

- Portable Bluetooth Speaker
- Type-C Cable
- Lanyard
- Carabiner
- Instruction Manual


**Key Features**

- Portable Bluetooth Speaker with RGB Lights
- Connect & stream wireless music
- RGB lights dance to music
- Built-in Micro-SD card slot
- Speaker power - 3 watts
- Rechargeable battery - 500mAh
- Type-C USB cable included to recharge the speaker
- Includes carabiner

**SAFETY INSTRUCTIONS**

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the speaker.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

**Description of Parts**

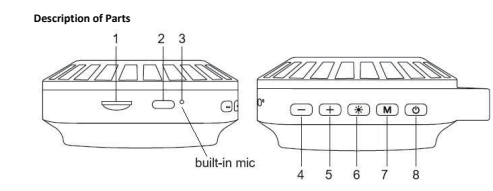

Number	Item	Function
1	MICRO SD (TF) CARD SLOT	Micro SD (TF) card input
2	DC 5V	Charging port
3	LED INDICATOR	Charging / Bluetooth
4	VOLUME DECREASE - / PREVIOUS TRACK/STATION	Long press for volume decrease. Bluetooth/TF card mode: short press to previous track. FM radio mode: short press to the previous already saved radio station.
5	VOLUME INCREASE + / NEXT TRACK/STATION	Long press for volume increase. Bluetooth/TF card mode: short press to next track. FM radio mode: short press to the next already saved radio station.
6	LIGHT BUTTON	Short press to change the color changing light pattern
7	MODE / TWS BUTTON	Short press to change the mode between Bluetooth / TF / FM radio, long press for TWS connect or disconnect
8	ON/OFF / PLAY/PAUSE / SCAN / PHONE	Long press to turn the speaker On or Off, short press for PLAY/PAUSE/scan FM radio stations (only in FM radio mode)

**INSTRUCTIONS FOR USE**

**Charging the Speaker**

For best results, fully charge the unit before use.

- Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
- Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take about 1.5-2 hours to fully charge the battery.

**Turn On/Off the Speaker**

Long press the ON/OFF button to turn on/off the unit.

**Pairing your device with the Speaker –**

Your **Bluetooth Speaker** can stream wireless audio from any Bluetooth enabled device within the range of up to 33 feet. Simply follow the below steps.

- Turn ON the speaker.
- You would hear an indication tone, and LED would flash blue rapidly. The speaker is now in pairing mode.
- Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for available Bluetooth devices.
- Powerhouse Bluetooth Wireless Speaker would appear as “SL Portable Speaker”, in the list of searched devices. Select it from the available list of devices.
- You might be prompted with “Pair with SL Portable Speaker?” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- If required, enter the password “0000” to confirm pairing.
- Once paired successfully, another indication tone would be heard, and LED would stay blue.
- If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

**Talking using the Bluetooth Speaker**

Please ensure that you are paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject Incoming call	Incoming Call	Short press the Phone button twice
End Call	Incoming Call	After your phone conversation, short press the Phone button
Increase Volume	During a call	Press and hold the + button to increase the volume
Decrease Volume	During a call	Press and hold the - button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

**Listening to Wireless Music**

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase volume	Playing music	Press and hold the + button to increase volume.
Decrease volume	Playing music	Press and hold the - button to decrease volume.
Pause	Playing music	Short press PLAY/PAUSE button once to pause music
Play	Pause	Short press PLAY/PAUSE button once to resume music
Previous track	Playing music	Short press the PREVIOUS TRACK/STATION button to the previous track
Next track	Playing music	Short press the NEXT TRACK/STATION button to the next track

**Note:** An indication tone will alert you when the volume is adjusted to maximum level.

**TWS pairing use (if you own 2 Bluetooth Speakers)**

- Make sure both speakers are “ON” and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
- Choose either one as your master speaker.
- Long press the TWS button on master unit.
- Both units will wirelessly connect with each other, and you would hear an indication tone after they pair together successfully.
- Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc). Please refer to manufacturer’s instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find “SL Portable Speaker” – Pair it with this device.
- You might be prompted with “Pair with SL Portable Speaker?” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- If required, enter the password “0000” to pair with the device.
- Once paired successfully, another indication tone would be heard.
- You can now stream wireless music on your speaker through your source device.

**Note:** TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, long press the TWS button on any one speaker.

**Listening to Music using Micro SD (TF) Card Slot**

- Turn on the speaker.

- Insert Micro SD (TF) card into the Micro SD (TF) card slot. An indication tone would be heard, and music would play automatically.
- Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button to move forward or backward on your playlist.
- Short press PLAY/PAUSE button to Play or Pause a track.

**Note:** Micro SD (TF) Card: Supports up to 16GB; Supports music file format: MP3. Micro SD (TF) Card not included.

**Listening FM radio**

- Turn on the speaker.
- Connect the USB charging cord (included) to the DC 5V charging port of the speaker, and leave the other end of the cable open. This cable serves as FM antenna for better reception.
- Short press the MODE button each time until it reaches FM radio mode with sound from a FM radio frequency.
- Short press the SCAN button for searching and recording all radio stations within frequency range 87.5-108MHz.
- Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button for listening next or previous already saved radio station.

**Tips!!**

- Short press the MODE button to switch different functions of the speaker. The functions are – Bluetooth / Micro SD (TF) / FM radio. (Note: This switching function cannot work in TWS pairing use.)
- When the speaker is not in use, turn OFF the device to save the battery power.
- Do not overcharge the speaker.

**Color Changing Light Mode** (LEDs are not replaceable)

- Turn on the speaker.
- While playing, short press the “LIGHT” button each time to change 7 different color changing light patterns.
- Long press the “LIGHT” button to turn on/off the color changing light.

**Do's and Don'ts**

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

**Care and maintenance**

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

**Product Specifications:**

Bluetooth version : 5.3  
Unit size : L3.35" x D1.47" x H3.83"  
Unit weight : ~5.3 oz  
Power input : DC 5V  
Charging time : 1.5-2 hours  
Play time : Up to 1.5 hours (max. volume)  
Bluetooth range : 33 feet  
FM frequency range : 87.5-108MHz  
Built-In Rechargeable Lithium Battery: 3.7V 500mAh  
Micro SD (TF) Card: Supports up to 16GB, supports music file format: MP3  
(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

Problem	Possible Cause	Solution
<b>Low sound level</b>	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
<b>No sound</b>	Volume in minimum position. The connected device is not in play mode. Input source incorrect.	Increase the volume. Play the music in the connected device and make sure the volume level is in high level. Short press the MODE button to set the input source to the desired function.
<b>Sound distortion</b>	Volume level too high	Decrease the volume.

**FCC Instructions**

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**NOTE:** This product has been tested and found to comply with the limits for a Class B digital device.

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Limited Warranty**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90-day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90-day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@midtradinggroup.com](mailto:info@midtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**Listening to Music using Micro SD (TF) Card Slot**

- Turn on the speaker.