

尺寸：单页80\*100mm

## Bluetooth Speaker User Manual



Notice:  
Please read user manual carefully and keep it for your records

### Notice for Use:

- 1.For the first use, please charge the battery first. Do not play music while charging.
- 2.Please use certified DC 5V cable for charging.
- 3.When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
- 4.Active the Bluetooth feature on the phone,laptops or tablets, and set the device to search for wireless device.

### Specifications:

 
Material: ABS+FABRIC  
Bluetooth version: 5.3  
Bluetooth distance: 10M  
Rechargeable battery: 1200mAh  
Speaker power: 1\*5W  
Function: BT/FM/USB/TF/Handsfree/TWS  
Dimension: 114\*114\*131mm

### Includes:

- 1\*Speaker
- 1\*Micro USB charging cable
- 1\*User Manual

### Functional buttons:

- ①ON/OFF,Light mode
- ②Mode switch,Play/Pause
- ③Volume down/Previous song/TWS
- ④Volume up/Next song
- ⑤Micro USB for charging
- ⑥TF card port
- ⑦USB disk port

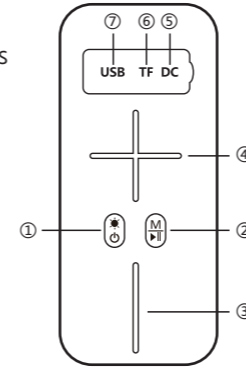

### ON/OFF Button:

Long press to turn on/off the speaker.  
When you turn on the device, a sound will indicated the speaker is on.  
Activate the Bluetooth feature on your phone, and set the phone to search for Bluetooth device "VTA-82857".  
When the speaker is turned on, short press this button to adjust the light mode.

### M Button/ Play&Pause Button

Short press to pause or play music  
For incoming calls, click to answer the call, click again to hang up the call, double click to reject the phone call.Double click in short time to redial the last number.  
Long press to switch among BT,FM,USB Drive,TF Card.

### TWS Function(need 2pcs speakers):

TWS allows you to synchronize 2 " VTA-82857" . Turn on both speakers to become one on your Bluetooth device list and once the two pairing names combine into one, select the one pairing name.  
Pick one of the 2 speakers and press" +" button twice quickly.

Wait for the pairing names of both speakers to become one on your Bluetooth device list and once the two pairing names combine into one, select the one name. Double click again to disconnect TWS.

### FM Mode:

When switch to FM mode, a sound will indicate "FM radio mode" .  
Short press M/PLAY&PAUSE button to search the FM radio channels automatically. If you need to stop searching, just press the button again. The searched FM radio channels will be saved automatically.  
Short press the volume button to select next or previous preset station.  
Long press volume button to adjust the volume to obtain the desired volume level.

### Next Music/Increase Volume Button:

Short press to change to next music  
Long press to increase the volume

### Previous Music/Decrease Volume Button:

Short press to change to previous music  
Long press to decrease the volume

### USB Reading/TF Card Reading:

Insert the USB drive/TF card into the speaker to play MP3 file automatically. Short press volume button to select the channels.  
Long press volume button to adjust the volume.

### Charging:

Connect the small end of the Micro USB charging cable (included) to the Micro USB port located on the front of the speaker. Connect the larger end of the cable to your computer' s USB port or an AC adaptor(not included). The LED indicator will turn red while charging.  
Once fully charged, the red LED will turn off.

### Safety instructions:

Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods.  
This product is not a toy. Use extra caution while children are using this product.  
Keep the wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibility reach over 200 degrees.  
Device may become warm while charging.Be assured to turn product completely off when plugging and unplugging into outlet.  
Damage, shock, and/or injury can occur if this warning is not heeded properly.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2A6QJOS888