

moonki®





**USER MANUAL
BLUETOOTH SPEAKER
BOSSA MAX
MW-PB320**

moonki®



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

	CAUTION	
	RISK OF ELECTRIC SHOCK, DO NOT OPEN	
Caution: To reduce the risk of electric shock do not open this device, there are no serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.		
	This sign means the existence of dangerous voltage inside the unit, which states a risk of electric shock.	
	This sign means that there are important instructions of operation and handling in the manual that comes with this device.	

NOTE


This unit may be submitted for changes in specifications, characteristics and/or operation without prior notice to user, in order to continue improving and developing its technology.

Contents

1. Important Notice
 - Before Use this Speaker
2. Your Party Speaker
 - Introduction
 - What's in the box
 - Overview of the Top control panel
 - Overview of the Rear panel
 - Overview of the remote control
3. Get started
 - Connect power
 - Prepare the remote control
 - Turn ON/OFF the speaker
 - Charging the internal Battery
 - Internal Battery Level indicator
4. Play
 - Basic key play operations
5. Connect with Bluetooth
6. Connect with AUX Line in
7. Listen to external audio device
 - Connect with a Wired Microphone/Guitar
8. Production information
 - Specification
9. Troubleshooting

1. Important Notice

Before Use this Speaker

- ① Read the instructions.
 - ② Keep these instructions.
 - ③ Heed all warnings.
 - ④ Follow all warnings.
 - ⑤ Do not use this apparatus near water.
 - ⑥ Clean only with dry cloth.
 - ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 - ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - ⑨ Only use attachments/accessories specified by the manufacturer.
 - ⑩ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
- ⑪ Unplug this unit during lightning storms or when unused for long periods of time.
 - ⑫ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way. Such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - ⑬ Battery usage CAUTION to prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control.
 - Install all batteries correctly, as the polarity marked on the remote control.
 - Do not mix batteries (old and new or carbon and alkaline, etc.)
 - Remove batteries when the remote control is not used for a long time.
 - Do not place batteries near fire or heat sources, such as sun light and radiators.
 - ⑭ The unit shall not be exposed to dripping or splashing.
 - ⑮ Do not place any sources of danger on the unit (e.g. liquid filled objects, lighted candles).
 - ⑯ While the unit is connected to the electrical network, the plug must have quick access as in case of emergency.

Warning

- Never remove the casing of this unit.
- Never lubricate any part of this product.
- Never place this speaker on other electrical equipment.
- Make sure that you always have easy access to the power cord, or adaptor to disconnect the unit from the power.

Caution

- Use of controls or adjustment or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Hearing safety

- Listen at a moderate volume.
- Using the speaker at a high volume can impair your hearing.
 - Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. so after prolonged listening. What sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normal 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Notice

Any changes or modifications made to this device that are not expressly approved by Consumer Lifestyle may void the user's authority to operate the equipment.

2. Your Party Speaker

Introduction

With this unit, you can:

 
- Enjoy audio from Bluetooth Devices, and other external device through AUX Line in

What's in the box

Check and identify the contents of your package:


- Speaker
- Remote control
- User manual
- AUX In
- AC Power cable

Overview of the Top control panel

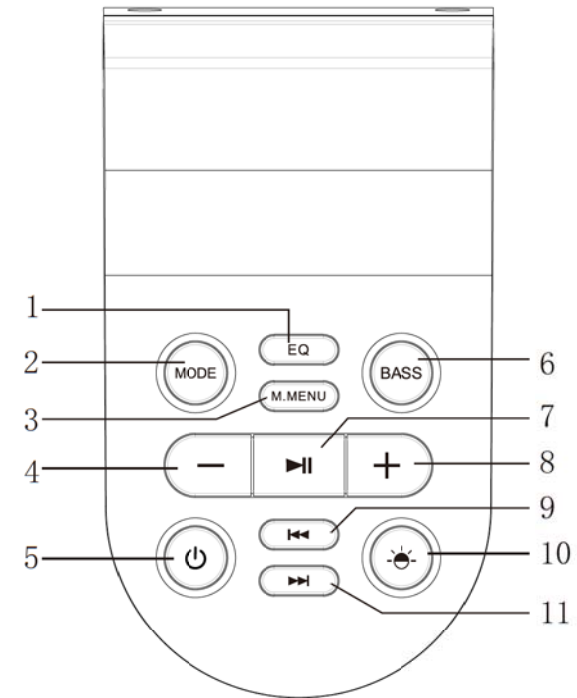


1. EQ button
2. Mode button
3. Mic Menu button
4. Decrease Volume(-)
5. Power ON/OFF button
6. Bass button
7. Play/Pause button
8. Increase button
9. Previous button
10. LED ON/OFF button
11. Next button

 Overview of the Rear panel

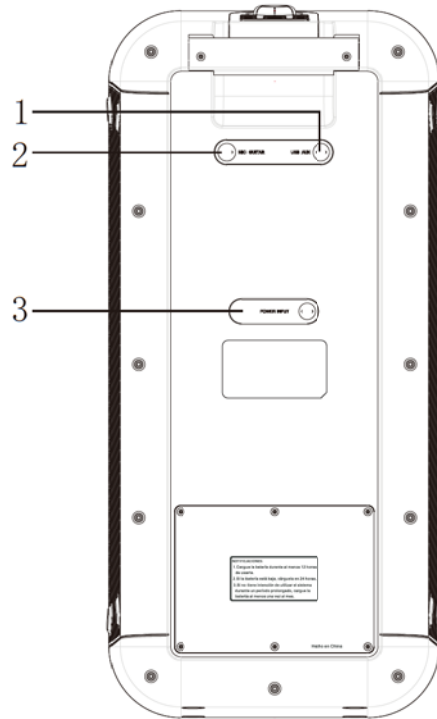

1. USB Charge / AUX Input jack
2. Microphone / Guitar Input jack
3. AC Power Input jack

 Overview of the remote control

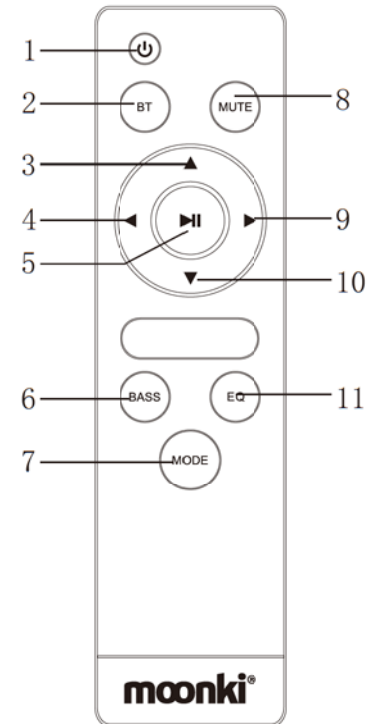

1. Power function key
2. BT function key
3. Volume+ function key
4. Previous function key
5. Play/Pause function key
6. Bass function key
7. Mode switch function key
8. Mute function key
9. Next function key
10. Volume- function key
11. EQ function key

3. Get started

! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

 
Always follow the instructions in this chapter in sequence.

Connect power


! Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on back or the underside of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all other connections.

Connect the power cable to the wall socket:

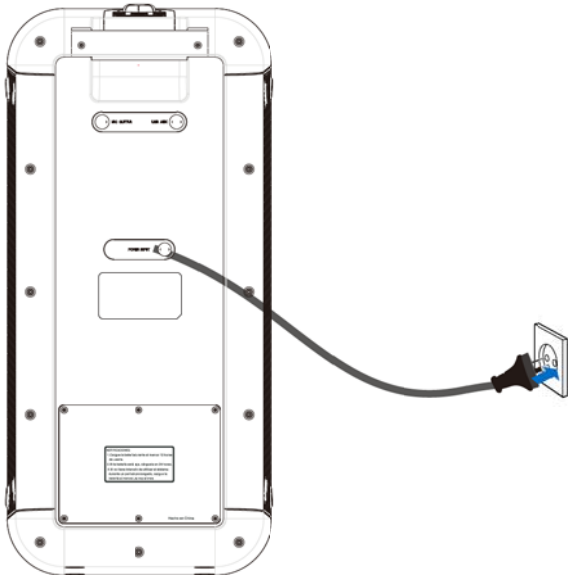

Prepare the remote control

 

To insert the remote control batteries:

1. Open the battery compartment.
2. Insert 2 x AAA batteries with correct polarity (+/-) as indicated. The 2xAAA battery not include in our products, please purchase from Authorized Seller.
3. Close the battery compartment.

Please Note:

- If you are not going to use the remote for a long time, remove the batteries.
- Do not use old and new or different type of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Turn On

1. Connect the AC power cable and plug to the wall socket;
2. Press the "POWER" button to the "ON" status to power on the speaker.
3. Press the POWER button on the top panel or on the remote control to turn it into Standby mode, press it again to power it on.

Caution:

If you do not use this unit for a while, please switch the "POWER" button to "OFF" status, and disconnect the AC power cable of this unit.

Charging the internal Battery

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

1. Connect the power cable and plug to the wall socket on the rear panel.
2. There is a battery indicator light on the bottom left corner of the display panel, it will light up and slowly flash, that is being charge.
3. When the battery indicator light on the top left corner of the display pane light up, the battery is fully charged, then unplug the power cable to stop charging, both top and bottom indicator light will turn off automatically.

Internal Battery Level indicator










1. Press the volume knob to check the battery capacity of rest.
2. When the battery is running out, the battery indicator light on the bottom top panel light up and quickly flash.
3. When the speaker sound becomes abnormal, please charge the internal battery on time to keep the battery life.




 
Note: please fully charge the product when it is not going to be used for a long time and charge once a month to keep longer battery life.

4. Play

Basic key play operations



You can control play through following operations.

Key	Function
	Press this button for previous track when playing music
	Press this PLAY/PAUSE button to play or pause the music. TWS is shared with the play button, long press the play button to enter TWS.
	Press to shuffle between ROCK, FLAT, CLASSIC, JAZZ, POP modes
	Press this button to turn on the speaker, long press to turn off the speaker
	Press this next button for previous track when playing music, or channel+ when at FM mode
	Press this MODE button for function mode switching between Bluetooth/AUX modes.
	<ol style="list-style-type: none"> 1. Press this VOLUME + button for volume increase when playing music, display will show the corresponding volume value. 2. Press this VOLUME + button to increase the volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "C", then press the button to increase the sound volume of microphone. 3. Press this VOLUME + button to increase the volume level if using guitar (press before this the M.Menu button. See M.Menu Instructions), the display will show "G", then press the button to increase the sound volume of guitar. 4. Press this VOLUME + button to increase the treble volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "T", then press the button to increase the sound volume of microphone treble. 5. Press this VOLUME + button to increase the bass volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "b", then press the button to increase the sound volume of microphone bass. 6. Press this VOLUME + button to increase the echo volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "E", then press the button to increase the sound volume of microphone echo. 7. Press this VOLUME + button to increase the reverb volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "R", then press the button to increase the sound volume of microphone reverb.
	When insert the wired microphone and guitar, Press one time for microphone (display will show "C"), Press twice times for guitar (display will show "G"), Press the third time for treble of microphone (display will show "T") Press the fourth time for bass of microphone (display will show "b") Press the fifth time for echo of microphone (display will show "E") Press the sixth time for reverb of microphone (display will show "R")
	Press this LED button for turn on and off, or switch the light effect

	<ol style="list-style-type: none"> 1. Press this VOLUME - button for volume decrease when playing music, display will show the corresponding volume value. 2. Press this VOLUME - button to decrease the volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "C", then press the button to increase the sound volume of microphone. 3. Press this VOLUME - button to decrease the volume level if using guitar (press before this the M.Menu button. See M.Menu Instructions), the display will show "G", then press the button to increase the sound volume of guitar. 4. Press this VOLUME - button to decrease the treble volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "T", then press the button to increase the sound volume of microphone treble. . 5. Press this VOLUME - button to decrease the bass volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "b", then press the button to increase the sound volume of microphone bass. 6. Press this VOLUME - button to decrease the echo volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "E", then press the button to increase the sound volume of microphone echo. 7. Press this VOLUME - button to decrease the reverb volume level of microphone if using wired microphone (press before this the M.Menu button. See M.Menu Instructions), the display will show "R", then press the button to increase the sound volume of microphone reverb
	Press to turn on/off "Bass Boost" effect. Press this key, display shows "BASS" to turn on "Bass Boost" effect ; press this key again to release the "Bass Boost" state, the display shows "OFF". Note: Open EQ mode, "Bass Boost" effect will be closed.
	Connect to guitar Insert a microphone to sing along while listening to music Connect to a USB storage device to playback your stored music. Connect to external device through Aux-in cable
	AC Power Input jack

5. Connect with Bluetooth

1. Press the BT button on the Top Control panel or press MODE button on the remote control to switch to the BLUETOOTH CONNECT mode, (bLUE) will be displayed on the screen.
2. Open the Bluetooth on the external device (must have Bluetooth function), and the name "Boss Max" will show on the device, please connect it.

3. Once connected, you can hear a small sound from the speaker. 4. You can use the  or  key on the Top Control panel to control the tracks of the external device.

Note: This speaker does not need the password.

TWS Connection Between Units

This model includes the TWS function, allowing you to wirelessly connect 2 units of the same model. To connect the units together follow the following instructions:

- 1- Turn on both units and set them to Bluetooth mode
- 2- One of the units must function as the master speaker. Press and hold the MODE button until the screen shows the message "TWS".

3- When the connection is established, the main unit display will read "bLUE" and the secondary unit will read "TWS".

4- Then connect your Bluetooth device normally

 
NOTE: To make the TWS connection, neither unit must be previously connected to any device.

6.Connect with AUX Line in

1. Press the AUX button on the Top Control panel or press the MODE button on the remote control to switch to the AUX(Line) mode, (AUX) will be displayed on the screen.
- 2.Connect this speaker to AUX inserting jack and the external device Earphone jack by provided AUX cable;
- 3.Once connected, turn on your external device music
- 4.You can use ◀◀ or ▶▶ button on the Top control panel to control the tracks of the external device.

Caution: Please turn off the unit before connect AUX cable in order to avoiding unexpected noise.

7.Connect with Wired Microphone/Guitar



Insert 6.35mm wired microphone to play with microphone.

Insert 6.35mm wired guitar to play with guitar.



When playing with the wired microphone/guitar, please press this knob to adjust the sound volume level of microphone/guitar.

Microphone:

- 1.When insert the wired microphone, press this knob first to open the microphone volume control or echo volume control of microphone,
- 2.Press one time for microphone volume (display will show "U"), press twice times for Guitar volume (display will show "G"), press third time is microphone treble (display will show"T") , press fourth time is microphone bass (display will show"b") , press fifth time is microphone Echo (display will show"E") , press sixth time is microphone Reverb (display will show"R") ,
- 3.Then turn this volume knob for volume increase or decrease of microphone volume or microphone echo volume.

Guitar:

- 1.When insert the wired guitar, press this knob second time for guitar volume (display will show "G"),
- 2.Then turn this volume knob for volume increase or decrease of guitar volume.

Important Notes

While using the microphone, avoid being put the microphone opposite the bass of Speaker, as they may have Whistler Noisy.

To get the best singing performance, keep the micro phone within 5-15cm of the mouth and at a 45 degree angle.

When using the microphone, always pay attention to the battery.

If the battery is low, the indicator light will come on and the performance will progressively become poor.

Caution: Please do not put the microphone directly face to the speaker, it may damage the speaker.

8.Product information

Specifications

Amplifier	
RMS Power	100W
PMPO Power	1500W
Speaker	
Treble Speaker	2 x 2 Inch
Bass Speaker	2 x 6.5 Inch
General information	
AC Power	230V~ 50HZ

9.Troubleshooting



Warning

Never remove the casing of this speaker.

If you encounter problems when using this speaker,check the following points before requesting service.

No power

- Ensure that the AC power plug of the speaker is connected properly.
- Ensure that there is power at the AC outlet.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

No response from the speaker

- Disconnect and reconnect the AC power plug, then turn on the speaker again.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities(+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the speaker.

moonki®





**MANUAL DE USUÁRIO
CAIXA DE SOM BLUETOOTH
BOSSA MAX
MW-PB320**

moonki®



ESTIMADO CLIENTE

Para aproveitar o melhor desempenho do seu Caixa de som, leia este manual com atenção antes de usar o Caixa de som e guarde-o para referência futura.

	CUIDADO	
	RISCO DE CHOQUE ELÉTRICO. NÃO ABRIR/DO NOT OPEN	
Cuidado: Para reduzir o risco de choque elétrico, não abra este dispositivo. Não há peças utilizáveis pelo usuário. Se houver um mau funcionamento, entre em contato com um técnico treinado .		
	Este sinal significa a existência de tensões perigosas dentro da unidade que representam risco de choque elétrico .	
	Este sinal significa que existem instruções de operação e manuseio no Manual do Usuário que você deve ler .	

OBSERVAÇÃO

Esta unidade pode estar sujeita a modificações em suas especificações para continuar melhorando sua qualidade sem aviso prévio ou notificação.

Conteúdo

1. Aviso importante
 - Antes de usar este alto-falante
2. Seu alto-falante para festa
 - Introdução
 - Conteúdo da caixa
 - Revisão do painel de controle superior
 - Revisão do painel traseiro
 - Revisão do controle remoto
3. Começando
 - Conectando a energia
 - Prepare seu controle remoto
 - Ligue e desligue seu alto-falante
 - Recarregando a bateria interna
 - Indicador de bateria
4. Reproduzindo
 - Botões básicos de reprodução
5. Conectando via Bluetooth
6. Conectando com cabo auxiliar
7. Ouvindo um dispositivo de áudio externo
 - Conectando um microfone com fio ou uma guitarra
8. Informações do produto
 - Especificações
9. Perguntas frequentes

1. Aviso Importante

Antes de usar esta Caixa de som:

- ① Leia estas instruções.
- ② Guarde estas instruções em um local seguro para referência futura.
- ③ Observe todos os avisos..
- ④ Siga todos os avisos.
- ⑤ Não use este dispositivo perto de água.
- ⑥ Limpe apenas com um pano seco.
- ⑦ Não obstrua nenhuma das aberturas de ventilação. Instale o aparelho conforme as instruções deste manual.
- ⑧ Não instale o aparelho próximo a fontes de calor, como radiadores, fogões ou outros dispositivos que gerem calor.
- ⑨ Utilize apenas acessórios que acompanham o aparelho ou especificados pelo fabricante.
- ⑩ Use apenas tripés ou suportes especificados pelo fabricante ou vendidos com esta unidade. Ao mover a unidade de um local para outro, faça-o com cuidado para evitar danificar a unidade durante o movimento.



- ⑪ Desconecte a unidade da alimentação durante uma tempestade com raios ou quando ela não for usada por um longo período de tempo.
- ⑫ Em caso de danos, contacte apenas pessoal qualificado. A manutenção é necessária quando a unidade estiver danificada de alguma forma, como um cabo de alimentação danificado, quando a unidade tiver sido exposta à chuva ou umidade, não funcionar normalmente ou tiver caído.
- ⑬ Precaução no uso da bateria para evitar vazamentos que possam ser prejudiciais ao usuário, causar lesões, danos à propriedade ou ao controle remoto..
 - Instale as baterias seguindo a polaridade correta marcada no controle remoto.
 - Não misture pilhas (velhas e novas, ou carbono e alcalinas).
 - Quando o controle remoto não for usado por um longo período de tempo, remova as pilhas.
 - Não exponha as baterias a calor excessivo, como luz solar, fogo ou algo semelhante.
- ⑭ Não exponha o dispositivo a goteiras ou respingos.
- ⑮ Não coloque objetos potencialmente perigosos sobre a unidade (como velas, líquidos inflamáveis, etc.).
- ⑯ Enquanto a unidade estiver conectada à rede elétrica, o plugue deverá ter acesso rápido e como em caso de emergência.

⚠ Aviso

- Nunca abra o gabinete deste produto.
- Nunca aplique lubrificante em nenhuma parte deste produto.
- Nunca coloque este aparelho sobre outro equipamento elétrico.
- Certifique-se de ter sempre acesso rápido ao cabo de alimentação desta unidade para poder cortar a fonte de alimentação.

⚠ Cuidado

- O uso de controles ou ajustes ou desempenho de procedimentos diferentes dos descritos aqui ou outras operações inseguras podem resultar em exposição perigosa.



Segurança Auditiva

- Ouça música em um volume moderado.
- Ouvir reproduções em volumes muito altos pode prejudicar sua capacidade auditiva.
- O som pode ser enganador. Com o tempo, seu "nível de conforto" auditivo se adapta a volumes de som mais altos. O que parece "normal" na verdade pode ser alto e prejudicial à audição. Para se proteger contra isso, ajuste o volume para um nível seguro antes que sua audição se adapte e deixe-o lá.

Para estabelecer um nível de volume seguro:

- Coloque o volume em um nível baixo.
- Aumente lentamente o volume de reprodução até alcançar um nível confortável onde você ouça claramente e sem distorções.

Ouça por períodos razoáveis:

- A exposição prolongada a sons, mesmo em níveis "seguros", também pode causar perda auditiva.
- Certifique-se de usar seus equipamentos adequadamente e por períodos razoáveis de tempo.

Recomendação

Qualquer alteração ou modificação feita neste dispositivo que não seja expressamente aprovada pela Consumer Lifestyle pode invalidar a autoridade do usuário para operar o equipamento.

2. Seu Alto-falante Bluetooth

Instruções

Com este dispositivo, você poderá:

 
- Desfrutar da sua música favorita através da transmissão sem fio ou cabo auxiliar.

Conteúdo da caixa

Verifique e identifique o conteúdo desta caixa.


- Alto-falante
- Controle Remoto
- Manual do Usuário
- Cabo Auxiliar
- Cable de Alimentação

Visão geral dos controles no painel superior.

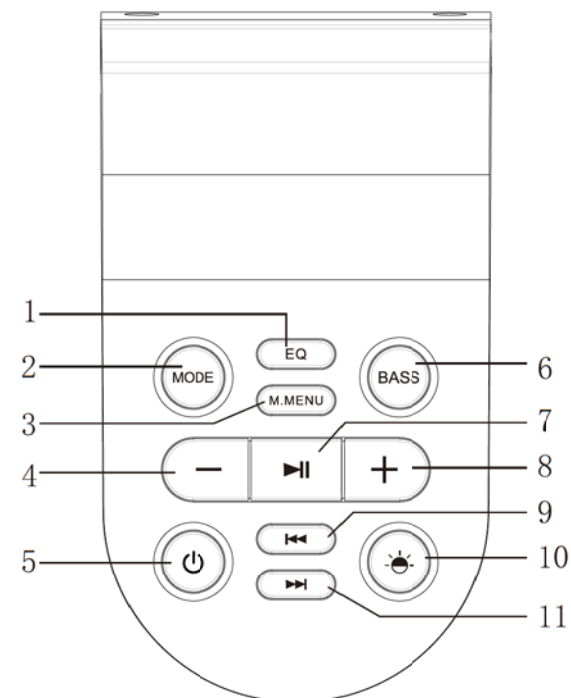


1. Botão de equalização
2. Botão de Modo
3. Botão de Menu do Microfone
4. Diminuir volume
5. Botão ligar/desligar
6. Botão de reforço de graves
7. Botão Reproduzir/Pausar
8. Aumentar volume
9. Botão faixa anterior
10. Botão ligar/desligar da luz LED
11. Botão próxima faixa

 Revisão do painel traseiro

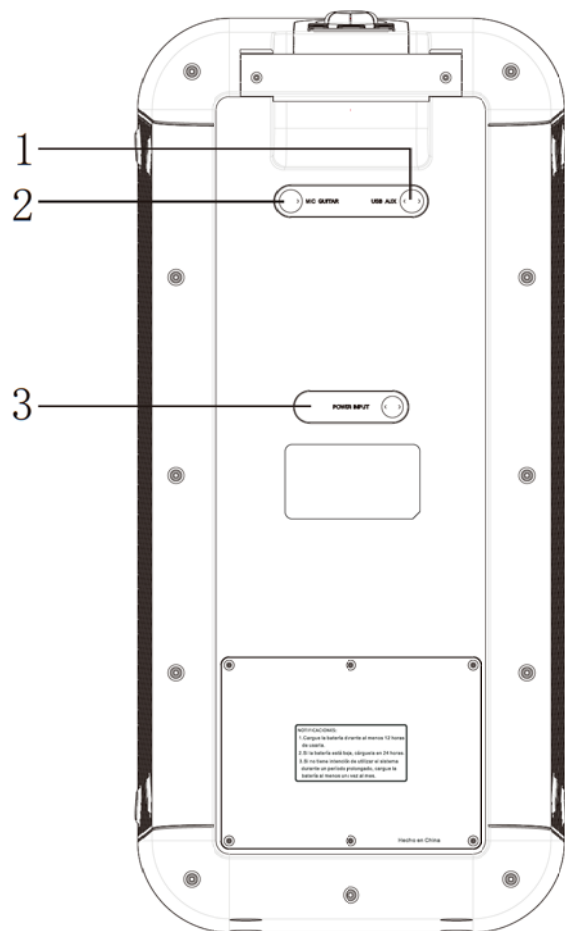

1. Entrada auxiliar / saída de carregamento USB
2. Entrada de microfone / guitarra
3. Entrada de cabo AC

 Revisão do controle remoto

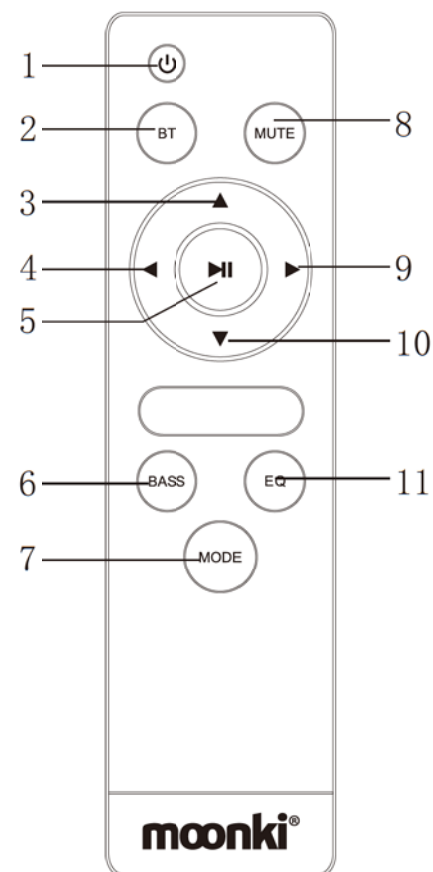

1. Botão de ligar
2. Botão de função Bluetooth
3. Botão de volume +
4. Botão de faixa anterior
5. Botão de reproduzir/pausar
6. Botão de função de graves
7. Botão para selecionar modo
8. Botão de função silenciar
9. Botão de próxima faixa
10. Botão de volume -
11. Botão de função equalização

3. Iniciando

! Iniciando

- O uso de controles ou ajustes ou a realização de procedimentos diferentes dos aqui descritos ou outras operações inseguras pode provocar uma exposição perigosa.

 
Siga sempre os passos indicados neste manual em sequência

Conexão de força

! Cuidado

- Risco de danos ao produto! Certifique-se de que a tensão da fonte de alimentação corresponda à tensão impressa na parte traseira ou inferior da unidade.
- Perigo de choque eléctrico! Ao desconectar o cabo de alimentação CA, sempre retire o plugue da tomada. Nunca puxe o cabo.
- Antes de conectar el cable de alimentación de CA, asegúrese de haber completado todas las demás conexiones

Conecte o cabo de alimentação a uma tomada de parede:

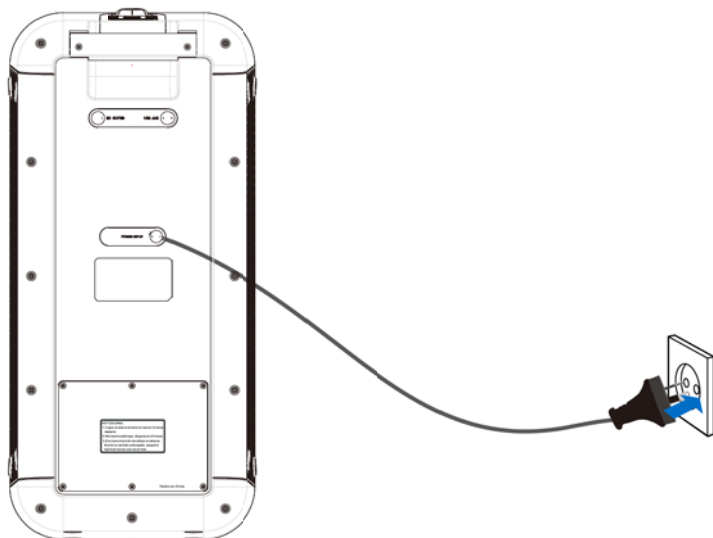

Prepare o controle remoto



Para inserir as pilhas do controle remoto:

1. Abra o compartimento da bateria.
2. Insira 2 pilhas AAA com a polaridade correta (+/-) conforme indicado. As baterias não estão incluídas no produto.
3. Feche o compartimento da bateria.

Nota:

- Se você não for usar o controle remoto por um longo período de tempo, remova as pilhas.
 - Não misture pilhas (velhas e novas, ou carbono e alcalinas).
- As baterias contêm produtos químicos e devem ser descartadas de maneira adequada.

Ligue e desligue a unidade

1. Recomenda-se não utilizar o alto-falante conectado à rede elétrica, pois isso prejudica a vida útil da bateria.
2. Quando a bateria estiver totalmente carregada, coloque o interruptor no painel de controle traseiro na posição ligado.
3. Pressione o botão liga / desliga no painel de controle superior ou no controle remoto para encerrar o modo de espera do alto-falante e novamente para iniciá-lo.

Cuidado

Se você não for usar o alto-falante por um longo período de tempo, desligue o interruptor do painel traseiro e certifique-se de deixar a unidade desconectada.

Recarregando a bateria interna

A unidade possui uma bateria recarregável embutida. Para recarregá-la, siga os seguintes passos:

1. Conecte o cabo de alimentação e conecte-o a uma tomada elétrica.
2. Na parte inferior esquerda da tela há um indicador de carga. Ele começará a ser intitulado, o que significa que está carregando.
3. Quando o indicador da bateria acender no canto superior esquerdo da tela, a bateria está totalmente recarregada. Em seguida, desconecte

o cabo de alimentação para interromper a recarga, o indicador da bateria desaparecerá da display.

Indicador de bateria interna

1. Pressione o botão de volume para verificar a capacidade da bateria em repouso.
2. Quando a bateria estiver fraca, uma luz indicadora no painel superior acenderá e começará a titulação.
3. Quando o som do alto-falante estiver anormal, recarregue a bateria para manter a vida útil da bateria.

Nota: Por favor, se não for utilizado por longos períodos de tempo, carregue a bateria pelo menos uma vez por mês para evitar encurtar sua vida útil.