

moonki®

Bluetooth Party Sound Tower

MW-T280

moonki®



 Bluetooth®

 
 
 
 
 
 
INTRODUCTION

In order to ensure safety and efficiency of the product, please read this manual carefully before operating. Keep the manual in a safe place for future reference.

1. Use this apparatus in moderate climates only. This product is for indoor use only.
2. No naked flame sources, such as lighted candles, should be placed on the apparatus.
3. To preserve our environment, dispose of used batteries according to your local laws or regulations.
4. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on apparatus.
5. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
6. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use.
7. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
8. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
9. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
10. This product is not a toy! Children should be supervised to ensure that they do not play with the product.

PRECAUTIONS

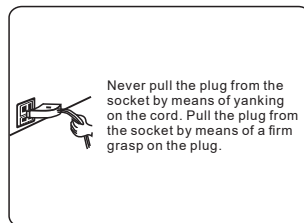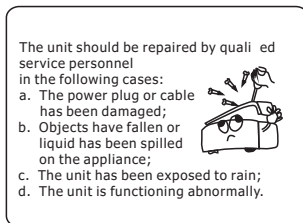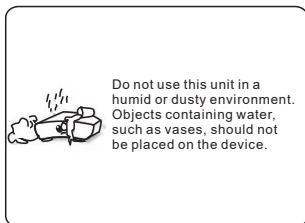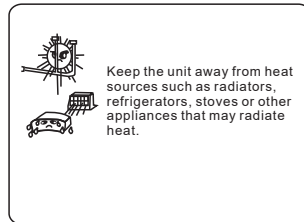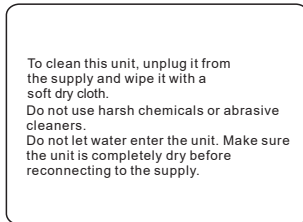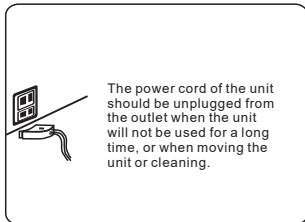


SAFETY WARNING

The unit uses AC 100-240V ~50/60Hz. If the AC exceeds this range, the unit will get damaged.

If the unit is in need of repair, please contact a qualified service technician. Do not attempt to repair it yourself.

In order to prevent hazards such as fire or electric shock, please keep the unit away from rain.

 
To avoid the risk of electric shock, do not open the unit.



Please adhere to the above-mentioned safety suggestions. If there are malfunctions found during operation, please turn off, unplug and contact customer service.

DESCRIPTION OF REMOTE CONTROL

 Before first use, please insert the 2 x AAA batteries provided separately.

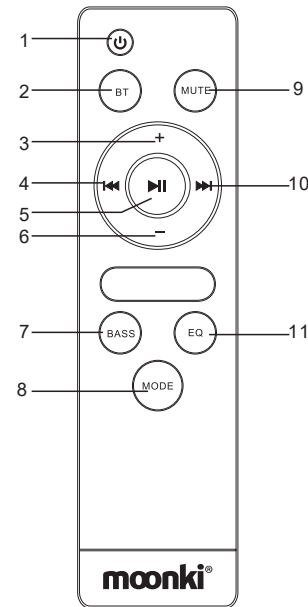

1. Power On/Off
2. Bluetooth
3. Volume Increase(+)
4. Previous
5. Play/Pause
6. Volume Decrease(-)
7. Bass
8. MODE (Switch between BT / AUX)
9. Mute
10. Next
11. EQ

SPECIFICATIONS

Power Consumption: 260W

Tweeter Speaker : 2x2.5"

 
Bass Speaker : 2x8"

Input Sensitivity: 880mV





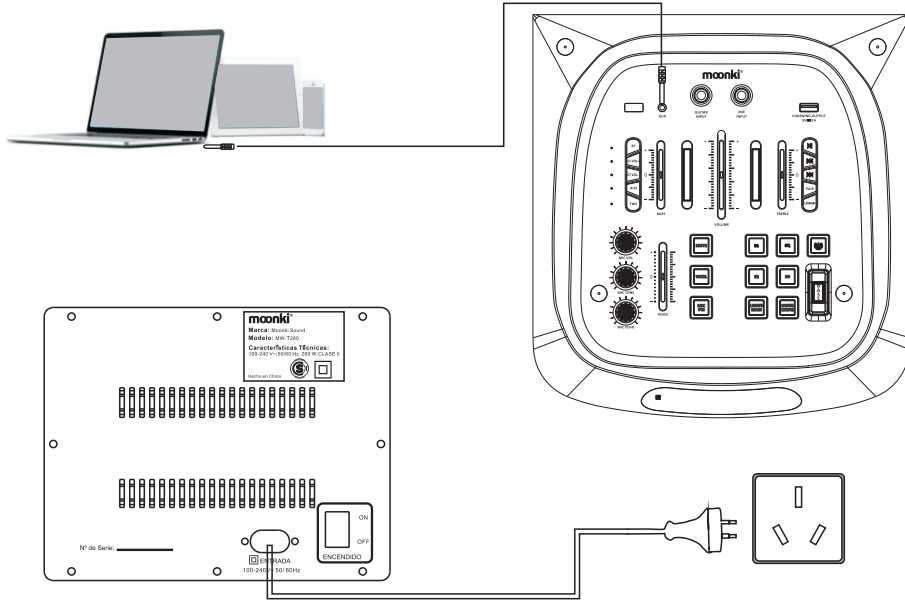


 


Power Supply : AC100V-240V ~50/60Hz













 









Separation : 40dB

SYSTEM CONNECTION



PANEL INSTRUCTION

 CHARGING OUTPUT 5V 1A	DC 5V, 1A USB Output for charging your devices (eg. smartphone).	 AUX	Aux input: Connect to the AUX output of your external device to play compatible files (AUX cable included).
 GUITAR INPUT	GUITAR Slot	 MIC INPUT	MIC Slot
 AUX	Press this button once to switch over to AUX mode.	 BT	Press this button once to switch over to Bluetooth mode.
 ON/STANDBY	ON/ STANDBY button	 TWS	Use TWS to pair with another MOONKI MW-T280 speaker
 Next	Next button	 Previous	Previous button

 UNPAIR	Bluetooth disconnect button	 PAIR	Bluetooth connect button
 MIC VOL	Microphone Volume Adjustment Button	 MIC ECHO	Microphone ECHO Adjustment Button
 VOCAL	Press this button to lower vocal frequencies during playback. Press again for normal playback. (Note: Not available for MIC/GUITAR input.)	 MIC TONE	Microphone Tone Adjustment Button to adjust the bass and treble of MIC input.
 MIC PRI	Press this button to make the microphone priority when music is played.	 MUTE	Press this button to mute the unit during playback.
 E1	Press the button for default equaliser effect 1.	 E2	Press the button for default equaliser effect 2.
 LIGHTS CENTRE	Press this button repeatedly to switch between the different centre light effects, and turn off the centre lights. (Note: The lights must be powered by pressing the Lights Main button first.)	 EQ	Press this button to choose between available equaliser effects (FLAT, CLASSIC, JAZZ, POP, ROCK)
 3D	Press to turn on or turn off the 3D audio effect.	 LIGHTS MAIN	Press this button once to turn on all lights. Press repeatedly to switch between the different main light effects. Press and hold to turn off all lights.
 TREBLE	Use this treble slider to turn up/down the treble effect.	 PAUSE	Press this button once to pause music being played. Press again to resume play; In FM mode, press this button to search and save the channels automatically, press again to stop the search.
 BASS	Use this bass slider to turn up/down the bass effect.	 EXTRA BASS	Press this button to turn on/off the extra bass effect.
 GT VOL+	Press this button to upload the volume of the guitar.	 VOLUME	Use this Volume slider to adjust the music volume.
 GT VOL-	Press this button to download the volume of the guitar.	 VOICE	Use this voice slider to raise or lower the human voice tone of microphone.

Bluetooth Operation

1. Press the BT button on the unit or the remote control to switch to the BLUETOOTH CONNECT mode.
2. Open the Bluetooth function on your external device (like a smartphone). Search for 'MW-T280' and connect to it.
3. Once connected, you can hear a small sound from the speaker.
4. You can use the ◀ or ▶ key on the unit or the remote control to control the tracks of the external device.
5. Press the ⏸ button on the unit or the remote control to stop/play music.
6. Press and hold the 🔌 button on the unit or the remote control to disconnect or reconnect the bluetooth.

Note: This speaker does not need a password.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Troubleshooting

Problem	Troubleshooting method
No Power	<ol style="list-style-type: none"> 1. Ensure that the AC power plug of the speaker is connected properly. 2. Ensure that there is power at the AC outlet.
No sound or poor sound	<ol style="list-style-type: none"> 1. Inspect the function and adjust the volume. 2. Check if speaker is muted.
Intermittent music in Bluetooth mode	Check if the effective connection distance is exceeded or whether there are obstacles between the speaker and BT device.
Remote control does not work	<ol style="list-style-type: none"> 1. Ensure that the right source is selected. 2. Use the remote control within its range without any objects between the remote control and the unit. 3. Try replacing the batteries ensuring correct polarities as marked. 4. Aim the remote control towards the receiver on the display screen of the unit.
Bluetooth can not search or connect	<ol style="list-style-type: none"> 1. If other bluetooth devices are connected to your phone, try disconnecting these first, then search and connect again. 2. Turn off the speaker and turn on again, then switch to bluetooth mode. 3. Turn off and turn on bluetooth on your external device.