

1080P Full HD Dual Lens Dash Camera

Instruction Manual

B-T47






Contents

Important Notice.....	3
Product Diagram.....	3
Set up and Installation.....	5
Function Description.....	6
Setting.....	7
Specification.....	13

Important Notice

1. This product is intended for use in motor vehicle only. DO NOT install the camera where it might block the driver's view of road (including the mirrors) or the deployment of the airbag.
2. As default, The A lens is facing backward, used to record inside of car; The B lens is facing forward, used to record outside of the car, cover the road.
3. Before using this camera, please format the memory card in the computer (select 32 KB unit size to format it), then insert the memory card first, and format the memory card in camera menu.
4. This camera records video at high resolution, Be sure to use high speed Micro SD card, memory card with writing speed over Class 10 or above is recommended, 32GB or 64GB cards are recommended.
5. For safety reasons, this camera has a relatively small built-in battery. It's used only for parking monitor(optional) and saving the video file after external power supply cuts of(car turns off).
6. Be sure the camera lens is clean and there is nothing blocking the lens.
7. DO NOT leave the camera in direct sunlight for a long period of time or where the temperature could go above 170°F (75°C).
8. WIFI and GPS are optional, not including the standard configuration.

Production Diagram

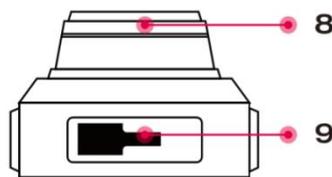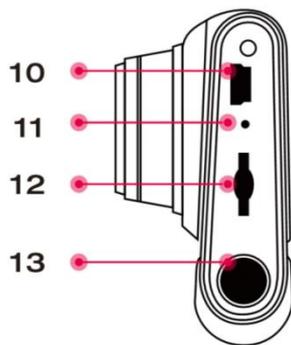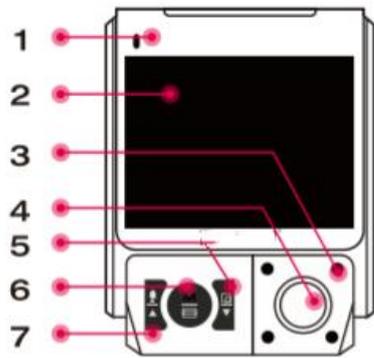

1. LED Indicator
2. Display Screen
3. IR Night light
4. A Rear lens
5. Down/Screen switch button
6. Mode/Menu/Lock Button
7. Up/Record Button
8. B Front lens
9. Port of holder
10. Mini USB Port
11. Reset Button (Inside the hole)
12. TF Micro SD Card Slot
13. Power/ OK Button


Button Function Explanation

Name	Picture	Function Explanation
Power/ OK Button		1. Power on (press this button for a short time), Power off (press this button for long time) 2. Ok Button, confirm what you want to choose 3. Recording video and photo, stop recording video. It recording video automatic when you charging. Press this button stop it, If you stop recording, it cannot

		recording video automatic, need to press this button again to start recording.
Mode/ Menu Button		<ol style="list-style-type: none"> 1. Press this button for a short time to enter into menu mode or exit menu mode 2. When it records the video, press this button short time, it will turn on/off audio. 3. Long press is defined as mode button, long press for two seconds (do not have to wait for the release of the button) jump mode
UP/ Record Button		Short press is defined as the up button, short press in video mode to turn on/off recording, short press in playback mode with the down button, short press to scroll up and down to select the file.
Screen switch/Down Button		<ol style="list-style-type: none"> 1. Flip down by short press 2. Short press to switch display mode (in video recording, video standby can be switched)

When the machine is charged, it will record video automatically, if you want to end or stop recording, please press  button.

Set up and Installation

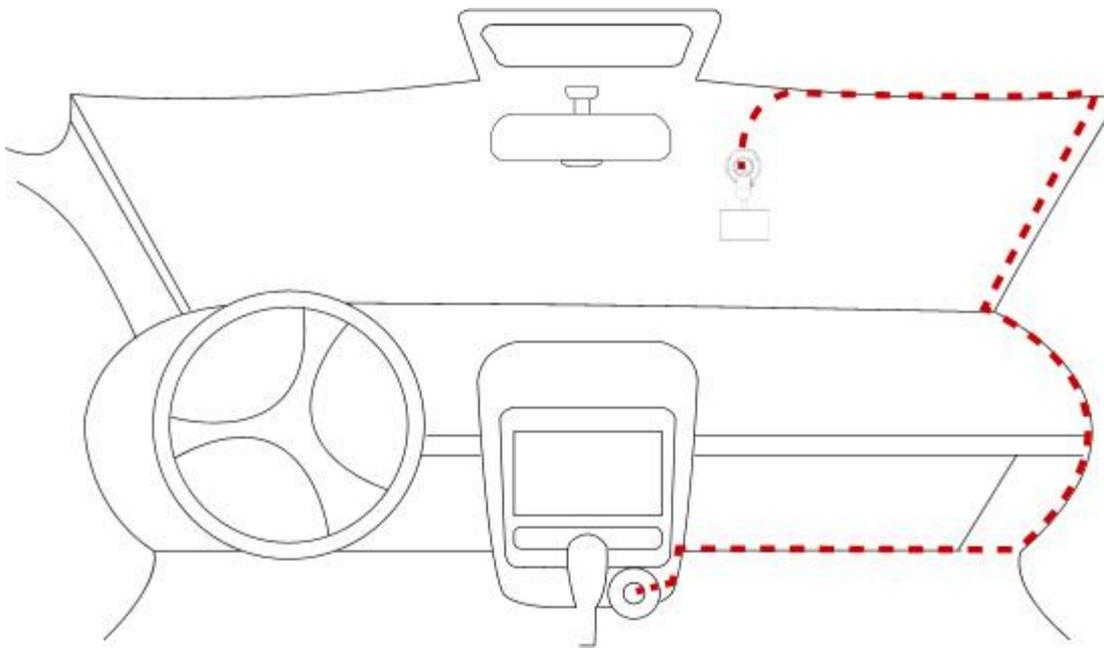

1. Use the 3M holder sticker mount or suction cup mount to install the B-T47 dash cam on the windshield, recommended position is near the rearview mirror near the passenger seat, adjust both lens angle for best coverage.

2. Plug the included power adapter into the car cigarette lighter socket, the indicator will light up meaning power is on.
3. Connect the power adapter and the dash cam, and route the excess cable alongside the interior trim for better looking.
4. Start your car, the camera will automatically power on, check the lens angle and coverage, make sure all functions works well before going on the road.

Function Description

Power on/off:

1. Power on: The device will automatically enter video recording mode when press the Power Button  or connect the device to car charger.
2. Power off: Press and hold the power button  until “Goodbye” appears on the screen.

After the car breaks down, the device will automatically power off when the car charger stops supplying power.

Video Recording mode:

1. Power on: The device will automatically enter video recording mode when press the Power Button  or connect the device to car charger.
 - The Red Indicator on front of unit will illuminate and blink.
 - The recording icon  will change to red and blinking, it means the device is recording video normally.
2. Press the power button  will stop recording.
 - The Red Indicator on front of device will stop blinking.
 - The Red icon “” will disappear, it means the device has stopped recording.
3. Press the power button  again will start the device recording again.

Photo Mode:

1. When the device is in the standby state (when recording is stopped), press the menu button  about 2 seconds until the photo icon  appears on the top

of the screen, it means the device is in the photo mode.

2. Press and release power button  to take a photo.

Playback Mode:

1. When the device is in the standby state (when recording is stopped), press the menu button  about 2 seconds until the photo icon  appears on the top of the screen, it means the device is in the playback mode.
2. Press the up/down button  to select your desired file. If you want to play a video file, please press the power button  to play video.

Recording adjustment:

- When recording video, press menu button  to lock the current file. The  will appear on the LCD Display. The locked file cannot be deleted.
- When recording video, press up button , you can switch screen display.

Setting

Video:

1. Press the menu button  to enter the Video settings menu.
2. Using the  Buttons to select and highlight the function you would like to adjust. Press the menu button  again to enter the subsequent menus.
3. Press menu button  again to enter the System settings menu.
4. Press menu button  again to exit the menu interface.

Press the power button  to enter or confirm the settings.

Video Settings:

- Resolution (To set or reset the resolution of the video):
3MHD P30/FHD P60/FHDP30/3MHD P30+HDP30/FHD P30+FHD P30/FHD
P30+HD P30/HD P30+FHD P30
- Loop recording

Options: off/1min/3mins/ 5mins/10mins

Save the video for the setting time. When the card is full, the oldest video will be automatically overwritten.

- HDR

Options: On/Off

If HDR is on, the highlights and shadows on the video can be displayed with richer details. The larger the dynamic range, the richer the levels.

- Exposure

To set or reset the exposure level as desire. This will cause the video become dark or bright.

- G-sensor

Options: Off/Low/Medium/High

If the G Sensor is activate, when over limitation braking/shocking/vibration occurring during recording. The existing recording video file will be automatically entered to locked mode.

- Motion Detection

Options: On/Off

If Motion Detection is on, the device will record a 15 seconds video when the sensor detects any movement in front of the device.

- Record Audio

Options: On/Off

Set to On or Off as desire. If set to Off, no sound will be record.

- Date Stamp

Options: On/Off

Set to On or Off as desire. If On is selected, the date and time will imprint and record on video.

System Settings:

- WIFI

Options: On/Off

Set or close WIFI. The method to connect WIFI you can check: **Install and use WIFI**

- Date/Time

Set or reset the actual time and day.

- Night Mode

Options: On/Off/auto

If Night Mode is on, the IR light will be turned on. It will have good video effect when you at night, even there isn't lamp. IR mode is only for the

in-car, the recording video will be black and white.

- **Screen Saver**
Options: Off/15 Sec/30 Sec/1 min
If you set the screen saver time, the screen will enter blank screen according to the setting time to protect screen.
- **Delay Power Off**
Options: Off/5 Sec/10 Sec /15Sec
If you set the delayed power off time, when the device is powering off, the setting time will be extended and then power off to confirm the integrity of the last video.
- **Beep Sound**
Options: On/Off
To turn on/off beep sound when press the buttons.
- **Language**
Options: English/French/Spanish/Portuguese/German/Italian/Simplified Chinese/Traditional Chinese/Russian/Japanese.
To select the language you want. (On the screen display)
- **Frequency**
Options: 50Hz/60Hz
To set or reset the frequency of the AC power to reduce interference of fluorescent lights (In the USA and Canada, set it to 60Hz).
- **Parking monitor**
Option: Off/low/middle/high
If the parking monitoring function is turned on, the device is power off. When the vehicle is impacted by a certain amount of force, the device will automatically start for 15 seconds recording, then automatically power off again. And it will start recording again at the next collision, and so on. When the car starts, the recording will become normal long recording.
- **Format**
This function will format (erase all data) the Micro SD Card.
Warning: When formatting the card, all files will be erased. Upload all files you would like to save to your PC BEFORE you start to format the card.
- **Default Setting**
Reset all settings to factory preset. Please set it carefully, the original personalized setting parameters will not exist after setting.
- **Version**
To check the device version.

Photo Settings:

- In the photo mode, short press the menu button  to enter photo menu mode.
- Use the up/down button ▼/▲ to select the function you would like to adjust. Press the power button  to enter the subsequent menus.
- Press the  Button to enter the System settings menu.
- Press the  Button again to exit the menu mode.
- Press the power button  to enter or confirm the settings.
- Capture Mode:
Options: Single/2S timer/5S timer/10S timer
Single mode: Press the OK button to take a photo immediately.
Timed mode: Press the OK button, the device will take a photo after the setting time is up.
- Resolution (To set or reset the resolution of the photo):
Options:
 - 12M (4032 X 3024 pixels)
 - 10M (3648 X 2736 pixels)
 - 8M (3264 X 2448 pixels)
 - 5M (2592 X 1944 pixels)
 - 3M (2048 X 1536 pixels)
 - 2MHD (1920 X 1080 pixels)
 - 1.3M (1280 X 960 pixels)
 - VGA (640 X 480 pixels)
- Quality
Options: Fine/ Normal/Economy
To set or reset the quality of picture to Fine/Normal/Economy as desire.
- ISO
Options: Auto/100/200/400
To set or reset it to Auto/100/200/400 as the brightness of background.
- Anti-Shaking
Options: On/Off
If the Anti-Shaking is on, the photo will be clearer and not blurred by hand

shaking.

- Date Stamp

Options: Off/Date/Date&Time

To set or reset off/date/date time. If it is on, the date and time will imprint on the picture.

- Exit

Press the power button  to Select OK to exit the setting menu mode.

Playback Settings:

- In the playback mode, short press the menu button  to enter playback menu mode.
- Use the ▼/▲ buttons to select the function you would like to adjust.

Press the power button  to enter the subsequent menus.

- Press the menu button  again to enter the System settings menu.
- Press the power button  again to exit the menu mode.
- Press the power button  to enter or confirm the settings.

- Delete

Options: Delete Current/ Delete All

Deletes the current files, or all the files on the display as per the on-screen instructions.

- Protect

Options: Lock Current/Unlock Current/Lock All/Unlock All

The Protect function protects a file from being erased accidentally or loop recording to cover. To delete a protected file, it must first be unlocked.

- Slide Show

Options: 2 Sec/5 Sec/8 Sec

To set or reset the time which you play the file via slide show

- Exit

Press the power button  to Select OK to exit the setup menu

Install and use WIFI:

1. Download APP “WitCam” from App store and Google Play
2. Press  to enter system to set up, choose WIFI and open WIFI, it will show SSID name and password in the led display, SSID name is NVT_CARDVcc8cdaa50ee
3. Open phone set up, and find SSID name (default password is 12345678),input password, and connect WIFI.
4. Open app “WitCam” in the phone, click and add the device , it can connect to dash camera, then control taking photos, recording by smartphone

WitCam APP downloaded address:

<https://play.google.com/store/apps/details?id=com.ligo.awecamera>

Install and use GPS player:

To view the GPS map using a mobile phone APP, you need to download the video file in the Dash Camera to the mobile phone for normal viewing. Download the player

from below link and install



, then open GPS video, with the downloaded

player to play it.

GPS player downloaded address.

<http://www.gpsplayer.net/setupzj.html>

Connect Computer:

1. Connect the supplied USB Connection Cable to the Mini USB Port on the side of the unit.
2. Connect the full size USB end of the cable to a USB Port on the Computer.
3. The unit will automatically power on and display USB modes: “Mass Storage”.
4. Wait a few moments, the storage folder for the unit will appear on the computer screen.
5. Follow the on-screen instructions to view, watch, upload or save the files to the PC.

NOTE:

Compatible computer operation system: Windows XP; Windows Vista; Windows 7; Windows 8 and Windows 10.

Specification:

Video Resolution	3MHD P30 FHD P60 FHD P30 3MHD P30 + HD P30 FHD P30+FHD P30 FHD P30+HD P30 HD P30 +FHD P30
Photo Resolution	12M, 4032 x 3024 pixels 10M, 3648 x 2736 pixels 8M, 3264 x 2448 pixels 5M, 2592 x 1944 pixels 3M, 2048 x 1536 pixels 2MHD, 1920 x 1080 pixels 1.3M, 1280 x 960 pixels VGA, 640 x 480 pixels
Display Screen	2.0 inch color IPS HD display
CPU	NTK96675
Sensor	IMX307+GC2053
Sensor Pixel	Front: 2 M Rear: 2M
View Angle	Front: 140° Rear:146°
Memory Card	TF Card 128GB
Car charger	DC 5V 2A
Storage	Video: MP4 Photo: JPEG
Working temperature	-20°~65°
Storage time for 8GB card	About 46 minutes

Storage time for 16GB card	About 92 minutes
Battery Life	About 10 minutes

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.