 


**DEALERS MUST TRANSLATE THEIR OWN LANGUAGE OF  
MANUAL INSTRUCTIONS BELOW FOR YOUR MARKET  
PLEASE READ THE INSTRUCTIONS  
CAREFULLY BEFORE USE**

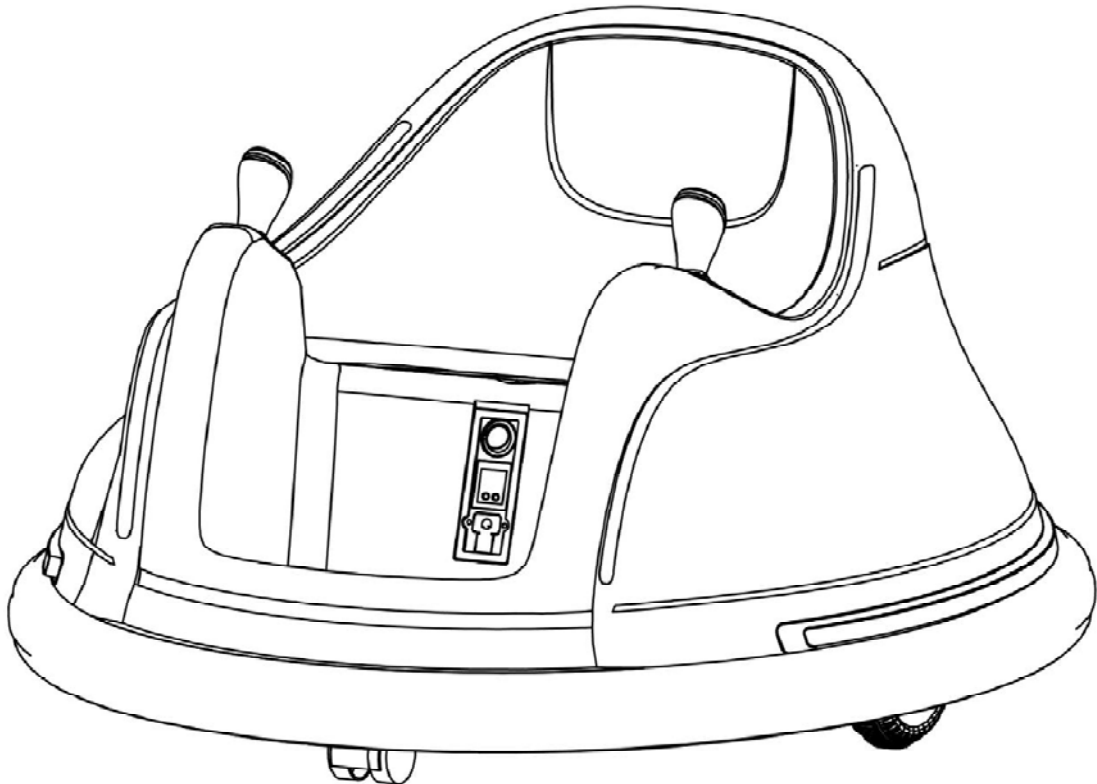

**Styles and colors may vary**

**Keep the package away from children and dispose of properly before  
use**

## 1. Specification:

|         |                      |
|---------|----------------------|
| Motor   | 2 *15W               |
| Battery | 12V4.5AH*1           |
| Charger | 12V500MA / 12V1000MA |
| Speed   | 1.2-2.1km/hr         |

Suitable age : 37-96 months

Load Capacity: Under 30KGS

Size of car:73\*73\*44CM

 
Power way: Charging type

Charge time : 8-12 hours

## 2.Packing list:

| Number | Name                      | Quantity |
|--------|---------------------------|----------|
| 1      | Remote Control (optional) | 1        |
| 2      | Charger                   | 1        |
| 3      | Manual                    | 1        |

## Assembly tools required:

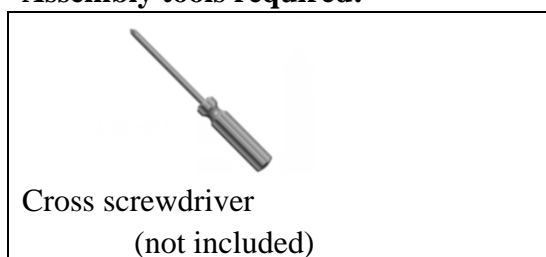


### WARNING!

FOR THE SAFETY OF YOUR CHILDREN , PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS.KEEP THIS GUIDE FOR FUTURE REFERENCE.

- ADULT ASSEMBLY REQUIRED. The product contains small parts, which are for adult assembly only. Keep children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.

### 3.Operation Instruction:

 
#### A. Power Connecting& Install seat

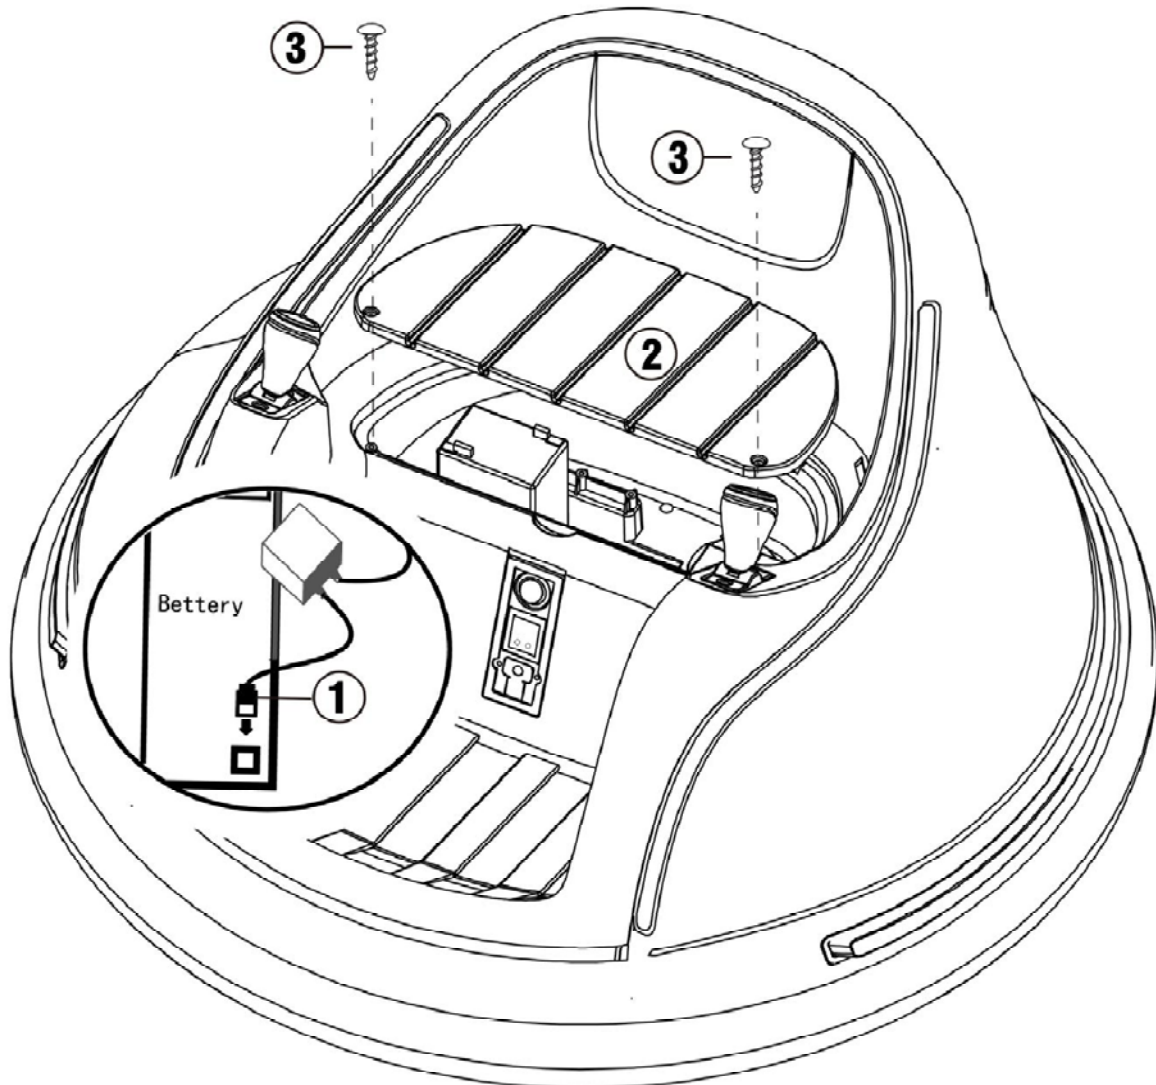

1. Open the battery under the seat, connect the battery terminals (red to red,Black to black)
2. Cover the seat on the battery
3. Fix the seat with screw by cross screwdriver


## B. Function introduction (Optional)
 
### Optional 1

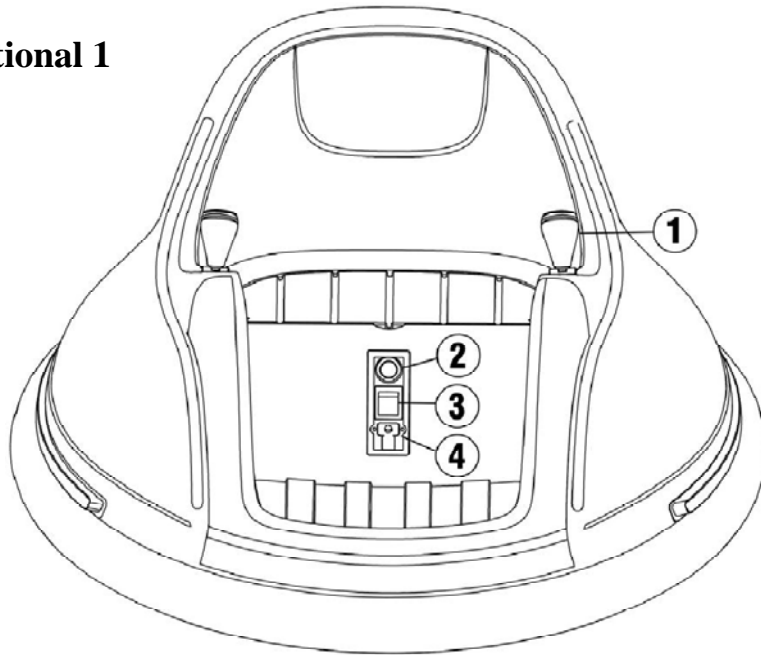

1. Forward-backward button: control the car forward or backward ,middle is stop
2. Light button: Turn on /off the light
3. Power button: Turn the vehicle on and off
4. Socket : Charge

### Optional 2

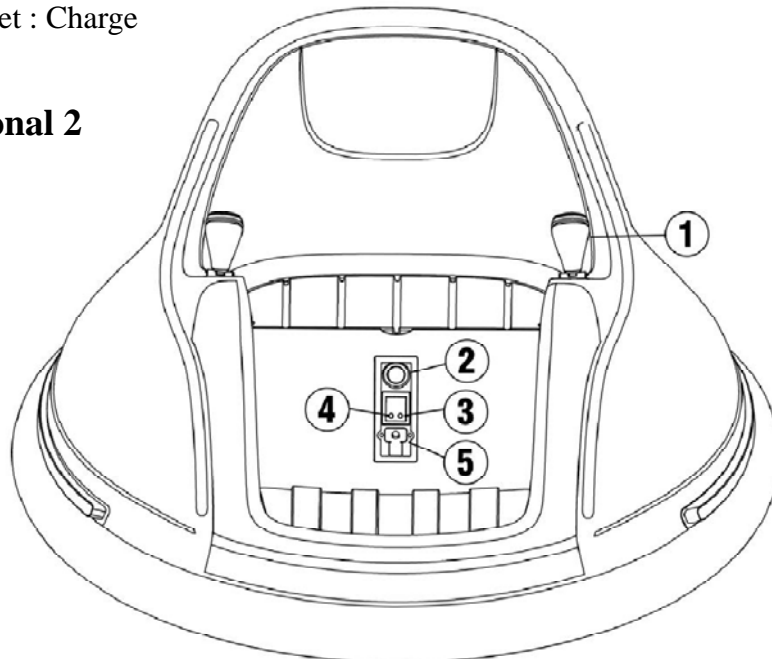 


1. Forward-backward button: control the car forward or backward ,middle is stop
2. Power button: Turn the vehicle on and off
3. Music button: Play music or reduce music sounds
4. Light button: Turn on /offthe light (increase music sounds)
5. Socket : Charge

Turn on the power to automatically search for Bluetooth

## C. Use The Remote Control

 **NOTE: This product does not included the AAA(1.5v)**

**Only allow adult to use remote control, can not let the children touch**

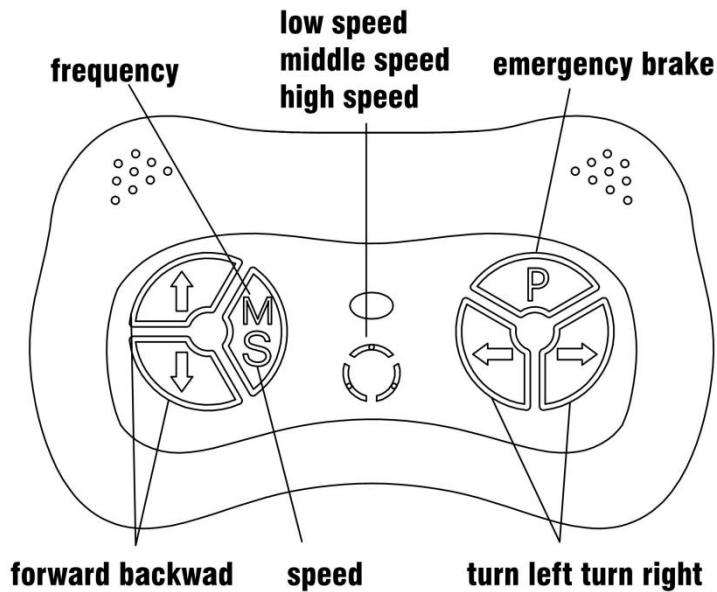

Operation manual : For the first time to use (Or Replace the battery)Need to frequency bind

- Take out the remote control, install the battery
- Long press on the button "M" for 2-4 seconds,Indicator light will flash
- Turn on the power of the car,Indicator lightflashes to long lighting, then frequency bindsucceed
- If the frequency bind failed (Indicator lightflashes) , remove the battery and repeat steps 1~3
- remote control without operation after 10 seconds, Indicator light will off into power saving mode
- Button Description:  $\triangle$  forward  $\nabla$ backward  $\triangleleft$  turn left  $\triangleright$ turn right

P: emergency brake, press it and the running function will fail, press again, it release

## 4. Safety



### **WARNING!**

#### **PREVENT INJURIES AND DEATHS:**

- **NEVER LEAVE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes.
- Always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 37 months due to its maximum speed; Maximum user weight is 30 kgs.
- This toy has no brake.

#### **Rules for Safe Riding**

- Keep Children within safe riding areas:

Never use in roadway, near motor vehicles, on lawn space, on or near steep inclines or steps swimming pools or other bodies of water;

Use the toy only on flat surfaces. Such as inside your house, garden or playground

- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicles only in the daytime or well-lit area.
- It is prohibited to change the circuit or add other electric parts.
- Inspect wires and connections of the vehicle periodically
- Do not let any child touch the wheels or be near them when the car is moving.

NEVER pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case ONLY.

- Charge the battery in a dry area ONLY.

- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.

 
#### **Wash hands after handling.**

- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside case electric shock.. Only adults may handle or charge the batter. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.

- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with bracket, Battery can fall out and injure a child if vehicle tips over.
- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge times as 8 to 12 hours, less than 20 hours at most.

## 5. Charging

**ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!**

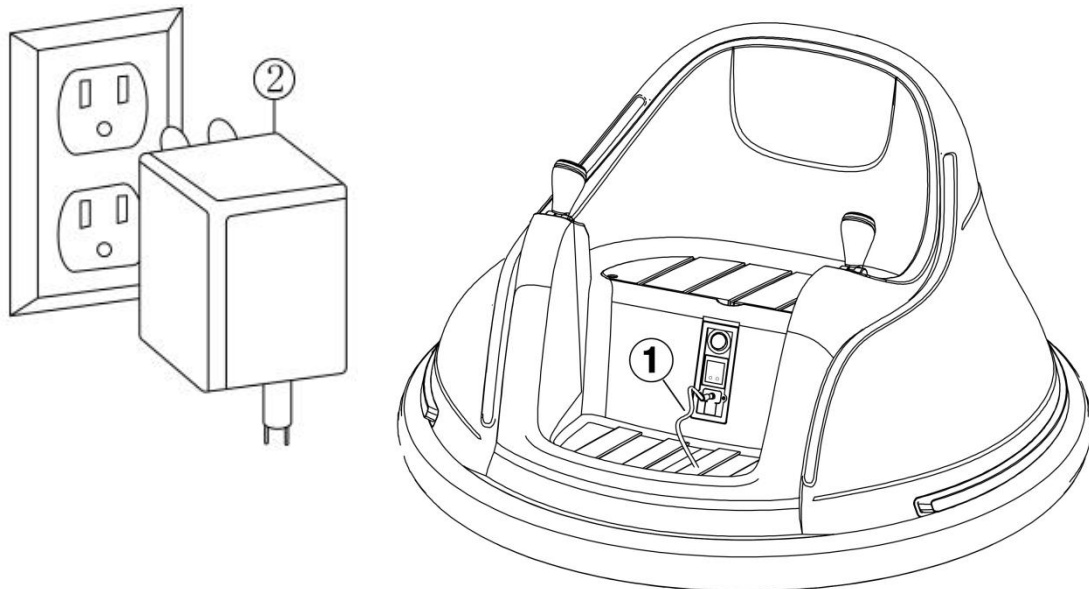

Put the charger plug into the socket as picture

## 6. Battery Replacement

To avoid losing power , follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquid to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so many create a short , causing the fuse to trip.

## 7.Troubleshooting Guide

| Problem  | Possible Cause                               | Solution   |
|--|--|--|
| Vehicle dose not run   | Battery low on power                         | Recharge battery   |
|  | Fuse has broken                              | Replace,see<Fuse>  |
|  | Battery connector or wires are loose         | Check that battery connectors are firmly plugged into each other. If wires are loose around the motor <b>contact your distributor please</b>                 |
|  | Battery is dead                              | Replace battery , <b>contact your distributor please</b>   |
|  | Electrical system is damaged                 | <b>Contact your distributor please</b>   |
|  | Motor is damaged                             | <b>Contact your distributor please</b>   |
| Vehicle dose not run very long                                 | Batter is under charged                      | Check that the battery connectors are firmly plugged into each other when recharging   |
|  | Battery is old                               | Replace battery, <b>contact your distributor please.</b>   |
| Vehicle runs sluggishly  | Battery low on power                         | Recharge battery, <b>contact your distributor please.</b>  |
|  | Battery is old                               | Recharge battery, <b>contact your distributor please.</b>  |
|  | Vehicle is overload                          | Reduce weight on vehicle. Maximum user weight is 30 kgs.   |
|  | Vehicle is being used in harsh conditions    | Avoid using vehicle in harsh conditions, see<safety>   |
| Vehicle needs a push to go forward                             | Poor contact of wires or connectors          | Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, <b>contact your distributor please.</b>           |
|  | “Dead Spot” on motor                         | A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. <b>Contact your distributor please.</b> |
| Loud grinding or clicking noises coming from motor or gear box | Motor or gears are damaged                   | <b>Contact your distributor please.</b>  |
| Battery with not recharge                                      | Battery connector adapter connector is loose | Check that the battery connectors are firmly plugged into each other.  |
|  | Charger not plugged in                       | Check that the battery charge is plugged into a working wall outlet.   |



|                                    |  |   |
|------------------------------------|--|---|
|                                    | Charger is not working                     | <b>Contact your distributor please.</b> |
| Charger feels warm when recharging | This is normal and not a cause for concern |   |

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

## 8.Maintaining

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

## FCC Statement

### Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.