

SAFETY INSTRUCTIONS

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



IMPORTANT SAFETY INSTRUCTIONS

- 1. Read instructions All the safety and operating instructions should be read before the appliance is operated and should be saved for future reference.
- Retain instructions The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow instructions All operation and use instructions should be followed.
- 5. Water and Moisture The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like. 6. Carts and Stands - The appliance should be used only with
- a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces
- 7. Wall and Ceiling Mounting The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 8. Ventilation The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 9. Heat The appliance should be situated away from heat sources such as radiators, heat registers. stoves or other appliances (including amplifiers) that produce heat. 10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 11. Grounding or Polarization Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
- 12. Power-Cord Protection Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the appliance.
- 13. Protective Attachment Plug The appliance is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the

PyleUSA.com

You will have the ability to connect external devices and stream its audio through the radio's speakers.

*Please be sure to turn the function switch selector to the 'USB' mode to listen to your connected device:

AUDIO IN-OUT JACK PANEL AUDIO DEVICE OUT



AUDIO OUTPUT:

You will have the ability to connect the radio to external speaker systems.

AUDIO AMPLIFLER INT AUDIO IN-OUT JACK PANEL (R OUTPUT AUDIO INTPUT

A. Before connecting, please make sure to turn off the power.

1 ON/OFF - Volume Control

Previous / Volume - (Press for previous song / Hold for volume down)

10 Next /Volume + (Press for next song / Hold for volume up)

2 Radio Tuning Control

4 Dial Control

6 SD Card Reader

12 AC Power Cable

PyleUSA.com

13 Wire Antenna 14 Aux Input 15 RCA Output


- B. Be sure the connecter is fitted appropriately into the connector.
- Non-secure or loose connections will result in distortion and unwanted noise. C. The connecter lines / cables should not be tight. There should be enough 'slack' in the line.

Visit www.PyIeUSA.com for additional product information and support

PyleUSA.com

Functions & Controls

- 14. Cleaning The appliance should be cleaned only as recommended by the manufacturer. 15. Power Lines - An outdoor antenna should be located away from power lines.
- 16. Outdoor Antenna Grounding If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/ NFPA No.70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna
- discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. 17. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 18. Object and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 19. Damage Requiring Service The appliance should be serviced by qualified service personnel
- A. The power supply cord or the plug has been damaged; or
- 3. Objects have fallen, or liquid has been spilled into the appliance; or
- C. The appliance has been exposed to rain; or
- D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
- E. The appliance has been dropped, or the enclosure damaged.
- 20. Servicing The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

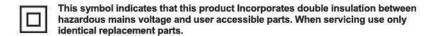

Cleaning the unit: Do not use harsh chemicals on this unit. Clean by lightly wiping with a soft cloth and water. Be sure to dry completely

Note: Because of the improving needs of customers, any changes to the functions, specifications or the product, may be changed without any notice.



PyleUSA.com

RADIO RECEPTION:

00000000000

.

- 1. Turn the VOLUME CONTROL clockwise until a ?click? is heard 2. Set the FUNCTION Selector to AM or FM position.
- 3. Select required receiving band with the BAND SWITCH.
- 4. Turn the TUNING CONTROL to select the desired radio station.
- 5. Adjust the VOLUME CONTROL to obtain the desired sound level from the Speaker
- 6. To turn the radio off, turn the VOLUME CONTROL Counter-clockwise until a ?click? is heard.

TIPS FOR GOOD RADIO RECEPTION

Use the FM WIRE ANTENNA and fully extend into an open area.

To insure best AM sensitivity, try repositioning the unit until the best reception is obtained.

USB/SD PLAY BACK FUNCTION:

- 1. Using the function selector, choose 'USB'
- 2. Inserting a USB or SD card will automatically playback compatible audio files
- 3. While playing from a USB flash drive, inserting a SD card will take priority and play SD card files 4. When both flash media drives are inserted, USB will take priority and play first
- *Please note the unit is compatible with only MP3 and WMA file types.

*The unit is compatible with flash memory storage units smaller than 16GB

BLUETOOTH FUNCTION:

Turn the 'ON / OFF-Volume Control' knob clockwise until you hear a 'beep' sound. This will turn the Blue power light on.

Set the FUNCTION selector to 'USB' mode

Press and hold the 'Play / Pause' button to change to 'Bluetooth Mode' Turn on your Bluetooth in your device. Search for ?Pyle Turntabb? and connect. When connected

successfully, the blue light will remain on. To ensure optimum Bluetooth sound quality, please remain within 30 feet of the product during connection.

*Press and hold the 'Play / Pause' button to switch between audio modes.

CELLPHONE/SMARTPHONE CHARGE FUNCTION:

When the unit is power ed on, connect your USB cable into the port -- then connect your device to the USB cable. Your phone will now charge.

AUX PLAYBACK FUNCTION - CONNECTED DEVICE To play audio from Aux (3.5mm) connected input devices

- Connect your device via audio cable and connect to the unit
- Switch the 'Function Selector', located on the front panel, to USB Mode
- On the side panel, press and hold the Play / Pause button for 5 seconds
 - The LED indicator light will blink and shine orange when the unit is ready to stream audio

Visit www.PyleUSA.com for additional product information and support

PyleUSA.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment