

ozobot

Removing Washable Marker

Marker ink washes from skin with warm, soapy water. If markers come in contact with washable fabrics, immediately launder in hot water and detergent without pre-wash solution or chlorine bleach. Repeat wash cycle if necessary. Keep markers away from wallpaper, painted walls, finished and unfinished wood, vinyl, carpeting, countertops, and other stainable materials. Markers are intended for external use only and should not be ingested. These instructions are provided as a courtesy to Ozobot customers. We cannot be held responsible for the results obtained from these washing instructions.

Ozobots conform to the requirements of ASTM standard consumer safety specifications on Toy Safety F963. Markers conform to ASTM D4236.

Battery is 3.7V, 135mAh (3.7*0.135=0.500W).

Product and colors may vary. The toy contains batteries that are non-replaceable. Please retain this packaging for future reference.

Not recommended for children under the age of 6.

For more information please contact us at info@ozobot.com

Product name: OZOBOT Evo

FCC ID: 2A6UW-040101

IC: 28624-040101

Charging Instructions

To charge your Evo Classroom Kit, simply drop the robot wheels-down in the cradle to begin wirelessly charging. Green LEDs will flash to indicate charging is in progress and light up solid green when charge is complete.

User Manual

Go to ozobot.com/manuals. The information provided in the user manual is for reference purposes only and may be modified. The latest version of the manual can be found at ozobot.com/manuals.

Not all devices are compatible. Check ozobot.com/devices for more information.

Limited Warranty

Ozobot limited warranty information is available online: ozobot.com/supply/warranty.

Battery Warning

To reduce risk of fire or burns, do not attempt to open, disassemble, or service the battery pack. Do not crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water.

The transformer, power supply or battery charger used with the device are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired. Battery is 3.7V, 135mAh (3.7*0.135=0.500W).



Input: 5V \equiv 0.5A

This toy is only to be connected to equipment bearing either of the following symbols.



Use only with the output of charger is 5V DC, 0.5A supply.



WARNING: For the purpose of recharging the battery, only use the detachable supply unit provided with this toy (output of charger is 5V DC, 0.5A).



WARNING:

CHOKING HAZARD—

Toy contains a small ball and small parts.

Not for children under 3 years.

WARNING: This toy produces flashes that may trigger epilepsy in sensitized individuals.

Model: 040101

SKU: 051810-01-03

Manufactured by Ozobot

©Ozobot | ©2022 Ozo Edu., Inc.

3 Corporate Plaza Drive,
Suite 100,
Newport Beach, CA 92660

ozobot.com

Rev 1 - 22

