

PBX-1212A

# **QFX**

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

1. **TF:** TF memory card slot
2. **USB:** USB music player port
3. **VOLUME:** Master volume control knob
4. **AUX:** 3.5mm AUX input jack knob
5. **TREBLE:** Treble control knob
6. **BASS:** Bass control knob
7. **ECHO:** Echo control knob
8. **MIC VOL:** Microphone volume control
9. **12V:** 12V DC battery input
10. **AC 200V-240V INPUT:** AC power input jack
11. **LED SWITCH:** Switch to turn party lights ON or OFF
12. **POWER SWITCH:** ON/OFF power switch
13. **MICROPHONE INPUT:** Microphone input jack
14. **DISPLAY:** LCD display
15. **M.PRI/REPEAT:** Microphone priority and repeat playback mode functions
16. **REC.PLAY:** Recording and recording playback functions
17. **NEXT:** Short press for next track or next radio channel.
18. **PLAY/PAUSE:** Short press to play or pause music track.
19. **PREVIOUS:** Short press to select previous music track or previous radio channel.
20. **MODE:** Select between Bluetooth, FM or AUX/USB/TF modes



1. TF: ranura para tarjeta de memoria TF
2. USB: puerto de reproductor de música USB
3. VOLUMEN: perilla de control de volumen maestro
4. AUX: perilla de entrada AUX de 3,5 mm
5. AGUDOS: perilla de control de agudos
6. GRAVES: mando de control de graves
7. ECO: perilla de control de eco
8. M.VOL: control de volumen del micrófono
9. 12V: ¿Entrada de batería de 12 V CC? ¿O entrada de energía en su lugar?
10. ENTRADA DE CA 200V-240V: conector de entrada de alimentación de CA
11. INTERRUPTOR LED: interruptor para encender o apagar las luces de fiesta
12. INTERRUPTOR DE ENCENDIDO: interruptor de encendido/apagado

13. ENTRADA DE MICRÓFONO: toma de entrada de micrófono
14. PANTALLA: ¿Interruptor de pantalla ON/OFF?
15. M.PRI/REPEAT: prioridad de micrófono y funciones de modo de reproducción repetida
16. REC.PLAY: funciones de grabación y reproducción de grabación
17. SIGUIENTE CANCIÓN: presione brevemente para la siguiente pista o el siguiente canal de radio.
18. REPRODUCIR/PAUSAR: Presione brevemente para reproducir o pausar la pista de música.
19. CANCIÓN ANTERIOR: presione brevemente para seleccionar la pista de música anterior o el canal de radio anterior.
20. MODO: seleccione entre los modos Bluetooth, FM o AUX/USB/TF

1. TF : emplacement pour carte mémoire TF
2. USB : port du lecteur de musique USB
3. VOLUME : bouton de contrôle du volume principal
4. AUX : bouton de prise d'entrée AUX de 3,5 mm
5. TREBLE : bouton de contrôle des aigus
6. BASS : bouton de contrôle des basses
7. ECHO : bouton de contrôle de l'écho
8. M.VOL : contrôle du volume du microphone
9. 12V : Entrée batterie 12VDC ? Ou une entrée d'alimentation à la place ?
10. ENTRÉE AC 200V-240V: Prise d'entrée d'alimentation AC
11. INTERRUPTEUR LED : interrupteur pour allumer ou éteindre les lumières de fête
12. INTERRUPTEUR D'ALIMENTATION : interrupteur marche/arrêt
13. ENTRÉE MICROPHONE : Prise d'entrée microphone
14. AFFICHAGE : Commutateur d'affichage MARCHE/ARRÊT ?

15. M.PRI/REPEAT : Priorité au microphone et fonctions de mode de lecture répétée
16. REC.PLAY : Fonctions d'enregistrement et de lecture d'enregistrement
17. NEXT SONG : Appuyez brièvement pour accéder à la piste suivante ou à la station de radio suivante.
18. PLAY/PAUSE : Appuyez brièvement pour lire ou mettre en pause la piste musicale.
19. CHANSON PRÉCÉDENTE : appuyez brièvement pour sélectionner la piste musicale précédente ou la chaîne de radio précédente.
20. MODO : Choisissez entre les modes Bluetooth, FM ou AUX/USB/TF

## TRUE WIRELESS STEREO (TWS)

**1** Turn both speakers ON.  
Encienda ambos altavoces.  
Allumez les deux haut-parleurs.

**2** Press "MODE" on both speakers to enable BLUETOOTH. **BLUETOOTH**  
Presione "MODE" en ambos parlantes para habilitar BLUETOOTH. **BLUETOOTH**  
Appuyez sur "MODE" sur les deux enceintes pour activer BLUETOOTH. **BLUETOOTH**

**3**

**4** On your device, go to bluetooth and select QFX PBX-121A. Enjoy!  
En su dispositivo, vaya a bluetooth y seleccione QFX PBX-121A. ¡Disfrutar!  
Sur votre appareil, accédez à Bluetooth et sélectionnez QFX PBX-121A. Profitez!

Note: Next time you put both speakers in Bluetooth mode at the same time, speakers will connect automatically.

Nota: La próxima vez que ponga ambos altavoces en modo Bluetooth al mismo tiempo, los altavoces se conectarán automáticamente.

Remarque: la prochaine fois que vous mettez les deux haut-parleurs en mode Bluetooth en même temps, les haut-parleurs se connecteront automatiquement.

## HOW TO USE FM RADIO:

1. Use the "MODE" button to enable FM mode.
2. In FM mode press the "PLAY/PAUSE/TWS" button to automatically search and store FM Channels.
3. Press next or previous button to change the saved FM Channel.

1. Presione el botón "MODE" para habilitar el modo FM.
2. En el modo FM, presione el botón "PLAY/PAUSE/TWS" para buscar y almacenar automáticamente el canal FM.
3. Presione el botón siguiente o anterior para cambiar el canal FM guardado.

1. Appuyez sur le bouton "MODE" pour activer le mode FM.
2. En mode FM, appuyez sur le bouton « PLAY/PAUSE/TWS » pour rechercher et mémoriser automatiquement la chaîne FM.
3. Appuyez sur le bouton suivant ou précédent pour changer le canal FM enregistré

## BLUETOOTH:

Use the MODE button to enable Bluetooth on the PBX-121A. Open the Bluetooth settings on your mobile device and search for QFX PBX-121A. Select the option to pair both devices together. You can now sit back and enjoy the music from your favorite app. You won't need reconnect the Bluetooth again when switching through modes.

Use el botón MODE para habilitar Bluetooth en el PBX-121A. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX PBX-121A. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

Utilisez le bouton MODE pour activer Bluetooth sur le PBX-121A. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX PBX-121A. Sélectionnez l'option pour coupler les deux appareils ensemble. Vous pouvez maintenant vous asseoir et profiter de la musique de vot.

## CHARGING THE SPEAKER


The PBX-121A can be operated on AC power or from its internal rechargeable battery. Use the supplied charging cable to charge the speaker (8-12 hours to fully recharge). When using the unit while connected to AC power, be sure that the battery switch is switched ON. Fully charge the speaker on the same day that the battery power runs out. Waiting an extended period before recharging may affect the performance of the battery.

## CARGA DEL ALTAVOZ

El PBX-121A puede funcionar con alimentación de CA o con su batería interna recargable. Utilice el cable de carga suministrado para cargar el altavoz (entre 8 y 12 horas para recargarlo por completo). Cuando utilice la unidad mientras está conectada a la alimentación de CA, asegúrese de que el interruptor de la batería esté encendido. Cargue completamente el altavoz el mismo día en que se agote la batería. Esperar un periodo prolongado antes de recargar puede afectar el rendimiento de la batería.

## CHARGER LE HAUT-PARLEUR

Le PBX-121A peut fonctionner sur secteur ou sur sa batterie interne rechargeable. Utilisez le câble de charge fourni pour charger le haut-parleur (8 à 12 heures pour une recharge complète). Lorsque vous utilisez l'appareil alors qu'il est connecté à l'alimentation secteur, assurez-vous que le coupe-batterie est sur ON. Chargez complètement le haut-parleur le jour même où la batterie est épuisée. Attendre une période prolongée avant de recharger peut affecter les performances de la batterie.

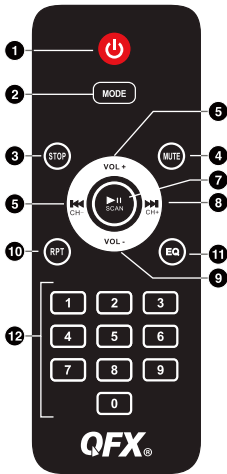

1. POWER: Press to turn power ON/OFF
2. MODE: Press to select Bluetooth, FM or AUX/USB/TF input modes
3. STOP: Press to stop playing music
4. MUTE: Select to mute the volume
5. VOL+: Press to increase volume
6. ◀◀: Press to select previous music track or radio station
7. ▶▶: Press to play or pause music track
8. ▶▶: Press to select next music track or radio station
9. VOL-: Press to decrease volume
10. RPT: Press to repeat or shuffle music playback
11. EQ: Press to choose equalizer preset
12. 1-10: Number keypad buttons

1. ENCENDIDO: Presione para encender/apagar
2. MODO: presione para seleccionar los modos de entrada Bluetooth, FM o AUX/USB/TF
3. DETENER: presione para detener la reproducción de música.
4. MUTE: Seleccione para silenciar el volumen
5. VOL+: presione para aumentar el volumen
6. ◀◀ Presione para seleccionar la pista de música o la estación de radio anterior
7. ▶▶ Presione para reproducir o pausar la pista de música
8. ▶▶ Presione para seleccionar la siguiente pista de música o estación de radio
9. VOL-: presione para disminuir el volumen
10. RPT: presione para repetir o reproducir música aleatoriamente
11. EQ: presione para elegir el preajuste del ecualizador
12. 1-10: Botones del teclado numérico

1. ALIMENTATION : Appuyez pour allumer/éteindre
2. MODE : Appuyez pour sélectionner les modes d'entrée Bluetooth, FM ou AUX/USB/TF
3. STOP : Appuyez pour arrêter la lecture de la musique
4. MUTE : Sélectionnez pour couper le volume
5. VOL+ : Appuyez pour augmenter le volume
6. ◀◀ Appuyez pour sélectionner la piste musicale ou la station de radio précédente
7. ▶▶ Appuyez pour lire ou mettre en pause la piste musicale
8. ▶▶ Appuyez pour sélectionner la piste musicale ou la station de radio suivante
9. VOL- : Appuyez pour diminuer le volume
10. RPT : Appuyez pour répéter ou mélanger la lecture de musique
11. EQ : Appuyez pour choisir le pré réglage de l'égaliseur
12. 1-10 : Touches du clavier numérique

# THANK YOU

**QFX** Where the Party Begins!

We would love to hear about your PBX-1212A journey!  
Tag us @QFXUSA to share your stories.

FOLLOW US @QFXUSA





## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.



FOLLOW US @QFXUSA



1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)

support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)

**QFX USA ®, Inc.**  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year



THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2022 ©





[www.qfxusa.com](http://www.qfxusa.com)

	<table border="1"> <tr> <td><b>CAUTION</b></td> </tr> <tr> <td>RISK OF ELECTRIC SHOCK, DO NOT OPEN.</td> </tr> </table>	<b>CAUTION</b>	RISK OF ELECTRIC SHOCK, DO NOT OPEN.	
<b>CAUTION</b>				
RISK OF ELECTRIC SHOCK, DO NOT OPEN.				
<p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>		

1. Do not install this equipment in a confined area. Keep in well ventilated openings free of newspapers, table-cloths, curtains, etc.
2. **WARNING:** To reduce risk of fire or electric shock, do not expose this unit to rain or liquids.
3. **WARNING:** The internal or external batteries shall not be exposed to excessive heat such as fire and hot, direct sunlight. No flame sources, such as lighted candles, should be placed on the apparatus.
4. **WARNING:** The detachable power cord is for charging. Once fully charged, the unit will operate on internal rechargeable batteries.
5. Used, depleted batteries can be hazardous and should be discarded in a safe and environmentally sound manner.

	<table border="1"> <tr> <td><b>CAUTION</b></td> </tr> <tr> <td>RISQUE DE CHOC ELECTRIQUE.</td> </tr> </table>	<b>CAUTION</b>	RISQUE DE CHOC ELECTRIQUE.	
<b>CAUTION</b>				
RISQUE DE CHOC ELECTRIQUE.				
<p>L'ÉCLAIR ET LA POINTE DE FLECHE À L'INTERIEUR DU TRIANGLE SONT UN SIGNE D'AVERTISSEMENT VOUS AVERTISSANT D'UNE "TENSION DANGEREUSE" À L'INTERIEUR DU PRODUIT.</p>	<p>ATTENTION : POUR RÉDUIRE LE RISQUE DE CHOC ELECTRIQUE, NE PAS RETIRER LE COUVERCLE (OU L'ARRIERE), AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTERIEUR. RÉFÉREZ L'ENTRETIEN AU PERSONNEL D'ENTRETIEN QUALIFIÉ.</p>	<p>LE POINT D'EXCLAMATION DANS LE TRIANGLE EST UN SIGNE D'AVERTISSEMENT VOUS AVERTISSANT DES INSTRUCTIONS IMPORTANTES ACCOMPAGNANT LE PRODUIT.</p>		

1. N'installez pas cet équipement dans une zone confinée. Conserver dans des ouvertures bien ventilées sans journaux, nappes, rideaux, etc.
2. **AVERTISSEMENT :** Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie ou à des liquides.
3. **AVERTISSEMENT :** Les batteries internes ou externes ne doivent pas être exposées à une chaleur excessive telle que le feu et la lumière directe du soleil. Aucune source de flamme, telle que des bougies allumées, ne doit être placée sur l'appareil.
4. **AVERTISSEMENT :** Le cordon d'alimentation amovible est destiné à la charge. Une fois complètement chargé, l'appareil fonctionnera sur des batteries internes rechargeables.
5. Les piles usagées et déchargées peuvent être dangereuses et doivent être jetées de manière sûre et respectueuse de l'environnement.

	<table border="1"> <tr> <td><b>CAUTION</b></td> </tr> <tr> <td>RISK OF ELECTRIC SHOCK, DO NOT OPEN.</td> </tr> </table>	<b>CAUTION</b>	RISK OF ELECTRIC SHOCK, DO NOT OPEN.	
<b>CAUTION</b>				
RISK OF ELECTRIC SHOCK, DO NOT OPEN.				
<p>EL RELAMPAGO Y LA PUNTA DE FLECHA DENTRO DEL TRIÁNGULO SON UNA SEÑAL DE ADVERTENCIA QUE LE ALERTA DE "TENSION PELIGROSA" DENTRO DEL PRODUCTO.</p>	<p>PRECAUCIÓN: PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite LA CUBIERTA (O LA PARTE POSTERIOR), NO HAY PIEZAS REPARABLES POR EL USUARIO EN EL INTERIOR, REMITIR EL SERVICIO A PERSONAL DE SERVICIO CALIFICADO.</p>	<p>EL SIGNO DE EXCLAMACIÓN DENTRO DEL TRIÁNGULO ES UNA SEÑAL DE ADVERTENCIA QUE LE ALERTA SOBRE INSTRUCCIONES IMPORTANTES QUE ACOMPAÑAN AL PRODUCTO.</p>		

1. No instale este equipo en un área confinada. Manténgase en lugares bien ventilados libres de periódicos, manteles, cortinas, etc.
2. **ADVERTENCIA:** Para reducir el riesgo de incendio o descarga eléctrica, no ponga esta unidad a la lluvia ni a líquidos.
3. **ADVERTENCIA:** Las baterías internas o externas no deben exponerse a un calor excesivo, como el fuego y la luz solar directa y caliente. No se deben colocar fuentes de llamas, como velas encendidas, sobre el aparato.
4. **ADVERTENCIA:** El cable de alimentación desmontable es para cargar. Una vez cargada por completo, la unidad funcionará con baterías internas recargables.
5. Las baterías usadas y agotadas pueden ser peligrosas y deben desecharse de manera segura y respetuosa con el medio ambiente.

**Warning:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

**RF Exposure Statement**

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device

and its antenna(s) must not be co-located or operation in conjunction with any other antenna nr transmitter.