


### \* Factory Default Setting:

- Keyboard is in macOS mode
- Power switch on the underside of the keyboard is turned off
- 2.4GHz RF Receiver is paired with the keyboard

#### Toggle between macOS mode and Windows mode


You must be in macOS Mode to use Mac hot keys. You must be in Windows Mode to use Windows hot keys.

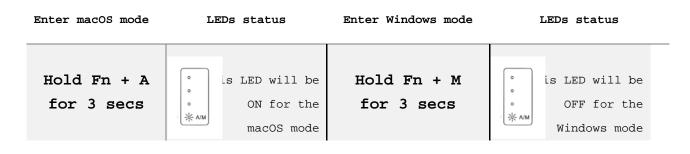

### ✤ Battery

- 5 hours is required to fully charge the internal battery. Charge the battery once a month for at least 2 hours.
- When the middle LED **blinks along with any key presses**, the **battery power is low** and charging is required.
- When the keyboard is connected to a USB host, the keyboard is automatically switched to USB mode.
- To conserve battery power, all LEDs are deactivated in wireless mode. Hold the Fn key to see all the current status of LEDs.

### Wireless connection

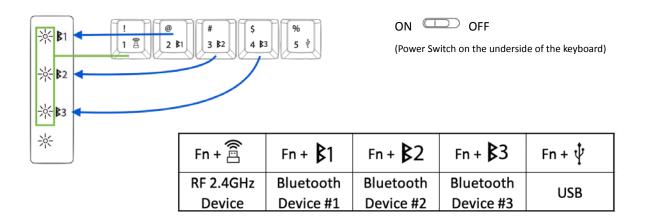



# RF and Bluetooth pairing

	RF 2.4GHz Receiver	BT device #1	BT device #2	BT device #3	
STEP 1	Turn (	ON the power switch on the underside of the keyboard			
STEP 2	Plug the RF receiver into the host	Ensure Bluetooth SETUP dialog boxes are CLOSED before starting the Bluetooth pairing			
STEP 3	Hold Fn + 🛱 for 3 secs	Hold Fn + <b>\$</b> 1 for 3 secs	Hold Fn + <b>\$2</b> for 3 secs	Hold Fn + <b>\$3</b> for 3 secs	
STEP 4	米 米 子 子 3 LEDs blink	Left LED blink	<ul><li>Middle LED blink.</li></ul>	Right LED blink.	
STEP 5	Pairing succeeded	OPEN the Bluetooth SETUP dialog box on the target host, and search for new BT device			
STEP 6	/	" <b>WM96 #1</b> " found on the BT list	" <b>WM96 #2</b> " found on the BT list	" <b>WM96 #3</b> " found on the BT list	
STEP 7	/	Pairing succeeded			

## Switch between different paired hosts


	RF 2.4GHz Receiver	BT device #1	BT device #2	BT device #3	
STEP 1	Turn ON the power switch on the underside of the keyboard				
STEP 2	Plug in the RF receiver Press Fn + 🚔 for l sec	Press Fn + <b>\$1</b> for 1 sec	Press Fn + ₿2 for 1 sec	Press Fn + <b>\$3</b> for 1 sec	
STEP 3	∦ ∦ 3 LEDs ∦ blink once	<ul> <li>Left LED</li> <li>blink once</li> </ul>	Middle LED blink once	● ●  Right LED ★  blink once	
STEP 4	<b>RF mode</b> ready	" <b>WM96 #1</b> " ready	" <b>WM96 #2</b> " ready	" <b>WM96 #3</b> " ready	

## ✤ Mouse function Simulation

Num	Press Fn + "Num" to switch between Numpad and Mouse function Simulation	ites	Press these keys for mouse scrolling
T B B B		শ	Numpad 5 or 0 acts as Mouse Left click
	1 to 9 representing 8 directions of the mouse cursor	(Þ)	Numpad "." acts as Mouse Right click
(9) (9)		+ * *	Press these keys for mouse scrolling



 ✤ Special Function Keys



macOS and Windows	Key Stroke Speed	Macro	
PRESS DIRECTLY	Fn + Key	Fn + Key	
EMOJI TABLE	)efault Speed	Macros + delay 15ms	
LANGUAGE*	• X2 Speed	<pre>Macros + delay 0.1s</pre>	
BROWSER*	• X4 Speed	<ul> <li>Macros + delay</li> <li>0.5s</li> </ul>	
VOICE ASSISTANT*	● ● X8 Speed ● ●	<ul> <li>Macros + delay</li> <li>1s</li> </ul>	
*Requires setup in System Preferences	*For gaming purpose	*For macro editing	

### \* Macro Editing Mode

1. Press **Fn + Backspace** to enter Macro Editing Mode and the rightmost LED will blink.

- Select any of the keys [ Q/W/E/R/T/Y/U/I/0/P ] to be programmed as the macro hot key.
- 3.. You can press **Fn +** [ or : or . : or : : ] to add a delay between each character.
- 4. After editing the macro, press Fn + Enter to save the macro.
- 5. Repeat steps 2 to 4 to program more macros
- 5. Once completed, press Fn + Backspace to exit Macro Editing Mode

6. After exiting Macro Editing Mode, press **Fn + "macro hot key**" to invoke the macro.



### ✤ Shortcut keys

Hot Key	Press Directly**	Press with Fn Key**	Hot Key	Press Directly**	Press with Fn Key**
ESC 🗂	ESC	Apple Menu Bar	F8 H	F8	Play/Pause
F1 ;;;	FI	Decrease Brightness	F9 <b>F</b>	F9	Next track
<sup>F2</sup> ☆	F2	Increase Brightness	F10	F10	Mute
F3	F3	Launchpad	F11	F11	Volume Decrease
<b>F4 Q</b>	F4	Spotlight	F12	F12	Volume Increase
F5 <b>Ų</b>	F5	Dictation*		Del	Selectable Screen Capture
F6 <b>C</b>	F6	Do Not Disturb*			
F7 H44	F7	Previous track			

\* Requires setup in System Preferences

\*\* Toggle between all shortcut keys being pressed directly and all shortcut keys being pressed in conjunction with the Fn key by pressing and holding Fn + Tab for 2 seconds.



### ✤ FCC warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be u sed in portable exposure condition without restriction