



LuckyJingle mini printer quick start guide

Usage status

ON/OFF

Press and hold the power key for 3 seconds to turn ON /OFF.

Green light on: ON/ Standby

Charging state

It is recommended to fully charge for the first time after purchase.

Red flashing: low power

Red light on: charging

Green light on: charging is completed

Equipment abnormal status

Red light always on: paper shortage / over temperature / cover opening.

Orange light is always on: enter the printer debugging mode, press and hold the power key until the printer is shut down to exit.

App download and settings

Mobile Download

Search “**Luck Jingle**” in the App Store



Settings

Double-click the power button, the printer will print out the QR code of the bound device; add a device through the App, scan and scan the QR code to connect to the printer (Note: Do not search for Bluetooth printer connection in the Bluetooth settings of the mobile phone)

Replacement of consumables



1



2



3

- 1 Cover opening: look at the arrow direction as shown in the figure, push down the upper cover to open the cover
 - 2 Consumables: in the direction shown in the figure, put the heat sensitive surface of the paper on the same side as the heat sensitive head
 - 3 Close the cover: after the consumables are put in, push the upper cover upward as shown in the figure, and then close the cover
- ⚠ Please do not touch the print head directly to avoid damage, especially after printing, do not touch the print head directly to prevent overheating and scalding.

Safety and precautions

- 1 There is a built-in lithium battery, please do not use it in the environment with temperature higher than 40 °C; keep away from fire and other heat sources, and do not place it in the hot sun, such as closed car;
- 2 Children should be charged and used under the supervision of adults. After full charge, please make sure to pull out the charging line in time to prevent overheating, short circuit or fire;
- 3 Do not put the product in fire or water to avoid battery short circuit or fire or burn;
- 4 The operating temperature range is 0 °C to 40 °C, please do not exceed the recommended temperature range;
- 5 If you suspect that there is a problem with the battery, please contact the after-sales service center for assistance.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

合格证

Qualified Certificate

型号:
(MODEL)

检验员:
(CHECKER)

出厂日期:
(DATE)

QC
PASS