

aiwa

Prodigy Swim Bone Conduction Wireless Headphones



8 GB Built-In
Memory Card



True
Bone Conduction
Drivers

12
HOURS

Up To 12 Hours
Playtime
Per Charge




IP68
Waterproof

 **Bluetooth**[®]


Item: AI5006

User's Manual

 WHAT'S INCLUDED

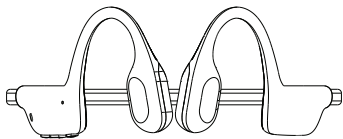

 Prodigy Swim Bone Conduction Wireless Headphones



Magnetic
Charging Cable



 
Sponge Earplugs



User's Manual


A CLOSER LOOK

Magnetic Charging Port

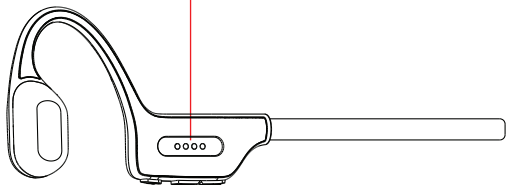

+ Button

 
- Button




Power Button

LED Indicator Light

 
MAGNETIC CHARGING

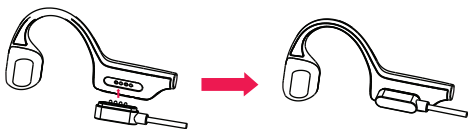

 
Connect one end of the magnetic charging cable to the magnetic charging port on your headphones. When connected properly the cable snaps securely in place.

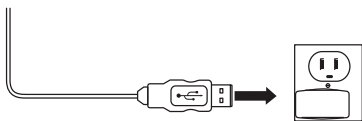

Insert the other end into the a suitable USB charging adapter.

 (red) charging

  (blue) charging complete

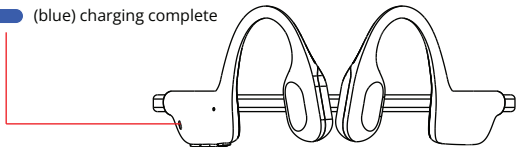


While charging, the LED indicator light turns red. The LED indicator light turns blue once your headphones are fully charged. Disconnect the charging cable once charging is complete.

POWERING ON/OFF

POWERING ON



 **3 SECONDS
PRESS & HOLD**




Press and hold the power button for approximately **three seconds** to turn ON the headphones. The indicator light will flash blue for two seconds as it turns ON.

POWERING OFF



 
**5 SECONDS
PRESS & HOLD**




Press and hold the power switch for **five seconds** to turn the headphones OFF. The indicator light will flash red for two seconds and then your headphones will power off.

Note: It is recommended that the headphones be fully charged before use.

 BLUETOOTH PAIRING

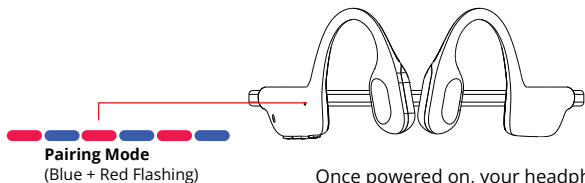


  Once powered on, your headphones will go into pairing mode. The LED Indicator light will alternately flash blue and red.

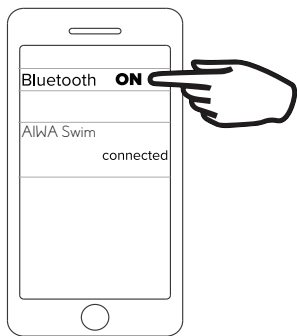





Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA Swim."

After successful pairing, the LED indicator light will flash blue every five seconds.



USING THE HEADPHONES



 Previous Song: Press and hold  Button for 1.5 seconds.

 Next Song: Press and hold  Button for 1.5 seconds.

 Increase Volume: Press  Button.

 Decrease Volume: Press  Button.




 Play / Pause: Press  Button.



 Voice Assistant: Press and hold  Button for 2 seconds.



 Answer: Press  Button during incoming calls.

 Hang up: Press  Button during active calls.

 Reject: Press and hold  Button for 2 seconds during incoming calls.

 Restore default settings: Press and hold   Button for 5 seconds.

 Switch Bluetooth / Card Mode: Press 3 times  Button.

 Switch Indoor / Outdoor Mode: Press 3 times  Button.

NOTE: When in Outdoor Mode music and call volume will increase so that you can better hear. When in Indoor Mode, volumes will return to normal.

 
MEMORY CARD MODE

Your headphones can play .MP3, or .WAV music files stored on its built-in 8GB memory card.


Uploading Music

In order to listen to music stored on the built-in memory card, you will first have to connect your headphones to a computer and upload audio files. To do so, follow the steps below:

1. Connect one end of the magnetic charging cable to the magnetic charging port on your headphones. When connected properly the cable snaps securely in place.



 2. Insert the other end into the an available USB port on your computer.



3. Once connected, your headphones will be recognized by your computer as a mass storage device, and can be used similarly to the way you might use a USB thumb drive or jump drive.

An extra drive called Removable Disk will appear. Open this drive and you will see a folder named DCIM. Simply drag and drop or copy/paste the audio files you wish to listen to into this folder so that you can listen to them on your headphones.

NOTES

--To listen to audio files stored on the built-in memory card, press the power button 3 times quickly to switch from Bluetooth Mode to Card Mode.

Important: In order to listen to music while underwater you need to be in Card Mode and listen to audio stored on the built-in memory card. Bluetooth audio is not capable of transmitting a signal under water.

SAFETY PRECAUTIONS

When using your headphones, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR HEADPHONES.
2. Only clean using a clean, soft cloth.
3. Do not allow children or the infirm to play with this product. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

MAINTENANCE AND CARE

-Use a soft cloth or paper towel to clean your headphones. Never use any harsh chemicals or detergents for cleaning. Make sure your headphones are dry before charging.

-When your headphones are unused, they should be stored in a cool, dry place.

-Never tug or yank on a cable connected to your headphones. Connect and disconnect cables as carefully as possible.

-Please recycle or dispose of your headphones properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your headphones for further information



Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these headphones.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

BLUETOOTH VERSION: 5.3

WORKING DISTANCE: UP TO 10 METERS

CHARGE TIME: APPROXIMATELY 2 HOURS

PLAY TIME: UP TO 12 HOURS*

RATED INPUT: 5V=== 140mA

BATTERY: 140mAH Rechargeable Lithium Ion

*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including, but not limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.



AIWA

Edison, NJ 08817

© 2024 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license. Keep all relevant information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license.