 


Instructions for use

 
1. Before use, please rinse with clean water or shower gel, then wipe dry immediately;
2. Apply the lubricant evenly to the product and the part to be inserted to avoid dryness pain;
3. After using the product, please rinse the product with clean water or shower gel, then wipe immediately , dry and store in a cool place.

Key Instructions

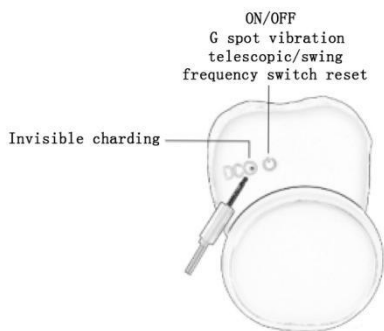

1. Press and hold for 2 seconds to turn on / off, the light will be on after turning on.
2. In the power-on state, press the power-on button twice quickly, the red light is on to enter the heating state, and click again to exit the heating mode.
3. In the power-on state, press the power-on button to enter G point vibration + telescopic (or swing) , pressing it again to cycle the frequency.
4. Reset : The product is turned off. If the stick is in the extended state, press the shutdown button to reset.

Remote controller button instructions

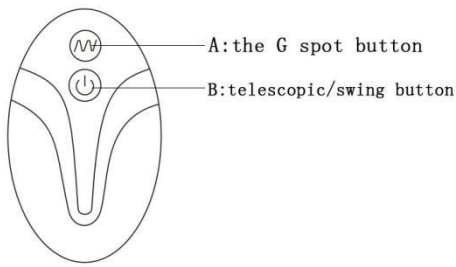

B: ON/OFF button

1. In the power-on state, press the ON/OFF button, flashing blue light to turn on the remote controller.
2. Pressing again the ON/OFF button for two seconds, shake blue light to shut down the remote controller.

A:G point vibration button

1. In the power-on state, the blue light is on, press to turn on the G point vibration.

1. In the power-on state, press the telescopic swing button, flashing blue light to turn on the telescopic swing function.

2. Pressing the G spot button again to switch 7 frequencies. Different frequencies have different vibration modes.

3. Press and hold for 2 seconds to flash blue light, turn off telescopic swing function

C: Clitoral vibration button

4. In the boot state, press the clitoral vibration button, flashing blue light, turn on the clitoral vibration function.

5. Pressing the clitoral vibration button to switch 5 different frequencies.

6. Press and hold for 2 seconds to flash blue light, turn off clitoral vibration function.

 
Swing function introductions

1. In the shutdown state, please press down on the vibration part of G spot with your finger about 5 cm downward. Then gently move it, making sure you do it gently, not more than 45 degrees. Finally, release your hand, the product will have an angle tilt, as shown;

2. Turn on the telescopic function of the product, the product will enter the swing rotation mode;

3. Press the telescopic button to switch different modes, a total of 5 frequencies can be switched.

4. Turn off the machine and gently straighten the product by hand to turn off the swing rotation function.

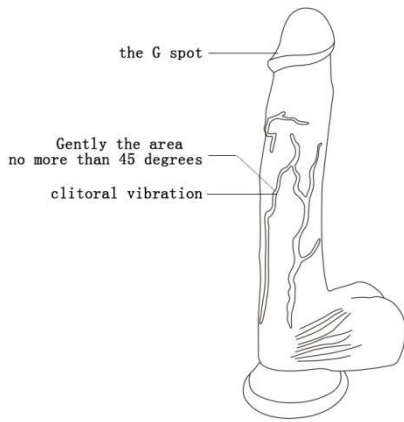

Instructions

1. Clean before use;
2. Turn on the product switch and enjoy.

Charging instructions

To use a included USB cable to connect to the charging port of the product for charging.

1. Use a USB cable to connect directly to the computer for charging or use a mobile phone USB interface charging head to charge on the socket electricity;
2. The indicator light breathes while product is charging;
3. Charging voltage is 5V and current does not exceed 600mA;
4. The indicator light will keep on continuously after being fully charged, and it will be fully charged in about 2 hours. Do not overcharge for a long time.
5. Unable to turn on when charging, please unplug the power supply after full charge and then you can use it.

Features

This product is a flirting product for women. It stimulates sensitive parts through strong vibration and telescopic swing to let the body enjoy the pleasure.

Maintenance

1. After use, wash it with normal temperature water and shower gel.
2. Wipe dry with a towel after washing and store in a ventilated, cool and dry place;
3. Do not clean the button, prohibit any liquid from entering the button to avoid short circuit;

4. At normal temperature, the product is generally full of electricity storage, away from high temperature and dirt.Keep out of direct sunlight.

5.If not used for a long time, please keep at least once every three months to prevent battery aging.

Fault instructions

1. When the machine can not be turned on, check whether there is no power, recharge it before use;
2. After charging, it cannot be turned on, check whether the charging indicator is normal, and whether the charging cable is damaged;
3. When the sense of vibration and swing rotation is weak, please recharge it before use;
4. When the program fails, please shut down and restart.

Precautions

[Warning] Failure to follow these safety instructions may result in fire, electric shock, injury or damage to the product or other property. Before using, please read all the safety information below.

1. This product is only suitable for adults, minors are prohibited;
2. If you feel uncomfortable during use, please stop using;
3. Periodically check whether the product is damaged, please stop using if it is damaged;
4. Operation this product contains sensitive electronic components. If the battery is dropped, burned, punctured or squeezed pressure, it may be damaged. If you suspect that the product or battery is damaged, stop using it because it may
Causing overheating or injury;
5. Do not try to replace the battery by yourself. The lithium ion battery of the product should be replaced by Leten or an authorized service provider change. Improper replacement or repair may damage the battery, resulting in overheating or injury. Before the product is discarded.The battery needs to be removed, and the power must be cut off before removing the battery, and the battery needs to be disposed of safely; the battery must be separated from the family separately recycle or dispose of garbage. Do not incinerate the battery;
6. If you want to charge the product, please use the attached cable in compliance with applicable country regulations or the following

one or more standard power adapters: EN301489-34, IEC62684, YD / T 1591-2009, CNS 15285, ITEL.1000 or other applicable mobile phone power adapters usability standards. Use only those that comply with applicable international and regional safety standards (including IEC60950)adapter charging; using damaged cables or chargers, or charging in a humid environment can cause fire disaster, electric shock, injury or damage to products or other property. Before plugging the adapter into a power outlet, please make sure the USB cable is fully inserted into the power adapter;

7. The product meets applicable surface heat standards and restrictions. However, even within these limits, long continuous contact with hot surfaces for time may also cause discomfort or injury if your body appears to affect the body.Be aware of the condition of the ability to sense heat; please be careful when using it for people who are not sensitive to heat.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction