

USER MANUAL


Solar lights outdoor Leds



Model No:
DM-270
DM-370
DM-570
DM-670

FCC ID: 2A7DBDM270

 
Packing list

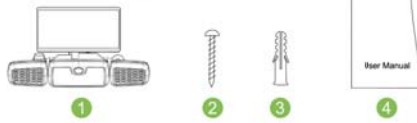

- 1.Solar motion sensor
- 2.Screw
- 3.Wall Plug
- 4.User Manual

Operation guide:

 The default mode of the product is OFF. Press the ON/OFF button (1.2 or 3 times at night or in darkness, not in the daytime) at the top right corner of the back of the middle module of the lamp before use

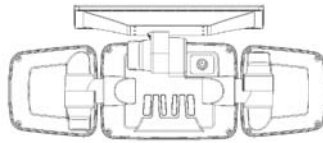

- A. Normal Light Mode
(Press the button once)
When entering the dark, the light will keep normal brightness until the battery is exhausted
- B. Dim Light Sensor Mode
(Press the button twice, 1 time after Mode A)

1

At night, the light will be dim until motion is detected. When motion is detected, the light will brighten for 15 seconds before returning to dim

C. Strong Light Sensor Mode
(Press the button 3 times, 1 time after Mode B)
At night, the light will be strong bright and when motion is detected, then 15 seconds later, the light goes out automatically.

NOTE

 
- 1.Please charge the solar light in direct sunlight for several hours before the first time use.The electrical energy will be stored in the storage battery. More direct sunlight means more electrical energy.
- 2.If the battery is exhausted, the light will flash. Please recharge before normal use.
- 3.Duration of light depends on solar product's level of sunshine exposure, geographic position, weather conditions and hours of daylight, Solar light is weather sensitive. It is normal that the charging time may be longer and the lighting time may be shorter on cloudy days or in winter.
- 4.Motion sensor mode(only Mode B and C workable, Mode A is not workable)
- 5.If you want to check whether the product can work normally or not, please Press the ON/OFF button, then cover the solar panel with your hands in the daytime or put it in dark environment.

2



Installation:

- 1 Choose a place that can get enough sun shine to install the light, the longer it gets sunshine , the longer it can illuminate.
- 2 Punch a hole on the wall with a drill bit and insert the attached wall plug into the hole. Then, twist the screw through the screw hole of light into wall plug.

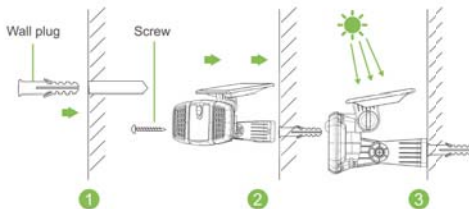

3

FCC STATEMENT

Operation is subject to the following two concitions:
(1)This device may not cause harmful interference
(2)This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installaticn. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

4

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment)
This marking shown on the product or its literature; indicates that it should not be disposed with household wastes at the end of its working life

To prevent possible harm to the environment or human health from uncontrolled waste disposal . please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

5