

Band4-10MHz-QPSK-20350-50RB#0

PS:


Go To Local

Connection Established

Show Remote Screen LTE Signaling

ON



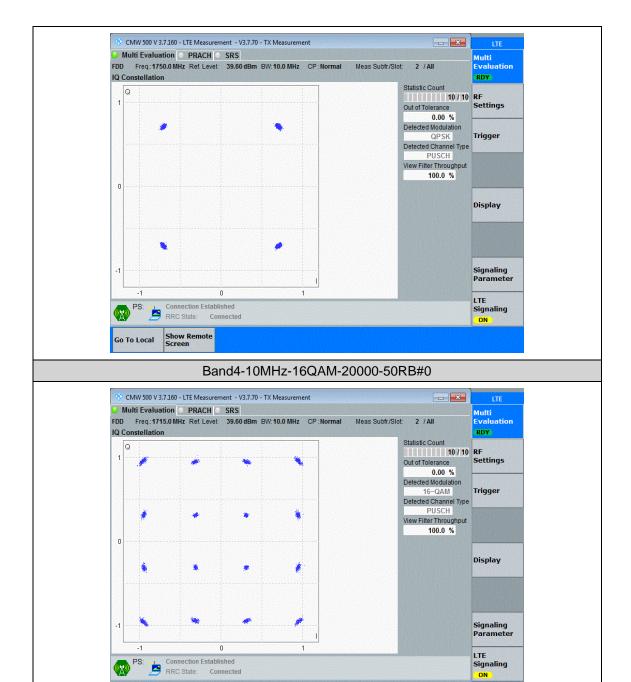

Band4-10MHz-16QAM-20175-50RB#0

Show Remote Screen





Band4-15MHz-QPSK-20025-75RB#0

LTE Signaling

ON


0

**Connection Established** 

Show Remote Screen

PS:



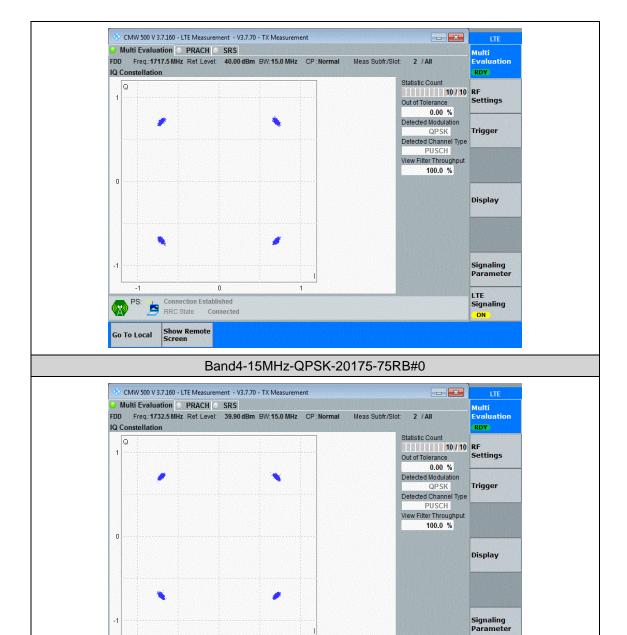

Band4-15MHz-QPSK-20325-75RB#0

LTE Signaling

ON


0

**Connection Established** 

Show Remote Screen

PS:



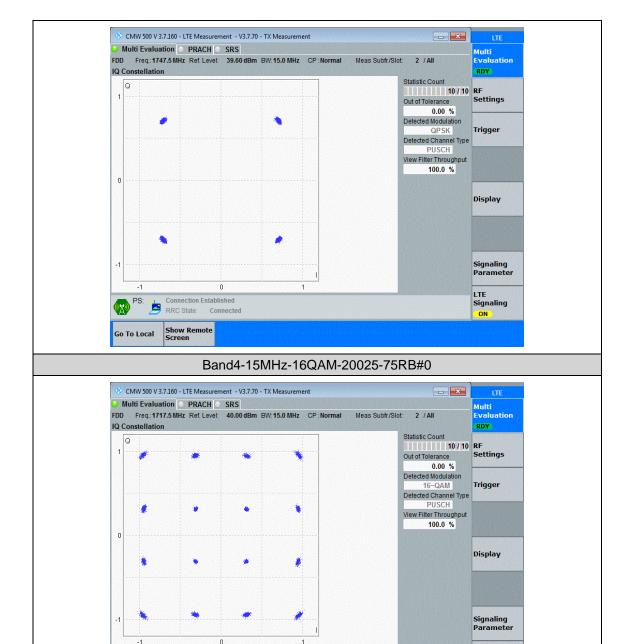

Band4-15MHz-16QAM-20175-75RB#0

PS:


Go To Local


Connection Established

Show Remote Screen LTE Signaling

ON




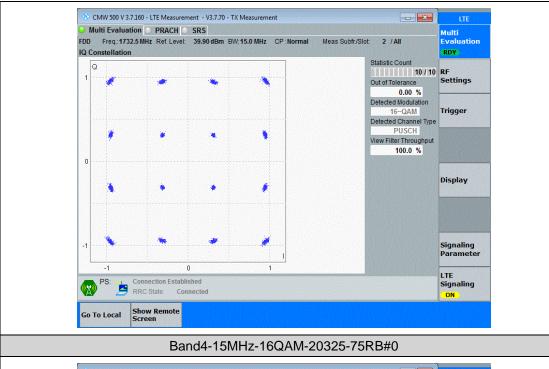

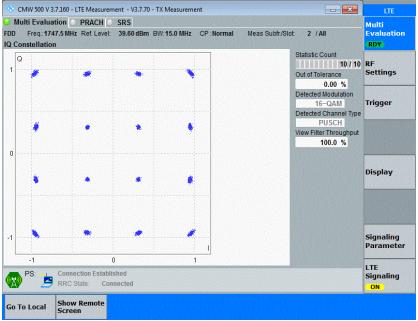

Band4-20MHz-QPSK-20050-100RB#0




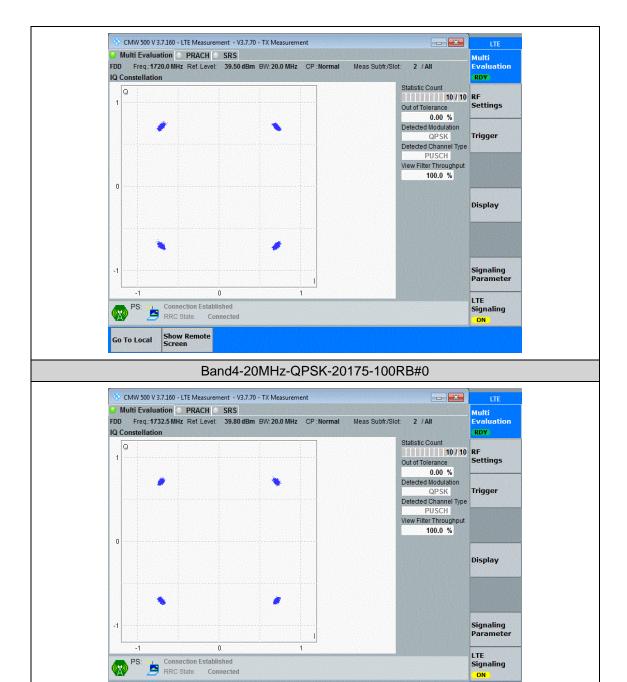

Band4-20MHz-QPSK-20300-100RB#0

Show Remote Screen



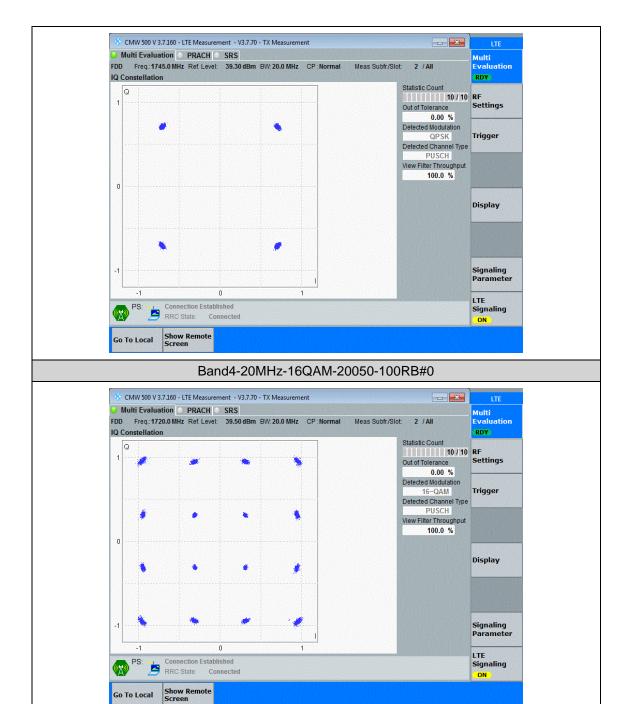

Band4-20MHz-16QAM-20175-100RB#0

ON



PS:

Go To Local

Connection Established

Show Remote Screen

