

wireless speaker

USER MANUAL

1 Important Notes




NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2 Product Contents

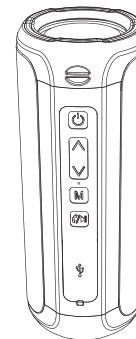

1 Wireless Speaker




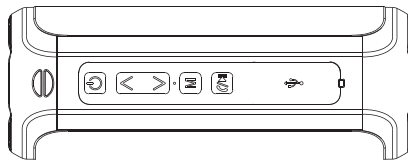
2 Type-C USB charge cable

3 Technical Information


Working Voltage	3.2-4.2V
Charging Power	DC 5V ± 0.25V
Version	V5.0
Recharge Method	Type-C USB
Battery Capacity	2000mAh
Power	5W x 2
Working Range	Barrier Free Space: ≥ 32 feet, Obstacle Space: ≥ 16 feet
Material	Plastic

4 Connecting Your Device

- Turn on wireless speaker by pressing and holding 
- Turn your bluetooth device on search mode. Find device titled "MOBE SOUNDWAVE" and select.
- Once a connection with media device has been established, there will be a tone sound.



5 Wireless Speaker Functions

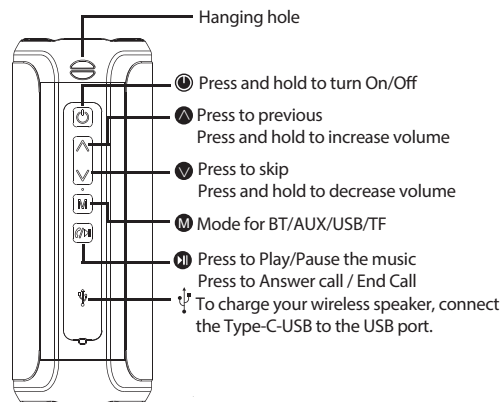

6 Power Recharging

Connect the USB cable included to charge your Wireless speaker through a computer USB port or power adapter. Low Power Warning: When voltage is lower than 3.3V, a tone will sound. Leave for at least 3.5 hours for full charge.

