



指针轻扫过屏幕底部。

向上或向下滚动:双指

向上或向下轻扫。

向左或向右滚动:双指向

\* Thank you for purchasing this product. This product is free of charge within one year from the date of sale (customers need to bear the return shipping cost). Please keep the

\* There is no reason to refund the return within 7 days from the purchase, and it will not

warranty card properly and fill in the relevant information for warranty use.

affect the second sale, and the customer needs to bear the return shipping cost.

\* For quality problems that are not man-made damage within 7 days and 30 days from


左或向右轻扫。

缩放:双指靠近放置,张

开以放大,或者捏合以

缩小。

双指操作

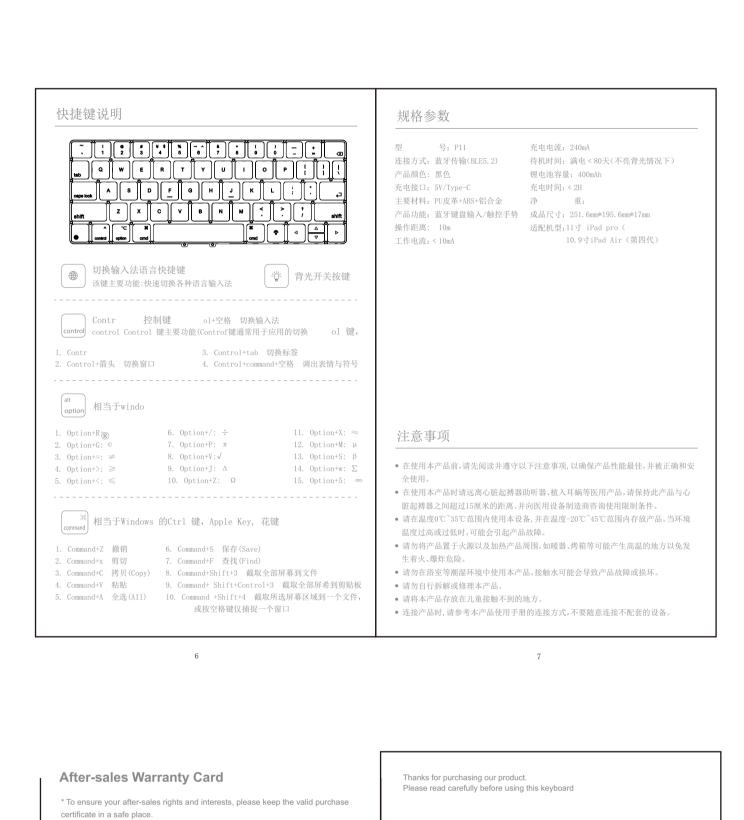

温馨提示:

• 操作系统:ios15.0及以上(设备必须支持触控)

• 触控板(无物理按键款):无"拖动"手势功能选项。


• 轻触设置(无线配对成功后):设置→通用→触控板-→轻点按/双指辅助点(打开)


WIRELESS KEYBOARD CASE


**Using Manual** 

• 灵敏度设置:设置→通用触控板→跟踪速度(调至合适的速度)。



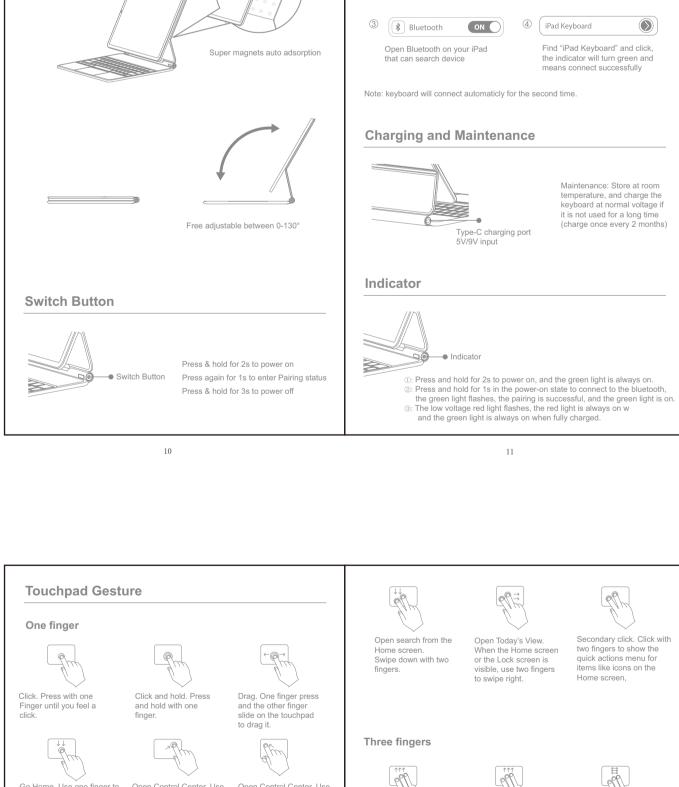

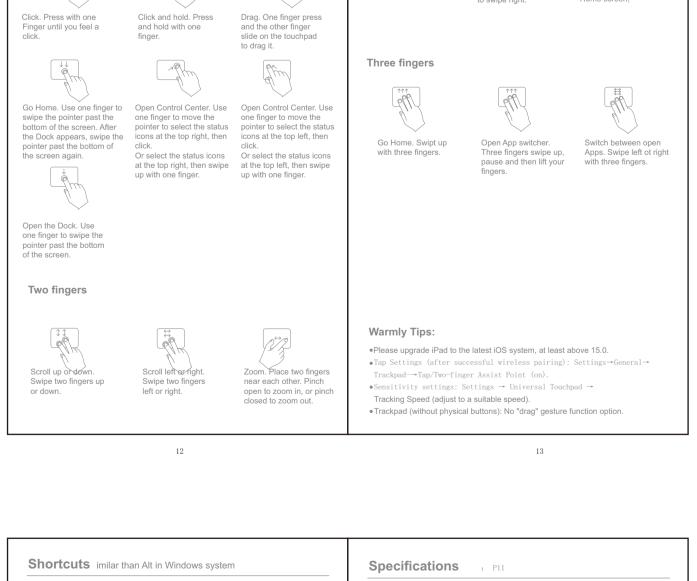

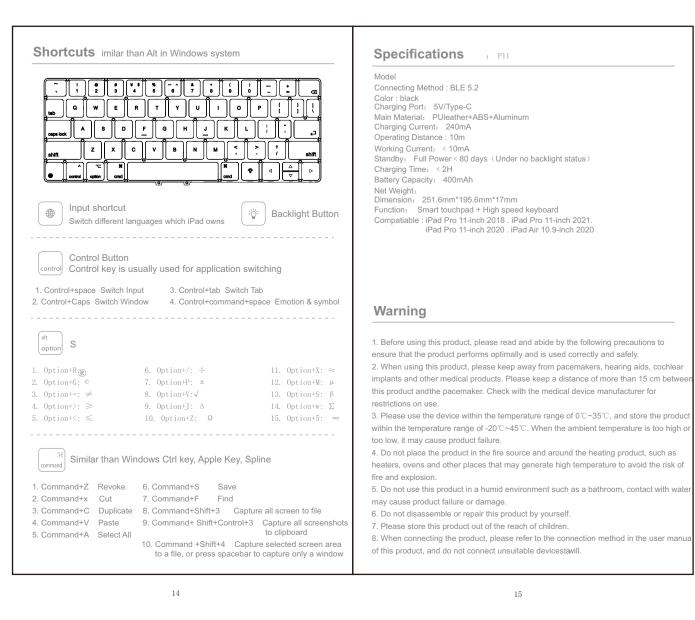

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.