

 


Allway Open Wireless Earphone

PL20 Product Instructions

Please read this instructions carefully and keep them properly

1 Packaging list:




② Configuration

Product Name: Open Wireless Earphone	Product Model: PL20
Product Size: 125*110*45mm	Distance: >10m
Bluetooth Version: BT5.3	Speaker Diameter: 14.2mm
Impedance: 16 Ω	Frequency Response: 20Hz-20KHz
Frequency Band: 2.400GHz-2.4835GHz	Battery: 100mAh
Charging time: 1.5h	Usage time: 7h
Standby time: 40h	Input: 5V=0.5A
Type of charge: Magnetic charging cable	Material: PC+ABS
Number of connections: 2	Weight: 19.3g

Specifications are laboratory test data.

^{*}Playback times are from Allway acoustic lab tests and may vary depending on equipment settings, environment, usage and many other factors.

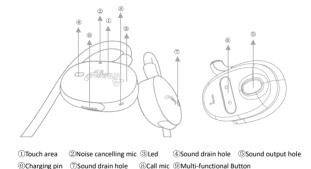

③ Operation instruction

Power ON

- Short press the Multi-function Button to power on.
- When the power is off, the Earphone will automatically turn on when charging.

Power OFF

- Long press Multi-function Button 3s to shut down.
- Automatic switch-off of the Earphone after a full charge.

- Automatic switch-off after 10min disconnection from Bluetooth.
- Automatic switch-off when the power is exhausted.

Pairing

- Quickly press the Multi-function button twice to enter pairing mode.
- When there is no pairing record, automatically enter pairing mode after power on.
- when there is a pairing record, automatically connect back to the paired device after power on

Reset

In the power on state, long press the Multi-function Button for 10s.

Multi-Device Connectivity

 PL20 supports Multi-device connection: when the Earphone is in pairing, two devices can be connected at the same time; after pairing timeout, you need to re-enter pairing mode.

Bluetooth Pairing

Step 1 - Turn on your device's Bluetooth and remove the Earphone



When the device is connected to the Earphone, the battery level of the Earphone is displayed.

Step 2 - Select "Allway PL20" to connect

Operating Instructions







Answer/hang up/Cancel
Call: double touch
Reject: long touch 2s



Music Control

Play/pause: two touches next song: long touch 2s



Volume Control

Volume up: single touch

Note: Different key functions can be customized through the App.

Charging Instructions



To Charge The Earphone:

Use the complimentary magnetic charging cable to charge the Earphone, at which point Bluetooth is automatically disconnected.

Indicator Light Description

Power on	Blue light on for 2s	* -2s
Power off	Red light on for 1s	* 15
Pairing status	Red and blue lights flashing alternately	*****
Earphone charging in	Blue light slow flashing	*00•00•
Earphone is fully charged	Red light on for 1s	* 15
Restore factory settings	After the blue light is on for 2s, the red	* 25 ****
	and blue lights flash alternately	

Safety Information

- 1. Never disassemble the earbuds. There are no user-serviceable parts inside,
- 2. Do not expose the earbuds to temperatures below 32 F(0 $^{\circ}\text{C})$ or to temperatures above 113 $^{\circ}\text{F}(45^{\circ}\text{C})$.
- 3.Do not use the earbuds in a thunderstormstorm. This could prevent the earbuds from working properly, and also increase your chance of being electrically shocked.
- 4. Do not use oil or any volatile liquid to clean this product.
- 5.Do not listen at high volumes for extended periods of time.
- 6. Do not use the earbuds in traffic.
- 7.Do not use the earbuds any time it would be dangerous to be unaware of noises around you.

Allway (1) Year Limited Warranty

Allway warrants to the original retail purchaseer that this product is to be free from defective materials and workmanship for a period of oneyear from the date of purchase, if it is properly used and maintained. If this product proves defective in either material or workmanship, Allway, at its option, will (a) repair the product, or (b) replace the product, at no charge for parts or labor. If the product model is no longer available and cannot be repaired effectively or replaced with an identical model, Allway at its sole option may replace the unit with a current model of equal or greater value. In some cases, modification to themounting surface may be required where a new model is substituted. Allway assumes no responsibility or

liability for such modification. To obtain a repair or replacement under the terms of this wrarranty, please return to dealer first, if possible, and the dealer will direct you accordingly for reepairs or replacement. You will be required to submit a copy of the original receipt.

Return shipping for exchanges/repairs is the sole responsibility of the original retail purchaser, Limitations:

This limited warranty does not cover failure ofthe product resulting from improper installation, misuse, abuse, accident, neglect, mishandling, or wear from ordinary use or environmental deterioration.

This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product.

This limited warranty is null and void for products not used in accordance with Allway's instructions.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

