


INTELLIGENT FRAGRANCE MACHINE


# USER MANUAL

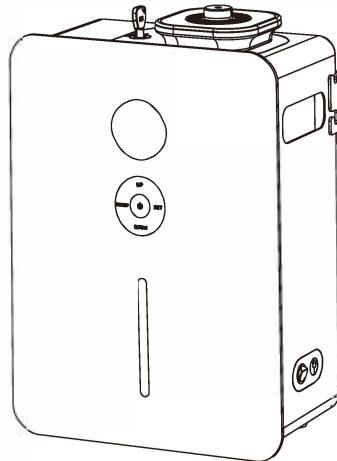

Please read the manual carefully before use and keep it properly

Please read carefully before use and keep it properly.  
We supply warranty within 12 months after purchase date for all qualified machines. During warranty, we will offer repair services and the free parts but without essential oil. Pass the warranty period, service with compensation, lifetime maintenance, please read the detail items from the below warranty list.

## Operation

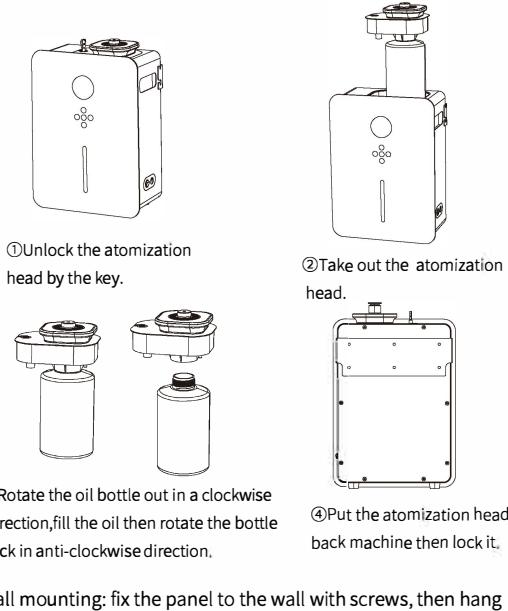


## Packing

Equipment x1、Power Adapter x1、Bottle x1、Key x2、Atomization core x1、Hanging Panel x1、User Manual x1

## Function Keys

- ① Light on/off, select, Pause
- Keypad
- ② Work Model, Atomizing frequency, Page keypad
- ③ Time and set keypad
- ④ Up keypad
- ⑤ Down keypad

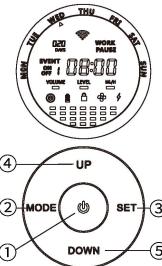

Press MODE 5 seconds to reset the machine and WIFI model. Press Set 5 seconds to lock all keypads, then Press Set 5 seconds again to unlock. Press on/off to pause or start the atomization. Press the on/off 5 seconds to turn on/off the oil level light.

Oil level	> 50%	< 50%	< 25%
Light Color	Green	Blue	Red

## Time Setting -24HR and set the Oil consumption parameter

- ① The working time of the equipment is based on local time. Press set to set the clock time, Press Up and down to change the hour, minute and day. E.g: 8:30AM Monday.
- ② Press Set to switch the capacity of oil bottle > Oil level > ML/H consumption parameter, change the parameter by Up and down, then the usage days will be showed in the LCD display.

## Working mode and atomizing setting

Press [MODE] and [SET] to Adjust different function, including the local Time, 5 different groups working periods, Work/Pause interval time, aroma concentration.

**A.** E.g: If you want to set the working time as 8:00AM, Monday. Press Model, the LCD display will show [EVENT 1 ON] means it is the START TIME of first group. Then, press [SET] to do the program setting, Press [UP/DOWN] to adjust the hours, minutes and needed working days group. Press Up and Down when confirm the work days of one week then press ON/OFF keypad. The days with ▲ sign means these days are chosen.

**B.** After set the start and off time, Press Model again to set the aroma Work/Pause interval time, E.g: Work 10 seconds, Pause 60 seconds.

**C.** After finish A and B. If continue to set working period, continue to press [MODE] to finish all 4 working groups at the same method.

## Aroma concentration

Atomize aroma time can be set: 5S、10S、15S、20S、25S、30S、35S、40S、45S、50S、...300S. Pause time can be set: 5S、10S、15S、20S、25S、30S、35S、40S、45S、50S、...300S. The energy column is fluctuating when atomizing.

## Equipment Maintenance

If the equipment is not used for a long time, 95% industrial alcohol should be added into the refined oil bottle to clean the nozzle and other parts inside the equipment. Tip: Maintain the equipment with 95% industrial alcohol at least every 1-2 months.

Specific operation: add 95% industrial alcohol into the empty bottle, turn on the equipment and run for 10-15 minutes after, then turn off the equipment and pour the alcohol, then screw back the bottle to machine.

## Product Parameter


Size: W248xD130xH350mm Weight: 5.65kg

Voltage: DC12V Capacity: 800ml

Electricity power: 17W Coverage: 2000-3000 m<sup>3</sup>

## Change the Atomization core

The atomization head include: oil bottle, oil suction pipe, filter, atomization core. Take down the oil bottle, remove the atomizing core and pull out the suction pipe, then change the new atomization core and the suction pipe.

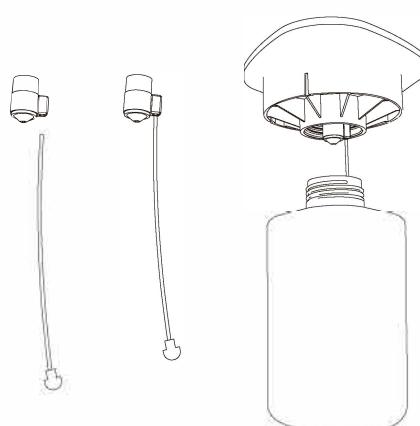

## Warranty

1. The Warranty is suitable for new machine but not resell or second hand products.
2. Within 12 months after purchase date, Warranty is offered for all qualified machines. During warranty, we will offer repair services and the free parts but without essential oil.
3. The warranty card & purchase Invoice are needed if after service required. Please contact with us within warranty if any problems.
4. The following is not for free warranty service:
  - ① Damage & problems caused by Accidents & Fire.
  - ② Not use properly and wrong operation.
  - ③ If repaired by not professional person and make some parts damaged.
  - ④ Damaged during transportation.
  - ⑤ Without our warranty card.
  - ⑥ Without proper cleaning for a long time.
  - ⑦ The machine work time out.
  - ⑧ Machines & Parts not from us.
  - ⑨ Machines not gotten from official channels.
  - ⑩ Send the machines back without permit from manufacturer.

## Notice

1. Please carefully read the Instruction before installation, and keep the User manual to check if need at anytime
2. Please make sure the machine upright, no leaking and no down; or may damage the device and parts
3. Please do not use the broken power wire and make sure the power supply is suitable for the machine, or may cause fire.
4. Please do not open the machine by yourself, If problems, please contact us promptly!

:

#### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.