

GEOMATE

GEOMATE SG6 GNSS

User Guide



Premium Surveying. Trusted Solutions

Table of Content

Table of Content	2
Preface	5
Copyright	5
Safety Warnings.....	5
FCC Statement.....	5
CE InterferenceStatement	6
1 Introduction.....	7
1.1 Safety Information.....	7
1.1.1 Warnings and Cautions.....	7
1.2 Regulations and Safety	7
1.2.1 Use and Care.....	8
1.3 Technical Support.....	8
1.4 Disclaimer	8
1.5 Your Comments	8
2 Getting Started with SG6	9
2.1 About the Receiver	9
2.2 Parts of the Receiver	9
2.2.1 Front Panel	9
2.2.2 Lower Housing	11
2.2.3 Receiver Ports.....	11
2.3 Batteries and Power	12
2.3.1 Batteries	12
2.3.2 The Internal Battery.....	12
2.3.3 Battery Safe	14
2.3.4 External Power Supply	15
2.4 Product Basic Supply Accessories.....	16
2.4.1 Base Kit Basic Supply	16
2.4.2 Rover Kit Basic Supply	17
2.5 UHF Antenna Description	18
2.6 Connecting to an Office Computer.....	19
2.7 Connecting to a Controller	20
2.7.1 Connecting via Wi-Fi with Mate Survey Software	20
2.7.2 Connecting via Bluetooth with MateSurvey Software	22
2.8 Downloading Logged Data.....	24
2.8.1 FTP Download.....	24
2.8.2 Web Server Download	25

2.8.3	USB Download	26
3	Equipment Setup and Operation	28
3.1	Post-processing Base Station Setup	28
3.2	Real-Time Rover Station Setup	30
3.3	Working with the Tilt Compensation	32
3.3.1	Operation Steps	32
3.3.2	Notes of using tilt measurement	34
4	Configuring Through a Web Browser	38
4.1	Status Menu	40
4.1.1	Position Submenu	40
4.1.2	Activity Submenu	40
4.1.3	Google Map Submenu	41
4.2	Satellites Menu	42
4.2.1	Tracking Table Submenu	42
4.2.2	Tracking Info. Table Submenu	43
4.2.3	Tracking Skyplot Submenu	43
4.2.4	Satellite Activation Submenu	44
4.3	Receiver Configuration Menu	45
4.3.1	Description	45
4.3.2	Antenna Configuration Submenu	46
4.3.3	Reference Station Settings Submenu	46
4.3.4	Receiver Reset Submenu	48
4.3.5	Languages Submenu	48
4.3.6	User Management Submenu	49
4.3.7	HCPPP Settings	49
4.4	Data Recording Menu	50
4.4.1	Log Settings Submenu	50
4.4.2	FTP Push Settings Submenu	52
4.4.3	FTP Push Log Submenu	53
4.4.4	Data Download Submenu	54
4.5	IO Settings Menu	56
4.5.1	IO Settings Submenu	56
4.6	Module Setting Menu	63
4.6.1	Description Submenu	63
4.6.2	WiFi Submenu	63
4.6.3	Bluetooth Settings Submenu	64
4.6.4	Radio Settings Submenu	65
4.7	Firmware Menu	66
4.7.1	Firmware Info Submenu	66
4.7.2	Hardware Version Submenu	66
4.7.3	Config File Submenu	67

4.7.4	System Log Download Submenu	67
4.7.5	User Log Submenu	67
4.7.6	Firmware Update Submenu	68
4.7.7	GNSS Board Upgrade Submenu	69
4.7.8	Radio Upgrade Submenu	69
4.7.9	Upgrade Online Submenu	69
4.7.10	GNSS Registration Submenu	70
4.8	Cloud Service Setting Menu	71
4.8.1	Cloud Service Setting Submenu	71

Preface

Copyright

Copyright 2023

GEOMATE | GEOMATE POSITIONING PTE. LTD. All rights reserved. The GEOMATE are trademark of GEOMATE POSITIONING PTE. Limited. All other trademarks are the property of their respective owners.

Trademarks

All product and brand names mentioned in this publication are trademarks of their respective holders.

Safety Warnings

The Global Positioning System (GPS) is operated by the U.S. Government, which is solely responsible for the accuracy and maintenance of the GPS network. Accuracy can also be affected by poor satellite geometry and obstructions, like buildings and heavy canopy.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE Interference Statement

Declaration of Conformity: Hereby, GEOMATE POSITIONING PTE. LTD. declares that this SG6 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the Declaration of conformity can be found at GEOMATE POSITIONING PTE. LTD.



批注 [1]: 如果没有, 就删除吧

1 Introduction

The GEOMATE SG6 GNSS Receiver User Guide describes how to set up and use the GEOMATE® SG6 GNSS receiver. In this manual, “the receiver” refers to the SG6 GNSS receiver unless otherwise stated. Even if you have used other Global Navigation Satellite Systems (GNSS) products before, GEOMATE recommends that you spend some time reading this manual to learn about the special features of this product.

1.1 Safety Information

1.1.1 Warnings and Cautions

An absence of specific alerts does not mean that there are no safety risks involved.

A Warning or Caution information is intended to minimize the risk of personal injury and/or damage to the equipment.



WARNING - A Warning alerts you to a potential misused or wrong setting of the equipment.



CAUTION - A Caution alerts you to a possible risk of serious injury to your person and/or damage to the equipment.

1.2 Regulations and Safety

The receivers contain a built-in wireless modem for signal communication through Bluetooth® wireless technology or through external communication datalink. Regulations regarding the use of the wireless modem vary greatly from country to country. In some countries, the unit can be used without obtaining an end-user license. However, in some countries, the administrative permissions are required. For license information, consult your local dealer. Bluetooth® operates in license-free bands.

Before operating a SG6 GNSS receiver, determine if authorization or a license to operate the unit is required in your country. It is the responsibility of the end-user to obtain an operator's permit or license for the receiver for the location or country of use.

1.2.1 Use and Care

This receiver is designed to withstand the rough environment that typically occurs in the field. However, the receiver is high-precision electronic equipment and should be treated with reasonable care.



CAUTION - Operating or storing the receiver outside the specified temperature range will cause irreversible damage.

1.3 Technical Support

If you have a problem and cannot find the information you need in this manual or GEOMATE website (www.geomate.sg), contact your local GEOMATE dealer from which you purchased the receiver(s).

If you need to contact GEOMATE technical support, please contact us by email (support@geomate.sg).

1.4 Disclaimer

Before using the receiver, please make sure that you have read and understood this User Guide, as well as the safety information. GEOMATE holds no responsibility for the wrong operation by users and for the losses incurred by the wrong understanding about this User Guide. However, GEOMATE reserves the rights to update and optimize the contents in this guide regularly. Please contact your local GEOMATE dealer for new information.

1.5 Your Comments

Your feedback about this user guide will help us to improve it in future revision. Please email your comments to support@geomate.sg.

2 Getting Started with SG6

2.1 About the Receiver

The new GEOMATE SG6 GNSS receiver offers integrated IMU-RTK technology to provide a robust and accurate GNSS positioning in any circumstances. Unlike the standard MEMS based GNSS receivers, the SG6 GNSS IMU-RTK combines state-of-the-art GNSS RTK engine, calibration-free professional IMU sensor and advanced GNSS tracking capabilities. Survey projects are achieved with high productivity and reliability pushing the boundaries of conventional GNSS RTK survey.

The Indicator panel enables user to check satellite-tracking status, internal battery status, and data logging status. Bluetooth and Wi-Fi technology provides cable-free communication between the receiver and controller.

The receiver can be used as the part of an RTK GNSS system with GEOMATE MateSurvey software. Moreover, user can download the GNSS data that recorded in the internal memory of receiver to a computer.

The receiver can be used as the part of an RTK GNSS system with GEOMATE MateSurvey software. And you can download the GNSS data that recorded in the internal memory of receiver to a computer.

To configure the receiver for performing a wide variety of functions, you can use the web interface by connecting the receiver with PC or smartphone through Wi-Fi.

2.2 Parts of the Receiver

The operating controls are all located on the front panel. SIM card slot is on the backside. Serial ports and connectors are located on the bottom of the unit.

2.2.1 Front Panel

The following figure shows a front view of the receiver.



The front panel contains four indicator LEDs and two buttons.



Name	Description
Correction LED (Yellow/Green)	<ul style="list-style-type: none"> Indicates whether the receiver is transmitting/receiving differential data. As a Base station: successfully transmitting differential data, flash yellow light. As a Rover station: successfully receiving differential data from Base station will flash yellow light when it is single or float, flash green light when it is fixed.
Satellite LED (Blue)	<ul style="list-style-type: none"> Shows the number of satellites that the receiver has tracked. When the receiver is searching satellites, the blue LED flashes once every 5 seconds. When the receiver has tracked N satellites, the blue LED will flash N times every 5 seconds.
Static LED (Yellow)	<ul style="list-style-type: none"> Flash means static is on.



Power LED(Red)	<ul style="list-style-type: none"> Lights up when there is power.
Fn button (White)	<ul style="list-style-type: none"> Press and hold this button for 10 seconds to turn on or turn off the static mode. Flash means static is on.
Power button (White)	<ul style="list-style-type: none"> Works as a Power button: Press and hold this button for 3 seconds to turn on or turn off the receiver. Hold Fn button and press this button for 5 times continuously to reset the mainboard.

2.2.2 Lower Housing

The lower housing contains one TNC radio antenna connector and one communication and power port and one USB type C communication.



2.2.3 Receiver Ports

Port	Name	Description
	USB port	<ul style="list-style-type: none"> This port is a type-C USB connector that supports USB communications. Users can use USB Cable supplied with the system to download the logged data to a computer.
	Radio antenna connector	<ul style="list-style-type: none"> Connect a radio antenna to internal radio of the receiver. And this connector is not used if you are using an external radio.


2.3 Batteries and Power

2.3.1 Batteries

The receiver has an built-in non-removable Lithium-ion battery.

2.3.2 The Internal Battery

The rechargeable Lithium-ion battery is supplied partially charged.

 **WARNING** – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment can cause an explosion or fire and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.

- Charge the Lithium-ion battery only in a GEOMATE product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
- Discontinue charging a battery that gives off extreme heat or a burning odor.
- Use the battery only in GEOMATE equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product documentation.

2.3.3 Battery Safe



WARNING – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to discoloration, warping, and leaking battery fluid.
- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle under hot weather condition.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.



WARNING – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive and contact with it can result in personal injury and/or property damage.

To prevent injury or damage:

- If the battery leaks, avoid with the battery fluid.
- If battery fluid gets into your eyes, immediately rinses your eyes with clean water and seek medical attention. Please do not rub your eyes!
- If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the battery fluid.










2.3.4 External Power Supply

Provide the external power to the receiver by the USB Type-C Cable + Power Adapter. The Power Adapter is connecting with AC power of 100-240V, the output port of the Power Adapter connects with the USB Type-C Cable.










2.4 Product Basic Supply Accessories

2.4.1 Base Kit Basic Supply

Item	Picture
SG6 GNSS Receiver	
UHF Whip Antenna (410-470 MHz)	
Power Adapter	
USB Type-C	
H.I. Tape	
Extension pole	
Tribrach with optical plummet	
Auxiliary H.I. Tool	
Transport Hard Case	

批注 [2]: 不知道适配对不对

2.4.2 Rover Kit Basic Supply

Item	Picture
SG6 GNSS Receiver	
UHF Whip Antenna (410-470 MHz)	
Power Adapter	
USB Type-C	
2M Range Pole w/bag	
Auxiliary H.I. Tool	
Transport Hard Case	

2.5 UHF Antenna Description

Antenna	UHF Radio Antenna	
Antenna Plate	Monopole antenna	
Antenna Max. Gain	450-470 MHz	4dBi
Frequency Range	410-470MHz	
Connect Type	TNC-J	



Size: length: 30.3cm±5mm

2.6 Connecting to an Office Computer

The receiver can be connected to an office computer for serial data transfer or settings via a FC2 USB Type-C. Before you connect to the office computer, ensure that the receiver is powered on by internal battery or external power.

The following figure shows how to connect to the computer for serial data transfer or settings:




2.7 Connecting to a Controller

2.7.1 Connecting via Wi-Fi with Mate Survey Software


Turn on the controller → run MateSurvey → go to **Config** main menu → tap **Connect**.

In the *Connect* screen, select **GEOMATE** for the *Manufacture* field, **SG6** for *Device Type* field, **WIFI** for *Connection Type* field.

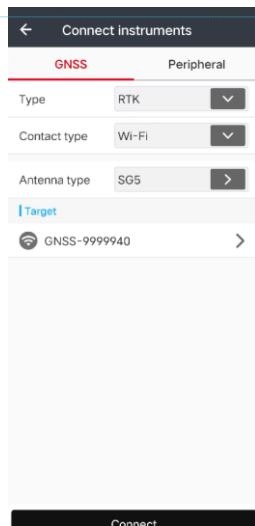


批注 [3]: 图片需要改一下型号

Tap the Wireless Lan icon on the right side to select the hot spot → Switch on the WiFi module by the top switch → select the target device in the list.

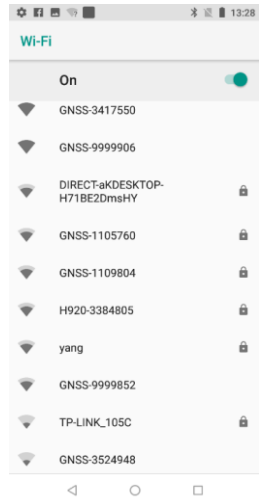

Tap **Connect** to link to the hot spot. If the first-time connection to this hot spot, user may type in the password.

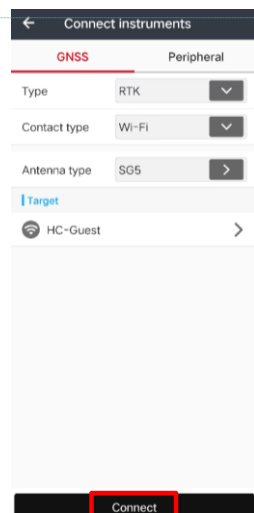

批注 [4]: 图片


Tap the **Connect** button to build the connection.

2.7.2 Connecting via Bluetooth with MateSurvey Software


Turn on the controller → run MateSurvey → go to **Config** main menu → tap **Connect**.

In the *Connect* screen, select **GEOMATE** for the *Manufacture* field, **SG6** for *Device Type* field,

Bluetooth for *Connection Type* field.

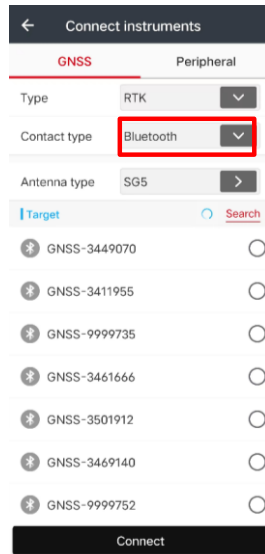

Tap the **Bluetooth Manager** and turn on the **Bluetooth** function to search Bluetooth device around → select the target device in the list → Tap back button → select the target device in the Bluetooth manager list.

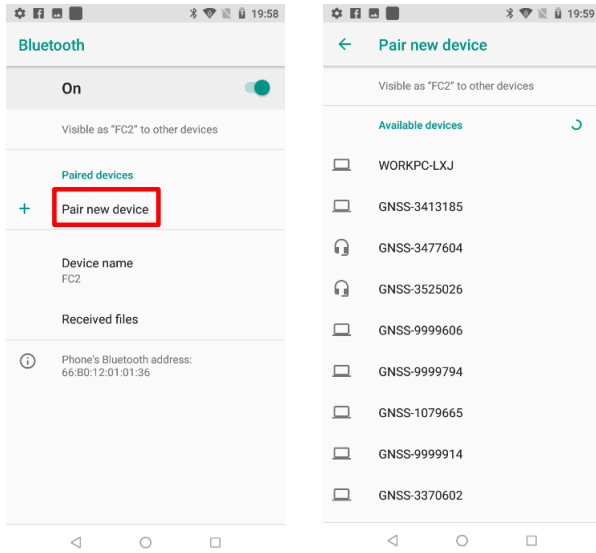

Tap the **Connect** button to build the connection.


2.8 Downloading Logged Data

Data logging involves the collection of GNSS measurement data over a period at a static point or points, and subsequent post-processing of the information to accurately compute baseline information. Data logging using receivers requires access to suitable GNSS post-processing software such as the GEOMATE MateOffice Software.


2.8.1 FTP Download

The procedures of downloading logged data through FTP are as follows:

- (1) Switch on the receiver, search its Wi-Fi in the computer and connect.
- (2) After the successful connection, open the file manager in the computer and input "ftp:\\192.168.1.1" in the address box.

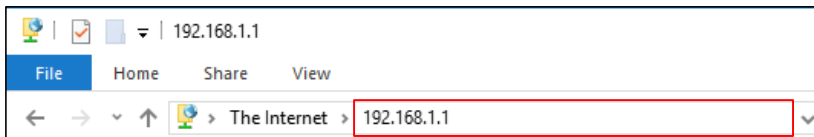

- (3) Input user name and password, the default user name and password are "ftp".

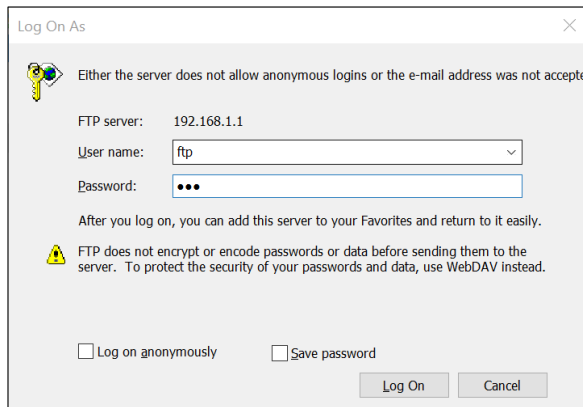

- (4) Double click the folder "repo_receiver SN" (take 3411955 as example), you will see 9 folders. The "push_log" folder is used to save the log files, and the other 8 folders represent different logging sessions and are used for store static data.

internet > 192.168.1.1




(5) Double click the folder that you have configured to store the static data, you will see the folder(s) created by the SG6 system automatically and named by the date which is decide by GPS time when you start to log data.




批注 [5]: 时间需不需要改成 23 年的

(6) Select the destination folder and double click it, two folders named as different data format (hcn and rinex) will be displayed.

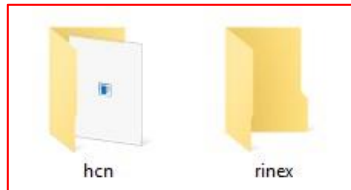

 (7) Select the data format that you configured to save the static data, you will find the static raw data.

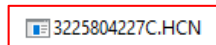

Notes: For hcn files, the name of the file is represented as XXXXXXDDDNN, where XXXXXX is the SN of the receiver, DDD is day of year, and NN is the recording session.

⚠ WARNING – The static data will be saved in the first logging session, the “record_1” folder, by default. Old files will be deleted if the storage space is full. If you configure not to auto delete old files when the memory is low, the receiver will stop data logging.

 
2.8.2 Web Server Download

The procedures of downloading logged data through web server refer to [5.4.4 Data Download Submenu.](#)

2.8.3 USB Download

The procedures of downloading logged data in the receiver are as follows:


(1) Switch on the receiver and connect it with a computer by Type-C. After the successful connection, a removable disk named as the Serial Number (SN) of the receiver will appear on the computer.

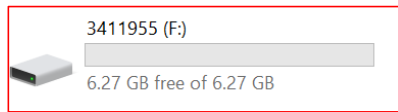


(2) Double click the removable disk and you will see the folder named as “repo”.



 
(3) Double click this folder, you will see 9 folders. The “push_log” folder is used to save the log files, and the other 8 folders represent different logging session and are used for store static data.

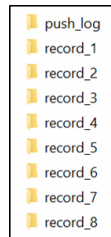

 
(4) Double click the folder that you have configured to store the static data, you will see the folder(s) created by the SG6 system automatically and named by the date which is decide by GPS time when you start to log data.

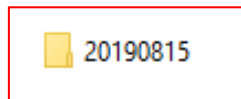

 
(5) Select the destination folder and double click it, and then two folders named as different data format (hcn and rinex) will be displayed.

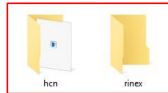

 (6) Select the data format that you have configured to save the static data, you will find the static raw data.

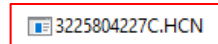

Tip – For hcn files, the name of the file is represented as XXXXXDDDNN, where XXXXX is the SN of the receiver, DDD is day of year, and NN is the recording session.


 **WARNING** – The static data will be saved in the first logging session, the “record_1” folder, by default. Old files will be deleted if the storage space is full. If you configure not to auto delete old files when the memory is low, the receiver will stop data logging.

3 Equipment Setup and Operation

3.1 Post-processing Base Station Setup

For good performance, the following base station setup guidelines are recommended:

Components:

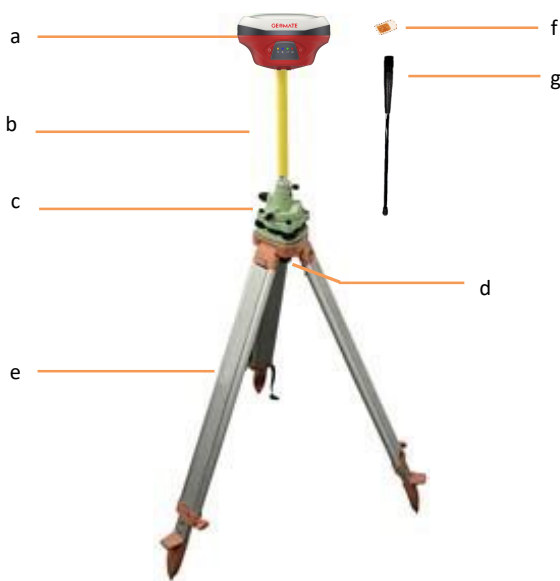

No.	Name
a	SG6 GNSS receiver
b	Extension pole (30 cm)
c	Tribrach adaptor
d	Tribrach w/ Opti
e	Aluminum tripod
f	Micro SIM card (12 mm x 15 mm)
g	UHF whip antenna

Steps:

- (1) Put tripod in the target position, center and level it roughly.
- (2) Place and lock the tribrach in the tripod.

If work as a cellular base station, the SIM card need to be inserted

- (3) Screw the receiver onto the tribrach.
- (4) Center and level the receiver more precisely.

If work as a UHF base station, the UHF whip antenna need to be connected to the receiver.

- (5) Connect the receiver to external battery by using external power cable if necessary.
- (6) Connect the receiver to external storage disk by using USB cable if necessary.
- (7) Turn on the receiver by pressing the power button for 3 s.
- (8) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.
- (9) Press the function button to select Data to start recording static raw.

If work with a data controller:

- (10) Switch on the data controller and connect it to the receiver.
- (11) Use software to configure the receiver as static mode.

3.2 Real-Time Rover Station Setup

For good performance, the following rover station setup guidelines are recommended:

Components:



No.	Name
a	SG6 GNSS receiver
b	whip antenna
c	2M range pole w/bag
d	Micro SIM card (12 mm x 15 mm)

Steps:

(1) Keep the receiver fully charged.

If work as a cellular rover station, the SIM card need to be inserted before the batteries.

(2) Screw the receiver onto the pole.

If work as a UHF rover station, the UHF whip antenna need to be connected to the receiver.

(3) Turn on the receiver by pressing the power button for 3 s.

(4) Switch on the data controller and connect it to the receiver.


(5) Use software to configure the receiver as cellular rover or UHF rover mode.


(6) Center and level the receiver more precisely.

(7) Use software to start survey.


3.3 Working with the Tilt Compensation

3.3.1 Operation Steps


(1) Open MateSurvey-> Tap PT Survey-> Tap  to activate tilt measurement.

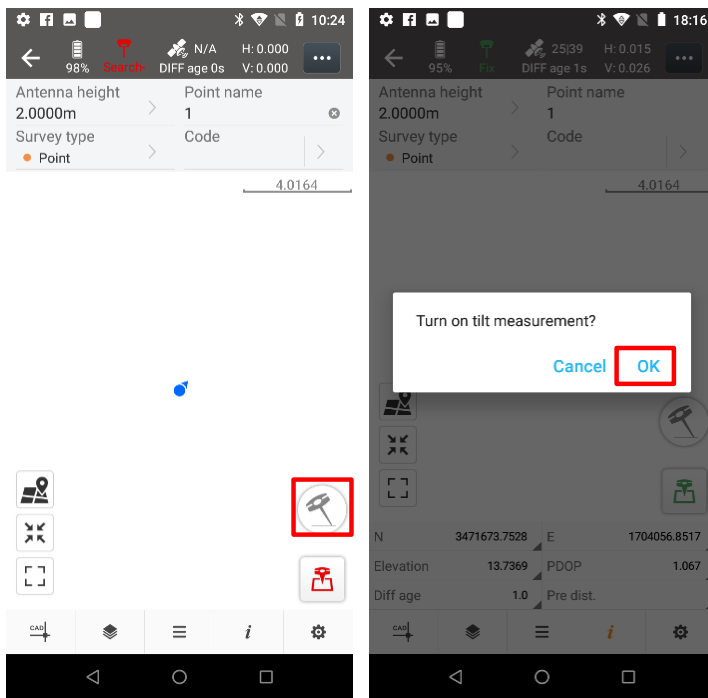


(2) Hold the pole vertical for a while and shake according to the procedures in the interface to do initialization.


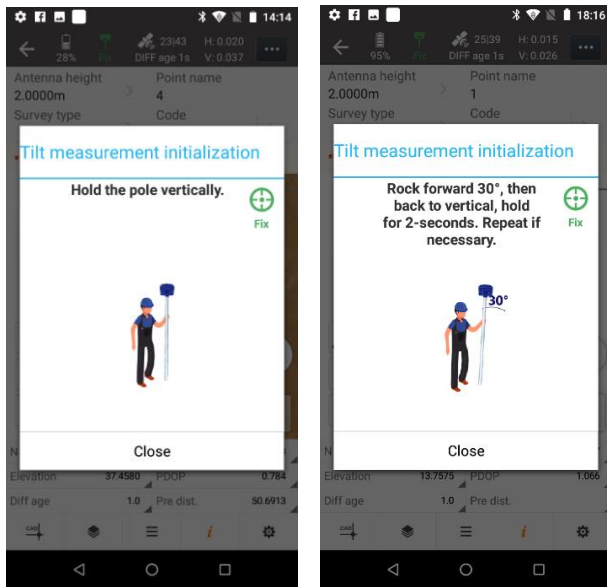



(3) This icon  will appear when the initialization is successful.

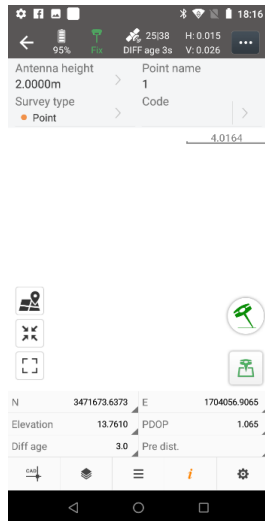

(4) Enter the Name and Antenna, then tap , point will be collected and store to Points automatically.

(5) When this icon  appears, the text will show “Tilt is not available, please measure in alignment” at the bottom of interface.

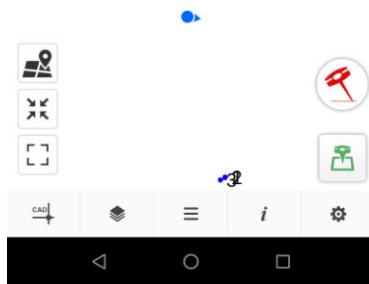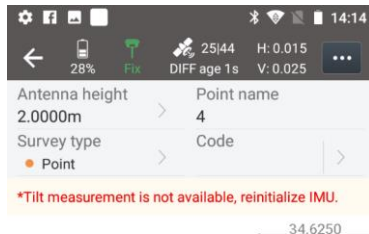

(6) Tap  to close tilt compensation.

3.3.2 Notes of using tilt measurement

1. At the beginning of initialization, the pole height of the instrument should be the same as that antenna height in the software.
2. In the process of tilt measurement, if the controller shows that “Tilt is not available, please measure in alignment” (red), please shake RTK slightly from left to right or back to front until the reminder disappears.
3. The controller will prompt “Tilt is not available, please measure in alignment” when the receiver is stationary over 30 seconds or the pole hit the ground roughly.
4. The pole cannot be shaken when point is collected.
5. Initialization is required:
 - when the RTK is turned on every time;

- when IMU module is turned on every time;
- when receiver drops at working;
- when the pole is tilted more than 65 degree;
- when the receiver is stationary more than 10 minutes;
- when the RTK rotates too fast on the matching pole (2 rounds per second);
- when the pole hit the ground toughly.

3.4 Visual Survey

3.4.1 Survey point mode

The survey point mode means that by taking video survey of the target to be surveyed and solving the survey result in real time, and selecting the point to be surveyed on the photo than you can get the coordinate value of the point.

(1) Finish the IMU initialization, enter the visual survey, do as it prompts;

(2) Choose the For measurement mode;

(3) Create a new task, and aim at which point you want to survey, click the button to record the video;

Note: Keeping constant speed when shooting, the length of the video must not be less than 5 seconds, the route of walking can refer to the following picture, walking in a straight line or around the shooting.

(4) Click the icon of End Recording to finish recording and confirm the solved data, and the software will automatically perform data solving;

(5) Select the photo which the point to be surveyed is located, capture the corresponding point location, click [Select], and the latitude, longitude and plane coordinates of the point will be displayed below.

Note: The 2D quality represents the resolution accuracy of the surveyed point. Capturing the same point position on multiple photos will improve the accuracy of the surveyed point, and the 2D value of the point decreases gradually.

(6) Click [Save] and enter the point name to save the surveyed points in the point management. After saving successfully, you can click on the point library and go to the point management to view the coordinates you just saved. If additional points are needed, you can continue to select points for solving and saving data.

3.4.2 Modeling mode

Modeling mode means that video surveys can be taken from multiple angles, distances and heights of the target to be surveyed, and then the observed image data can be exported and later imported into the modeling software for modeling.

- (1) The same operation with the point mode, finish the IMU initialization;
- (2) Choose the Modeling mode;
- (3) Create a new task, and aim at which building you want to model, click the button to record the video;

Note: When filming, keep a constant speed, the length of the video should not be less than 5 seconds, the route of travel can refer to the example, it is recommended that from different heights, different angles, different distances to survey the target for multi-sided shooting. If the target to be surveyed is single-sided, it is recommended to use straight shooting; if the target to be surveyed is a panorama of building, it is recommended to shoot around, and the camera is recommended to have a certain angle (30°-45°) with the target to be surveyed when shooting. The schematic diagram is as follows.

Click the end icon to finish recording and make sure that the data has been saved to exit MateOffice.

 
4 Configuring Through a Web Browser

Supported browsers:

- Google Chrome
- Microsoft Internet Explorer® version 10, or higher

To connect to the receiver through a web browser:

1. Turn on the Wi-Fi of the receiver.
2. Search the wireless network named as GNSS-XXXXXX (the SN of your receiver) on your computer, and then establish the connection.
3. After the successful connection between your computer and the receiver, enter the IP address (192.168.1.1) of the receiver into the address bar of the web browser on your computer:

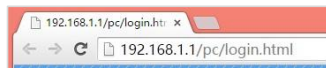

4. The web browser prompts you to enter a login account and password:




The default login account for the receiver is:

- Login Account: admin
- Password: password

Note – Tick **remember me** option, and then the browser will remember the Login Account and Password you entered.

5. Once you log in, the web page appears as follows:

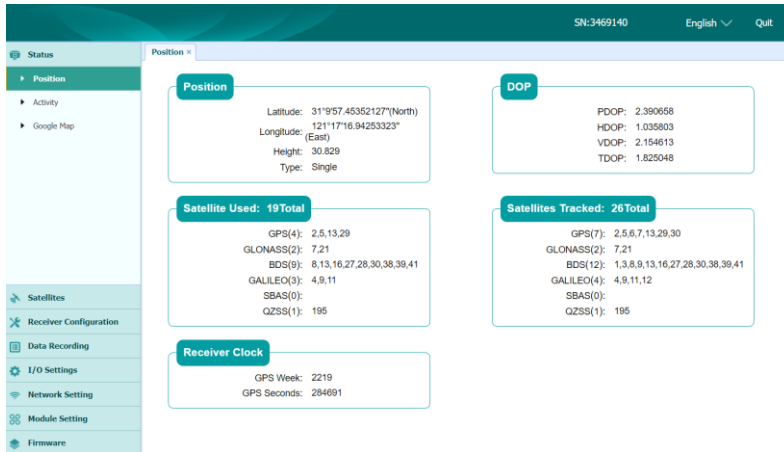


This web page shows the configuration menus on the left of the browser window, and the setting on the right. Each configuration menu contains the related submenus to configure the receiver and monitor receiver performance.

This chapter describes each configuration menu.

To view the web page in another language, select the corresponding language name from the dropdown list on the upper right corner of the web page.

 Currently, two languages are available:

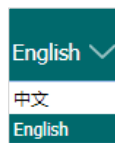

4.1 Status Menu

This menu provides a quick link to review the receiver's position information, satellites tracked, runtime, current data log status, current outputs, available memory, and more.

4.1.1 Position Submenu

This page shows the relevant position information about the receiver's position solution which including the position, DOP values, satellites used and tracked, and the receiver clock information.

Position

Latitude: 31°9'57.36875055"(North)
 Longitude: 121°17'16.97717278"(East)
 Height: 35.999
 Type: Single

DOP

PDOP: 1.172767
 HDOP: 0.616858
 VDOP: 0.997431
 TDOP: 0.744274

Satellite Used: 30Total

GPS(7): 1,7,8,9,21,27,30
 GLONASS(5): 9,15,18,19,20
 BDS(10): 1,3,7,9,10,26,35,40,44,59
 GALILEO(6): 1,12,24,26,31,33
 SBAS(0):
 QZSS(2): 194,195

Satellites Tracked: 45Total

GPS(8): 1,7,8,9,16,21,27,30
 GLONASS(5): 9,15,18,19,20
 BDS(23): 1,2,3,4,5,6,7,8,9,10,12,16,24,26,29,35,38,39,40,44,45,59,60
 GALILEO(7): 1,9,12,24,26,31,33
 SBAS(0):
 QZSS(2): 194,195

Receiver Clock

GPS Week: 2194
 GPS Seconds: 379271

4.1.2 Activity Submenu

Lists several important items to help you understand how the receiver is being used and its current operating condition. Items include the identities of currently tracked satellites, internal and external storage usage rate, how long the receiver has been operational, state of the internal battery, power source state, files being logged, and data streams being output. With this information, it is easy to tell exactly what functions the receiver is performing

Satellites Tracked: 38Total

GPS(9): 2,5,6,11,13,15,29,29,30
 GLONASS(5): 1,7,8,21,23
 BDS(18): 1,3,4,6,7,8,9,13,14,16,27,28,33,36,36,41,43,59
 GALILEO(4): 7,13,26,33
 SBAS(0):
 QZSS(2): 195,196

Activity Status

Current Time: 2022-07-21 07:11:40 (UTC)
 Operation Duration: 00:00:00 00:59:29
 Internal Storage: 0.00% 0MB/6430MB
 External Storage: 0% Disconnected
 External Power: Disconnected
 Battery: 23%


4.1.3 Google Map Submenu

Tap this submenu to show the location of the receiver on Google map.



4.2 Satellites Menu

Use the Satellites menu to view satellite tracking details and enable/disable GPS, GLONASS, BDS and Galileo constellations. These menus include tabular and graphical displays to provide all required information on satellite tracking status.

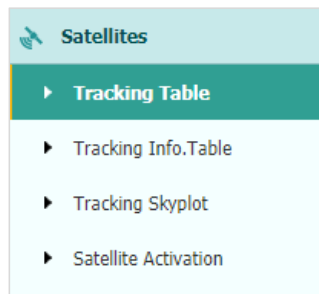

4.2.1 Tracking Table Submenu

Provides the status of satellites tracked in general, such as the satellite ID, satellite type, attitude angle, azimuth angle, L1 SNR, L2 SNR, L5 SNR and enable/disable status of each one.

SV	Type	Elevation Angle	Azimuth Angle	L1 SNR	L2 SNR	L5 SNR	B1C SNR	B2A SNR	Enabled
3	GPS	21	282	40.000	40.850	30.880	0.000	0.000	Yes
4	GPS	15	318	40.030	36.800	27.800	0.000	0.000	Yes
16	GPS	45	242	44.820	39.450	0.000	0.000	0.000	Yes
26	GPS	74	318	48.720	43.430	36.160	0.000	0.000	Yes
27	GPS	12	188	34.690	35.890	26.250	0.000	0.000	Yes
29	GPS	23	50	41.370	36.580	0.000	0.000	0.000	Yes
31	GPS	55	44	45.450	41.970	0.000	0.000	0.000	Yes
32	GPS	35	149	42.840	38.490	30.140	0.000	0.000	Yes
1	GLONASS	52	211	41.760	46.170	0.000	0.000	0.000	Yes
2	GLONASS	40	313	47.100	46.320	0.000	0.000	0.000	Yes
8	GLONASS	14	174	36.530	43.730	0.000	0.000	0.000	Yes
12	GLONASS	41	300	45.760	49.200	0.000	0.000	0.000	Yes
21	GLONASS	22	94	37.800	44.160	0.000	0.000	0.000	Yes
1	BDS	45	140	39.830	42.710	44.970	0.000	0.000	No
2	BDS	35	235	35.420	43.410	42.250	0.000	0.000	No
3	BDS	50	199	40.270	44.410	43.470	0.000	0.000	Yes


4.2.2 Tracking Info. Table Submenu

The following figure is an example of satellite track diagram page. Users can determine the satellite types and the corresponding SNR of L-band carriers to be displayed in any combination.




4.2.3 Tracking Skyplot Submenu

The following figure is an example of Skyplot page.

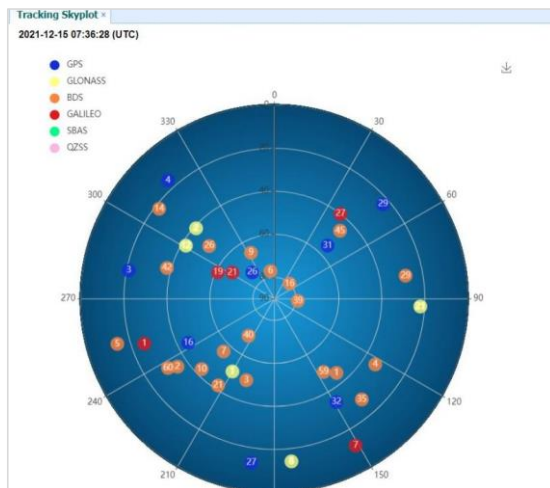

4.2.4 Satellite Activation Submenu

Use this menu to enable or disable satellites.

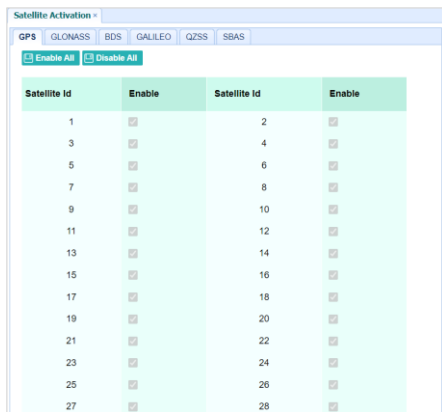


The screenshot shows the 'Satellite Activation' submenu with tabs for GPS, GLONASS, BDS, GALILEO, QZSS, and SBAS. Below the tabs are 'Enable All' and 'Disable All' buttons. The main area contains a table with columns for 'Satellite Id' and 'Enable'.

Satellite Id	Enable	Satellite Id	Enable
1	<input checked="" type="checkbox"/>	2	<input checked="" type="checkbox"/>
3	<input checked="" type="checkbox"/>	4	<input checked="" type="checkbox"/>
5	<input checked="" type="checkbox"/>	6	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>	8	<input checked="" type="checkbox"/>
9	<input checked="" type="checkbox"/>	10	<input checked="" type="checkbox"/>
11	<input checked="" type="checkbox"/>	12	<input checked="" type="checkbox"/>
13	<input checked="" type="checkbox"/>	14	<input checked="" type="checkbox"/>
15	<input checked="" type="checkbox"/>	16	<input checked="" type="checkbox"/>
17	<input checked="" type="checkbox"/>	18	<input checked="" type="checkbox"/>
19	<input checked="" type="checkbox"/>	20	<input checked="" type="checkbox"/>
21	<input checked="" type="checkbox"/>	22	<input checked="" type="checkbox"/>
23	<input checked="" type="checkbox"/>	24	<input checked="" type="checkbox"/>
25	<input checked="" type="checkbox"/>	26	<input checked="" type="checkbox"/>
27	<input checked="" type="checkbox"/>	28	<input checked="" type="checkbox"/>


4.3 Receiver Configuration Menu

Use this menu to configure settings such as the antenna type and height, elevation mask and PDOP setting, the reference station coordinates, receiver resetting and web interface language:

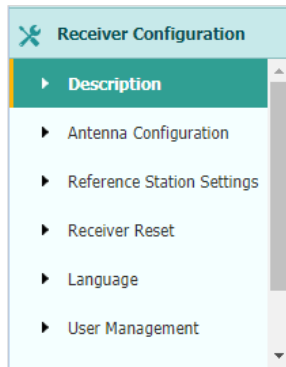


4.3.1 Description

This submenu shows the receiver information and reference station information, including antenna related information, elevation mask angle, reference station work mode and position, etc.

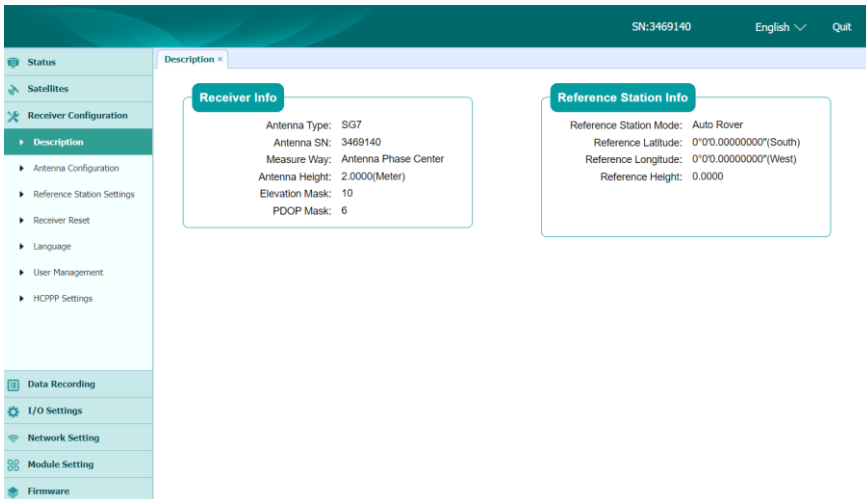

4.3.2 Antenna Configuration Submenu


Use this screen to configure all the items related to the GNSS antenna. You must enter the correct values for all antenna-related fields, because the choices you make affect the accuracy for logged data and broadcast correction data significantly:

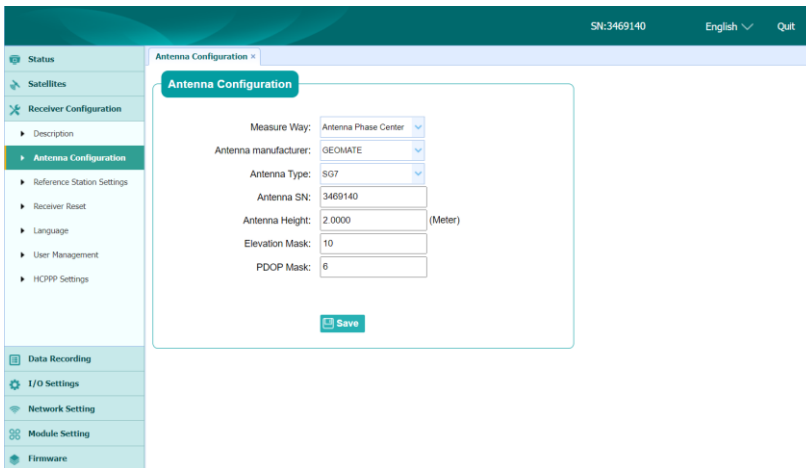

4.3.3 Reference Station Settings Submenu

Use this screen to configure settings such as the station coordinates and the broadcast station identifiers. You must enter accurate information in these fields, as this data affects the accuracy of logged data files and broadcast correction data significantly:

For Reference Station Mode, there is one modes available:

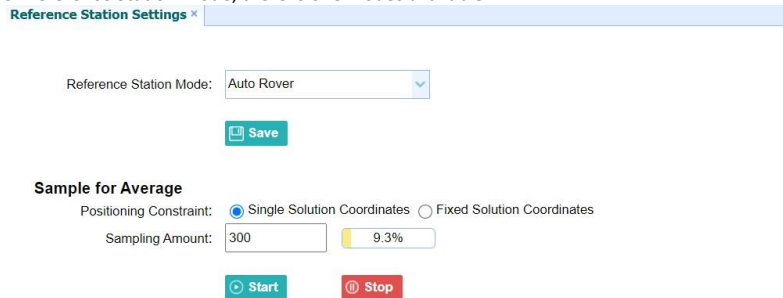


4.3.3.1 Auto Rover: The receiver will serve as a rover after this mode is enabled, and then receive



correction data through the working mode set last time.


4.3.4 Receiver Reset Submenu

Use this screen to completely or partially reset the receiver:

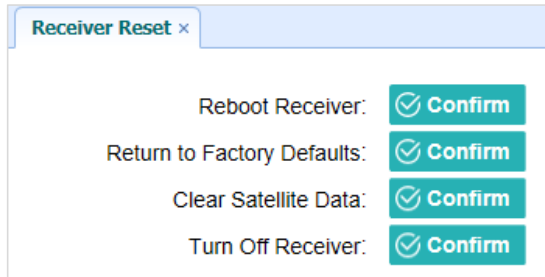

4.3.5 Languages Submenu

Use this screen to select the web interface language:

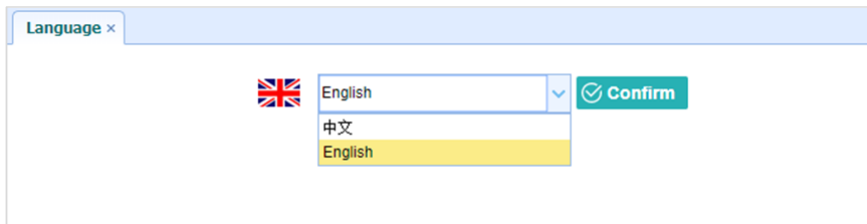

4.3.6 User Management Submenu

User Management ×

User Management		
Add Save Delete Modify Anti-theft password		
ID	User Name	Password
1	<input type="text" value="admin"/>	<input type="password" value="*****"/>
2	<input type="text" value="admin1"/>	<input type="password" value="*****"/>
3	<input type="text" value="admin2"/>	<input type="password" value="*****"/>


4.3.7 HCPPP Settings

HCPPP Settings ×

HCPPP Range: Save

4.4 Data Recording Menu

Use the Data Logging menu to set up the receiver to log static GNSS data and to view the logging settings. You can configure settings such as observable rate, recording rate, continuous logging limit, and whether to auto delete old files when memory is low. This menu also provides the controls for the FTP push feature:

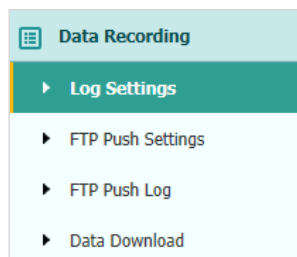

4.4.1 Log Settings Submenu

Here shows the data logging status, including internal and external storage usage and data logging status of each session. Also, users can configure the data logging settings for each session, including recording name, store location, storage limit, store formats, start time, etc

Log Settings

Store Info			
	Position	Total Storage	Storage Available
1	Internal Storage	7595MB	7227MB
2	External Storage	0MB	0MB

6GB. It will stop recording when the storage is full.

Record Info						
Recording Numbe	File Name	Activated	Log Status	Setting Parameter	Switch	Clear Data
1	record1	No	Not Recording	Modify Detail	<input type="checkbox"/> ON <input type="checkbox"/> OFF	<input type="button" value="Clear"/>

To edit the settings of each session, click the **Modify** button to the right of the required session, and then the *Recording Edit* screen appears:

The screenshot shows the 'Recording Edit' window with the following settings:

- Auto Record: Yes No
- Sample Interval: 1Hz (dropdown)
- Elevation Mask: 10 (°) (input)
- Duration Time: 1440 (Minute) (input)
- Site Name: 3469140 (input)
- Antenna Height: 0.0000 (input)
- Measure Way: Antenna Phase Ce (dropdown)
- RINEX Version: 3.0x (dropdown)
- Compress Rinex Data: Yes No
- Advanced button
- Save button (green)
- Back button (red)

Click advanced to see more settings.



The screenshot shows the 'Recording Edit' window with advanced settings:

- Auto Record: Yes No
- Sample Interval: 1Hz (dropdown)
- Elevation Mask: 10 (°) (input)
- Duration Time: 1440 (Minute) (input)
- Site Name: 3469140 (input)
- Antenna Height: 0.0000 (input)
- Measure Way: Antenna Phase Ce (dropdown)
- RINEX Version: OFF (dropdown)
- Advanced button
- Start Date: Yes No
- Apply Time: Yes No
- Integral Point Store: Yes No
- Circulating Memory: Yes No
- Single Observations: Yes No
- the data overwritten first file after storage space is full
- Turn on to record a single observation. Turn off to record repeated observations.
- Store Location: Internal Storage (dropdown)
- Assigned Storage: 6000 (MB) (input)
- Observer: GEOMATE (input)
- Observe Agency: GEOMATE (input)
- FTP Push:
 - Close
 - 1:ftp server 1
 - 2:ftp server 2
 - 3:ftp server 3
- Save button (green)
- Back button (red)

In this screen, you can configure all the data logging parameters, and determine whether the recording files will be affected by the FTP Push. The parameters are mainly as follows:

- 4.4.1.1 Auto Record:** on or off.
- 4.4.1.2 Sample Interval:** Select the observable rate from the dropdown list.
- 4.4.1.3 Elevation Mask:** Enter the elevation mask.

- 4.4.1.4 Duration Time:** Set the duration of data logging.
- 4.4.1.5 Site Name:** Enter the name of the site.
- 4.4.1.6 Antenna Height:** the measured height value.
- 4.4.1.7 Measure way:** Antenna Phase Center, Vertical Height, Slant Height
- 4.4.1.8 Storage Format:** Select the format of the data store.
- 4.4.1.9 RINEX Version:** OFF, 3.02, 2.11
- 4.4.1.10 Start Date:** Select **Yes** or **No** option to determine whether to auto record start date.
- 4.4.1.11 Apply Time:** Select **Yes** or **No** option to determine whether to auto record apply time.
- 4.4.1.12 Integral Point Store:** Select **Yes** or **No** option to determine whether to allow receiver to save data every hour.
- 4.4.1.13 Circulating Memory:** Select **Yes** or **No** option to determine whether to auto delete old files if the storage space is full.
- 4.4.1.14 Repeat Observations:** Select **Yes** or **No** option to determine whether to turn on to record a single observation.
- 4.4.1.15 Store Location:** Internal Storage, External Storage.
- 4.4.1.16 Assigned Storage:** The assigned memory size of current thread(for example, Record 1) is 10000MB
- 4.4.1.17 Observer:** Enter the name of observer.
- 4.4.1.18 Observer Agency:** Enter the name of observer agency.
- 4.4.1.19 FTP Push:** Decide whether to push the stored files to the FTP server of your choice.

Tap  **Save** button to save the settings and back to the *Log Settings* screen. Also, users can click  **Back** to abandon the changed settings and back to *Log Settings* screen.

Note – To modify data logging parameters, make sure the data logging session is switched off.

To switch on or off **ANY** data logging session, tap the **ON** or **OFF** button on the right of the required session.

To delete the recorded files of **ANY** data logging session, tap the **Clear** button on the right of the required session.

To delete the recorded files of **ALL** data logging sessions, tap the **Clear ALL Accounts** button.

4.4.2 FTP Push Settings Submenu

Use this screen to configure the receiver to push stored files to the FTP server of your choice. Only files that are configured to use FTP push are transmitted.

FTP Push Settings >

Record Info				
Server ID	Server IP	Remote Directory	Server Description	Modify
1	192.168.3.72	/repo/first	ftp server 1	Modify
2	192.168.3.72	/repo/second	ftp server 2	Modify
3	192.168.3.72	/repo/third	ftp server 3	Modify

Tap **Modify** button on the right of the required FTP server and the *FTP Push Settings* screen appears:

FTP Push Settings [Close]

Server IP:

Port:

Remote Directory:

Local directory: [Dropdown]

Server Description:


User Name:

Password:

[Save](#) [Back](#)

4.4.3 FTP Push Log Submenu


Shows the related information about the recorded files that be pushed. And users can tap **Clear Ftp Send Log** button in the upper right corner to clear the log of FTP Push operations.

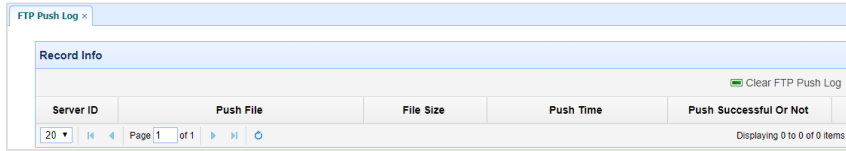

4.4.4 Data Download Submenu


In this submenu, users can download the data files that recorded in the internal storage through the internal FTP site.

1. Click this submenu, and then the log on dialogue box will prompt you to enter a user name and password:

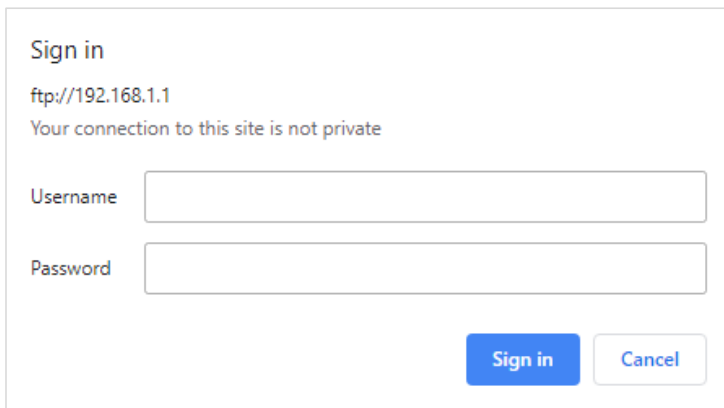


The default logon account for the internal FTP site is:



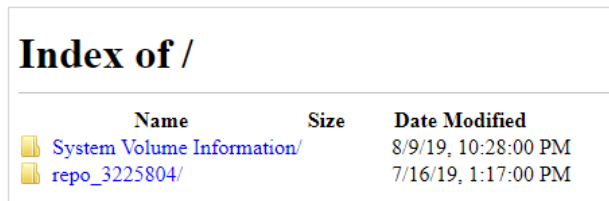






- > User name: ftp
 - > Password: ftp
2. Click the directory named as “repo” to view and download the files currently stored on the receiver:



3. To find the file need to be downloaded, click the name of data logging session → the date of file that be recorded → the format of the file → the name of the target file.


Index of /repo_3225804/

 [parent directory]

Name	Size	Date Modified
 push_log/		7/16/19, 1:17:00 PM
 record_1/		8/15/19, 10:22:00 AM
 record_2/		7/16/19, 1:17:00 PM
 record_3/		7/16/19, 1:17:00 PM
 record_4/		7/16/19, 1:17:00 PM
 record_5/		7/16/19, 1:17:00 PM
 record_6/		7/16/19, 1:17:00 PM
 record_7/		7/16/19, 1:17:00 PM
 record_8/		7/16/19, 1:17:00 PM

4. To download a file, left click the name of the target file → download the file according to the prompts.

 4.5 IO Settings Menu

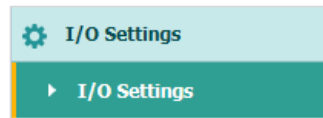

Use the IO Settings menu to set up all receiver outputs and inputs. The receiver can output CMR, RTCM, Raw data, Ephemeris data, GPGGA, GPGSV, on TCP/IP, UDP, serial port, or Bluetooth ports.


4.5.1 IO Settings Submenu

The following figure shows an example of the screen that appears when you select this submenu.


I/O Settings >						
	Type	Description	Output	Connection Status	Modify	
1	RTK Client	211.144.118.5:2102	---	Unconnected	Connect	Disconnecting
2	TCP/UDP_Client1/NTRIP Serv	192.168.3.18:9900	---	Unconnected	Connect	Disconnecting
3	TCP/UDP_Client2/NTRIP Serv	192.168.3.18:9901	---	Unconnected	Connect	Disconnecting
4	TCP/UDP_Client3/NTRIP Serv	192.168.3.18:9902	---	Unconnected	Connect	Disconnecting
5	TCP/UDP_Client4/NTRIP Serv	192.168.3.18:9903	---	Unconnected	Connect	Disconnecting
6	TCP/UDP_Client5/NTRIP Serv	192.168.3.18:9904	---	Unconnected	Connect	Disconnecting
7	TCP/UDP_Client6/NTRIP Serv	192.168.3.18:9905	---	Unconnected	Connect	Disconnecting
8	TCP Server/NTRIP Caster1	9901	---	Closed	Connect	Disconnecting
9	TCP Server/NTRIP Caster2	9902	---	Closed	Connect	Disconnecting
10	TCP Server/NTRIP Caster3	9903	---	Closed	Connect	Disconnecting
11	TCP Server/NTRIP Caster4	9904	---	Closed	Connect	Disconnecting
12	Serial Port	115200	---	---	Settings	
13	Bluetooth	GNSS-3411955	GPGGA:5s,	---	Settings	
14	Radio	462.5500MHz	---	---	Settings	

In this submenu, users can configure 6 types of input and output settings.

1. RTK Client


After configuring the settings of RTK client, users can log on CORS or APIS. Tap the **Connect** button to the right → the *IO Settings* screen will appear → choose one of the connection protocols among the NTRIP, APIS_BASE and APIS_ROVER → configure the related parameters → click  to log on CORS or APIS.

➤ Connection Protocol: NTRIP

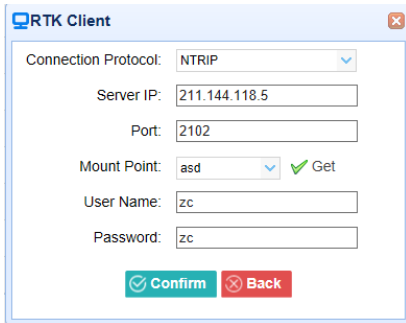


The screenshot shows the 'RTK Client' dialog box with the following fields: 'Connection Protocol' set to 'NTRIP', 'Server IP' as '211.144.118.5', 'Port' as '2102', 'Mount Point' as 'asd' with a 'Get' button, 'User Name' as 'zc', and 'Password' as 'zc'. There are 'Confirm' and 'Back' buttons at the bottom.

➤ Connection Protocol: APIS_BASE

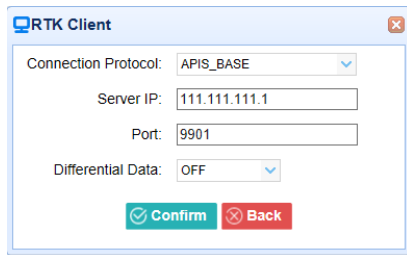


The screenshot shows the 'RTK Client' dialog box with the following fields: 'Connection Protocol' set to 'APIS_BASE', 'Server IP' as '111.111.111.1', 'Port' as '9901', and 'Differential Data' set to 'OFF'. There are 'Confirm' and 'Back' buttons at the bottom.

➤ Connection Protocol: APIS_ROVER

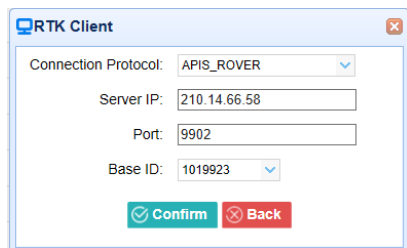

The screenshot shows the 'RTK Client' dialog box with the following fields: 'Connection Protocol' set to 'APIS_ROVER', 'Server IP' as '210.14.66.58', 'Port' as '9902', and 'Base ID' as '1019923'. There are 'Confirm' and 'Back' buttons at the bottom.


➤ Connection Protocol: TCP

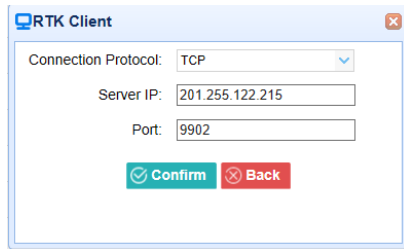

2. TCP/UDP_Client/NTRIP Server

Tap the **Connect** button on the right of required TCP/UDP Client → the *IO Settings* screen will appear → select the connection protocol from TCP, UDP, NTRIP1.0 and NTRIP2.0 → enter the IP and Port of the target server → configure messages that you want to output to the target server → click **Confirm** to save and complete the connection.

- Connection Protocol: TCP

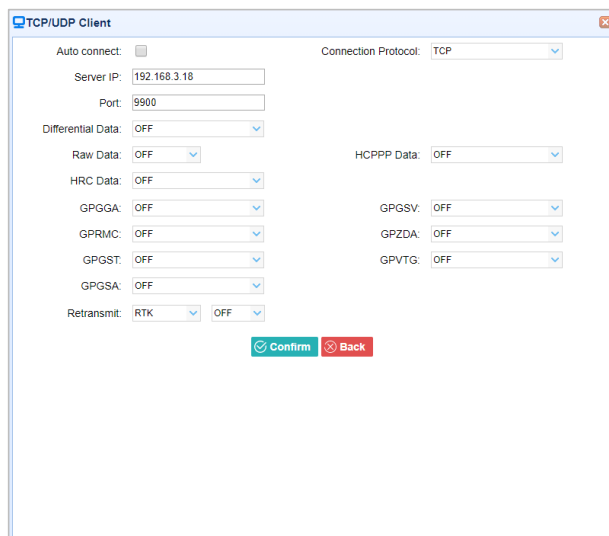


- Connection Protocol: UDP

The screenshot shows the 'TCP/UDP Client' configuration window. The 'Auto connect' checkbox is unchecked. The 'Connection Protocol' dropdown is set to 'UDP'. The 'Server IP' is '192.168.3.18' and the 'Port' is '9900'. The 'Differential Data' dropdown is set to 'OFF'. The 'Raw Data' dropdown is set to 'OFF'. The 'HRC Data' dropdown is set to 'OFF'. The 'GPGGA' dropdown is set to 'OFF'. The 'GPRMC' dropdown is set to 'OFF'. The 'GPGST' dropdown is set to 'OFF'. The 'GPGSA' dropdown is set to 'OFF'. The 'Retransmit' dropdown is set to 'RTK'. The 'HCPPPP Data' dropdown is set to 'OFF'. The 'GPGSV' dropdown is set to 'OFF'. The 'GPZDA' dropdown is set to 'OFF'. The 'GPVTG' dropdown is set to 'OFF'. At the bottom, there are 'Confirm' and 'Back' buttons.


➤ Connection Protocol: NTRIP1.0

The screenshot shows the 'TCP/UDP Client' configuration window. The 'Auto connect' checkbox is unchecked. The 'Connection Protocol' dropdown is set to 'NTRIP1.0'. The 'Server IP' is '192.168.3.18' and the 'Port' is '9900'. A 'Password' field is present with masked characters. The 'Mount Point' field is empty. The 'Differential Data' dropdown is set to 'OFF'. The 'Raw Data' dropdown is set to 'OFF'. The 'HRC Data' dropdown is set to 'OFF'. The 'GPGGA' dropdown is set to 'OFF'. The 'GPRMC' dropdown is set to 'OFF'. The 'GPGST' dropdown is set to 'OFF'. The 'GPGSA' dropdown is set to 'OFF'. The 'Retransmit' dropdown is set to 'RTK'. The 'HCPPPP Data' dropdown is set to 'OFF'. The 'GPGSV' dropdown is set to 'OFF'. The 'GPZDA' dropdown is set to 'OFF'. The 'GPVTG' dropdown is set to 'OFF'. At the bottom, there are 'Confirm' and 'Back' buttons.


➤ Connection Protocol: NTRIP2.0

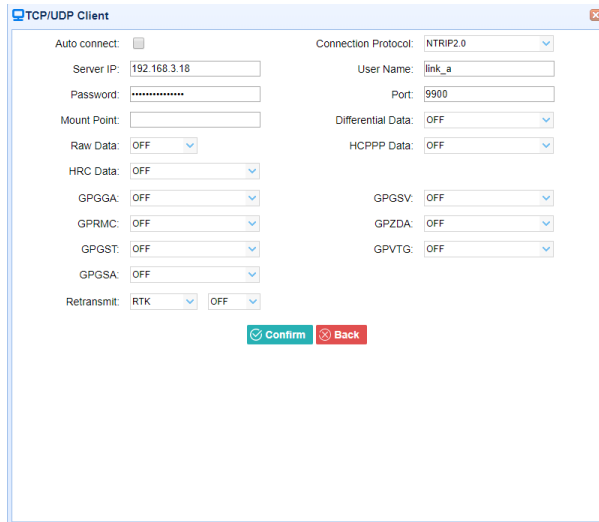

➤ TCP Server/NTRIP Caster


Tap the **Connect** button to the right of required TCP Server/NTRIP Caster → the **IO Settings** screen will appear → select one of the connection protocols between NTRIP and TCP → configure the other related parameters → click  to save the settings and open the server.

➤ Connection Protocol: TCPH

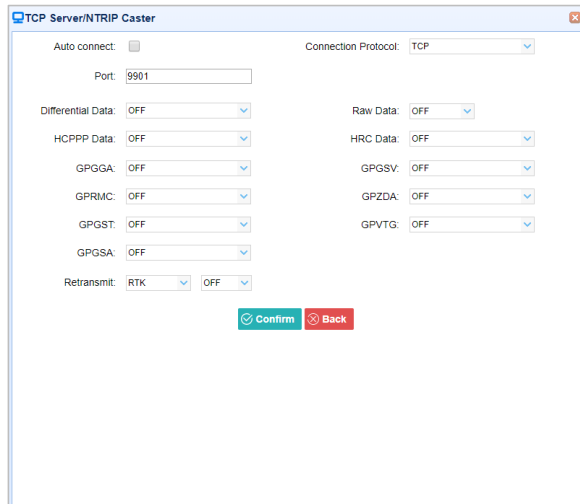


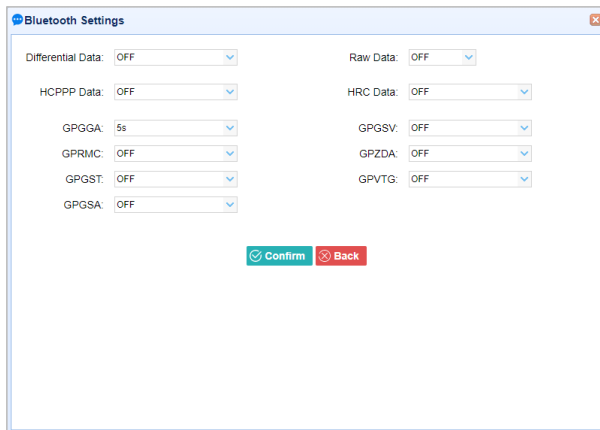
> Connection Protocol: NTRIP

3. Serial Port


Tap the **Settings** button on the right of Serial Port → the *Serial Port Setup* screen will appear → select Baud Rate used to transmit data → configure the messages that you want to output through the serial port → click  to save the settings and start to transmit.


4. Bluetooth

Tap the **Settings** button to the right of Bluetooth → the *Bluetooth Set* screen will appear → configure the messages that you want to transmit through Bluetooth → click  to save the settings and start to transmit.




5. Radio

Tap the **Settings** button to the right of Radio → the *Radio Settings* screen will appear → select the format of differential data that you want to transmit through radio from the dropdown list → click  to save the settings and start to transmit.

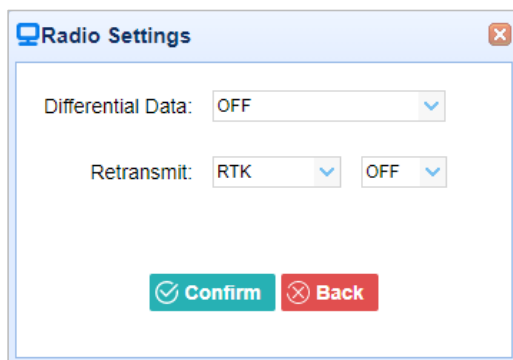


4.6 Module Setting Menu

Use this menu to check module information, configure WiFi, bluetooth, radio related settings, and turn on/off static voice of buzzer:

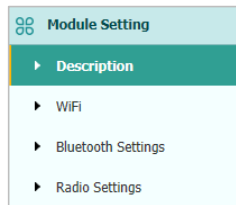


4.6.1 Description Submenu

Use this submenu to check the information of WiFi module, bluetooth module and radio module.

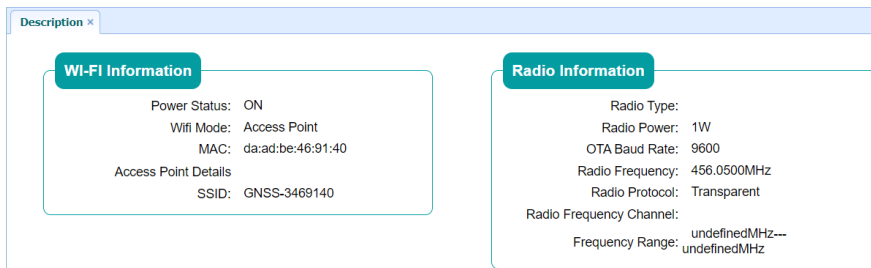


4.6.2 WiFi Submenu

Use this submenu to turn on/off WiFi function and modify password.

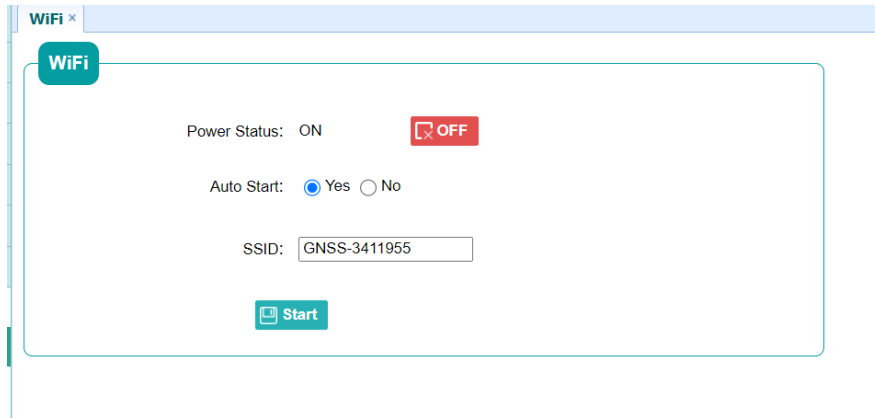

4.6.3 Bluetooth Settings Submenu

Use this submenu to turn on/off bluetooth function and modify PIN number.

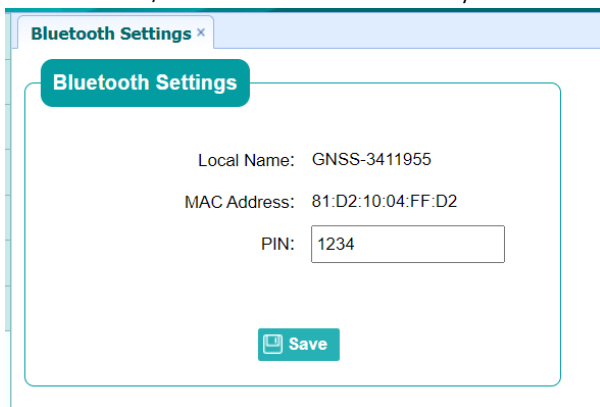

4.6.4 Radio Settings Submenu

Use this submenu to turn on/off radio function and configure radio parameters.

Radio Settings x

Radio Settings

Radio Status: OFF

Auto Start: Yes No

Radio Protocol:

Channel Bandwidth: (kHz)

OTA Baud Rate:

Radio Power:

Radio Frequency: (undefinedMHz---

undefinedMHz)

FEC:

Call Sign:


Call Sign Status: ON OFF

Call Sign Interval: (1--30min)

Call Sign Message:


4.7 Firmware Menu

Use this menu to check the current firmware information, download the system log, update the receiver firmware, download or update the configuration file and register the receiver, and more:

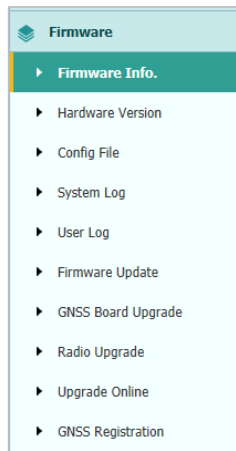


4.7.1 Firmware Info Submenu

 Use this submenu to check the current firmware information. The following figure shows an example of the firmware information.

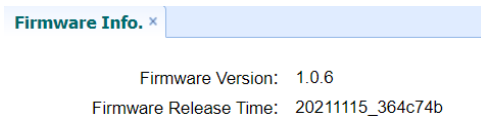


4.7.2 Hardware Version Submenu

Use this submenu to check the hardware information, including main board version and core board version:

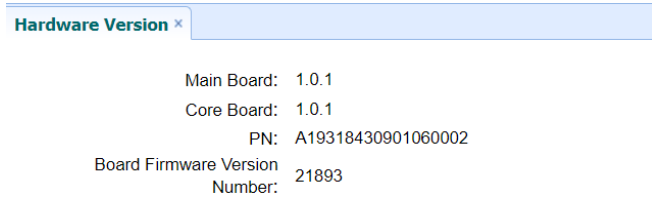


4.7.3 Config File Submenu

Use this submenu to update Configuration File.

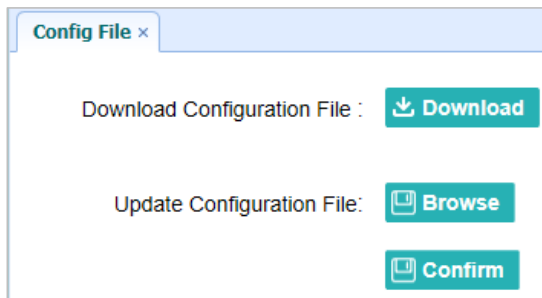


4.7.4 System Log Download Submenu

Use this submenu to download the system log of the receiver.

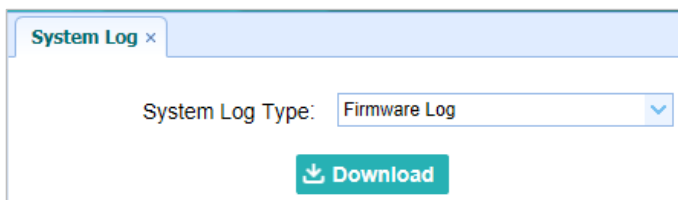


4.7.5 User Log Submenu

Use this submenu to download the user log. Tap **Download** to download current user log; Tick items that you want to see on the user log and tap confirm button to confirm selected user log.

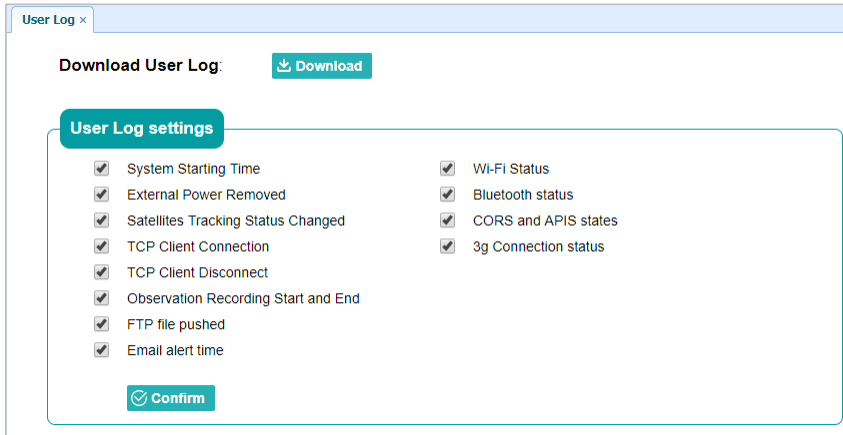

4.7.6 Firmware Update Submenu

Use this submenu to load new firmware to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

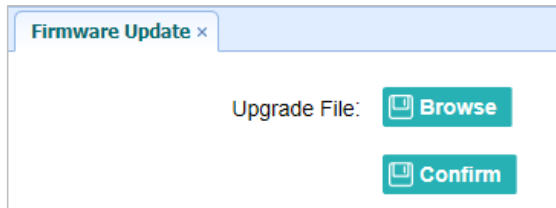


Notes

4.7.6.1 It may take about 3 or 4 minutes to complete the firmware upgrading. Do not touch the power button or unplug the power until the upgrading process finishes, or damage will be caused to the receiver.

4.7.6.2 The receiver will restart after the firmware upgrading is done, so users need to reconnect the receiver with your computer via Wi-Fi, and then log-in the receiver through a web browser to continue the configuration.


4.7.7 GNSS Board Upgrade Submenu

Use this submenu to upgrade GNSS Board. Use this submenu to load new board to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

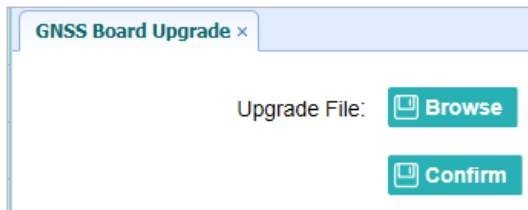


4.7.8 Radio Upgrade Submenu

Use this submenu to browse upgrade file and upgrade radio. Use this submenu to load new radio to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

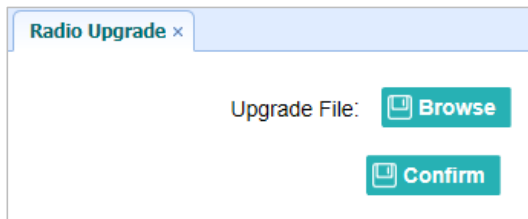

4.7.9 Upgrade Online Submenu

Use this submenu to input Server Address and upgrade online.

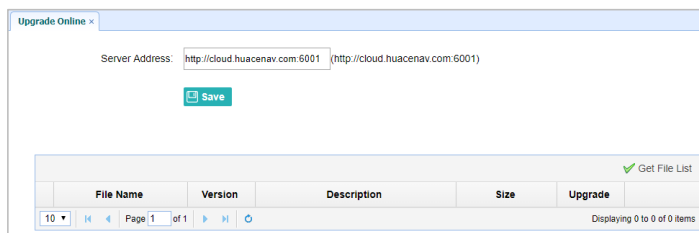

4.7.10 GNSS Registration Submenu


Use this submenu to register the receiver. Paste or enter the registration code to the *Registration Code* field → tap **Registration** button to complete the registration.

GNSS Registration ×

Serial Number:

 
Registration Limit:

Registration Code:

 Registration

4.8 Cloud Service Setting Menu

4.8.1 Cloud Service Setting Submenu

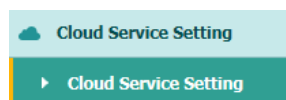

Use this submenu to turn on or turn off Cloud Service, Auto Start, Remote Control and configure other settings.

A screenshot of the 'Cloud Service Setting' menu. At the top, it shows 'Cloud Service States' with 'Connecting' and 'ON' (green) and 'OFF' (red) options. Below that, 'Auto Start' is checked. 'Remote Control' has 'On' selected. There is an 'Anti-theft' input field with a red warning message: 'It cannot modify server IP in anti-theft mode and the function will auto on and upload location info!'. A 'Next' button is below. 'Upload position' has 'On' selected. 'Time Interval' is set to '30s' and 'Position Interval' is set to '50Meter'. The 'Address' is 'cloud.huacenav.com' and the 'Port' is '10000'. At the bottom, there is a 'Change Password' link and a 'Save' button.



GEOMATE POSITIONING

71 Lorong 23 Geylang #07-09 Work + Store (71G)

Singapore 388386

Tel: +86 21 542 60 273 | Fax: +86 21 649 50963

Email: support@geomate.sg

Skype: [geomate_support](#)

Website: www.geomate.sg

This document is intended for general information purposes only. It does not consider the reader's specific circumstances and environmental constraints of use of GNSS

By surveyor, for surveyor

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 50cm between the radiator & your body.