

MASINGO

It's time to **KARAOKE** like a pro

Karaoke Machine Ostinato M7

USER MANUAL

MASINGO

User manual



Karaoke Machine - Dstinato M7

Congratulations! **You've just taken your party game up a notch.**

Whether you're celebrating with a few friends or with the whole gang - in the comfort of your home or in a big event space - your parties will be peppier with this beautifully - designed, deceptively-compact Ostinato M7 - Karaoke Machine from Masingo.

 
Choose from Bluetooth, AUX, USB, MicroSD or FM mode to fill the room with melody. Colorful LED lights set the stage as you belt out your best into one of our top-quality karaoke microphones. Sing out some show tunes with grandma, blast out some big hits with your pals, or serenade your sweetheart. To (literally) top it off, a built-in disco ball adds magic to every musical occasion, whether romantic dance night or family fun. No matter what your skill level, this box of magic is sure to delight vocalists from age 5 to 125.

Want to take your show on the road? The long-lasting batteries and built-in carry-strap mean easy transport to your next barbeque or block party. Need to send out some announcements during your big bash? No problem! This portable, multi-functional machine doubles as a punchy PA system for volume-adjustable, crystal-clear announcements.

When all is said and sung, just sling the microphones into their built-in carry holster and turn off the machine. In no time at all, you'll be ready for an encore.

Sing on!



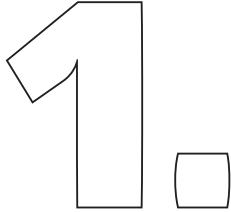

It's the Whole Package!

Parts & Features

What's included...

- 1x Masingo Karaoke Machine
- 2x UHF wireless microphone
- 1x 3.5 mm AUX cable
- 1x 3.5 mm AUX - RCA cable
- 1x Type C Charging cable
- 1x Performer's manual

What you'll need...

 
- 4x AA batteries (2 for each wireless microphone)
- 1x USB plug or USB compatible device for charging

What you'll want... (Optional - Not included)

- 1x MicroSD card (for MicroSD playback option)
- 1x TV (for RCA playback option)
- 1x Bluetooth compatible smart device (for Bluetooth playback option and/or displaying lyrics)
- The music inside your soul
- Family and/or friends




Function Board Front

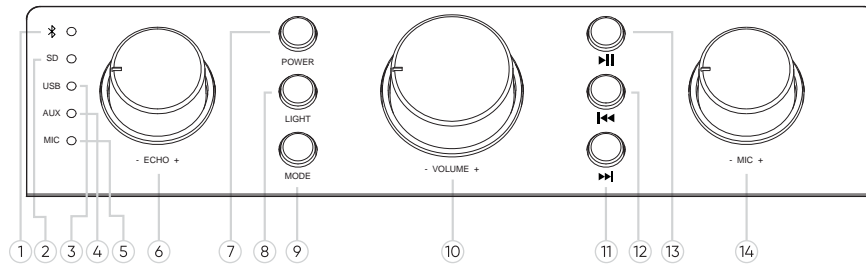

- | | |
|------------------------------------|-----------------------------------|
| 1. Bluetooth Mode Indicator | 8. LED/Disco Ball Settings |
| 2. MicroSD Mode Indicator | 9. Switch Playback Mode |
| 3. USB Mode Indicator | 10. Speaker Volume +/- |
| 4. AUX Mode Indicator | 11. Play/Pause |
| 5. Mic Signal Indicator | 12. Previous |
| 6. Echo +/- | 13. Next |
| 7. Power On/Off | 14. Microphone Volume +/- |



 Function Board Back

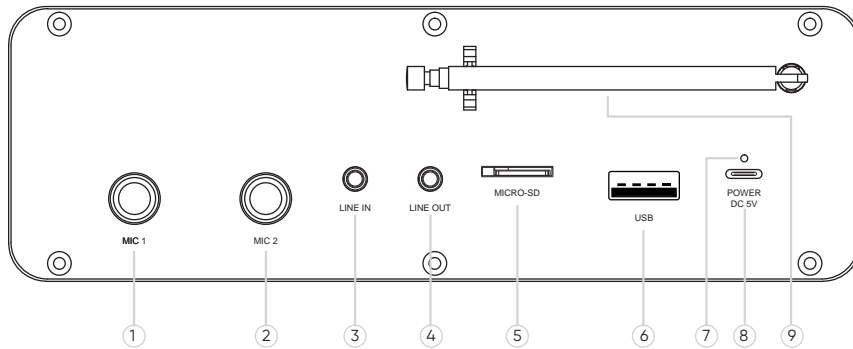

1. 6.5 mm Mic One Input
2. 6.5 mm Mic Two Input
3. 3.5 mm AUX Line in
4. 3.5 mm AUX Line out
5. MicroSD Slot

6. USB Slot
7. Power Input
8. Charging Indicator Light
9. FM Antenna



2

Take note: Review before using

1. Keep this manual for any future reference.
2. Adhere to all warnings.
3. Keep ventilation openings clear; do not block any of this machine's vents/openings.
4. Install and set up the machine according to the manufacturer's instructions provided in this manual.
5. Do not install near any heat sources (i.e. radiators, heat registers, stoves, amplifiers, or any other objects that produce heat).
6. Use the polarized plug or grounding type plug carefully. These plugs are made for safety purposes. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade and the third prong are provided for your safety. Please consult an electrician if the provided plug does not fit into your outlet.
7. Protect the machine's power cord. Prevent the power cord from being walked on or pinched - particularly at the plugs, convenience receptacles, and the point from which they come out of the machine.
8. Unplug the machine during lightning storms or when unused for long periods of time.
9. Refer all technical services to qualified personnel. Servicing is required when the machine has been damaged in any way, such as damage to the power-supply cord or plug, contact with liquid, exposure to moisture or rain, failing to operate normally, if the machine has been dropped, etc.
10. Do not force the SD card into its slot. It can only be inserted in one direction. If the card does not insert easily, remove it and try reinserting in the opposite direction.
11. To maintain peak performance and battery longevity, fully charge the karaoke machine at least once every three months and before storing it away for a long period of time.



3

Simple as a Song Quick start guide

- #1** Charge the machine before use; insert two AA batteries into each microphone.
- #2** Power on the machine and microphones.
- #3** Select your preferred playback mode.
- #4** Display lyrics on your smart device or the big screen.
- #5** Grab a friend and sing away!

Note: See the “Usage Guide” section of this manual for more information on how to operate your machine.



Do not expose the battery to excessive heat such as sunshine, fire, or other heat sources to reduce risk of fire or explosion.



Do not expose this product to water, moisture, heat, or steam. Do not place objects filled with liquid on this product.



Check the machine for damage before each use.



Clean and store the machine after each use.

 


Do not use the machine with attachments not approved by the manufacturer.



When using the machine outdoors, do not use it in wet or very hot weather. Do not run charging cable through puddles or other moisture.



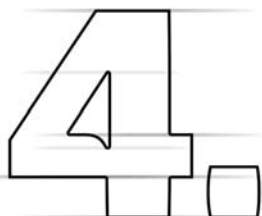

Never miss a note Detailed usage guide

Machine

How to charge the machine

Plug the included USB charging cable into the machine's power input. Connect the included USB charging cord to a compatible USB plug or a compatible USB port. Be sure to charge the machine fully before each use. The indicator light will turn red to indicate the machine is charging and off to indicate that the machine is fully charged.

Note: The machine can still be used while charging. However, in order to improve charging time, it is recommended that users turn off the machine while charging.

How to turn the machine on/off

Hold the power button to turn the machine on or off.

How to turn Disco Ball/LED lights on/off

Hold the **Light** button when the machine is powered on in order to turn on the lights and disco ball. Press once quickly to turn off the lights on the front, and press again quickly to turn off the disco ball. Hold the button again to turn off both the lights and the disco ball.

Note: Disco ball rotates slowly on its own but may be GENTLY spun by hand as well. Do not force the disco ball to rotate in the opposite direction.

Microphones

How to set up the microphones

Unscrew the bottom half of the microphone (note: not at the colored cap, but at the seam halfway up the handle). Install two AA batteries. Replace the bottom of the microphone and rotate it gently until secure.

How to turn the microphones on

Turn the microphones on by sliding the power buttons upward into the "ON" position. They will automatically pair with the machine. Once paired, the mic indicator light on the machine will be lit.

How to customize your microphone vocal mix

To adjust the volume of your singing over the music, turn the **Mic+** knob to the left or the right until desired volume balance is achieved. Turn the **-Echo+** knob to the right or left to experiment with reverb effects.

How to Store the Microphones

To store the microphones for easy transport, slide each mic into a leather loop at the sides, making sure the end you sing into is facing up. You may also unsnap the buttons, wrap a leather loop around each mic, then secure them by snapping the buttons again.

To connect your own wired microphones

The Ostinato M7 is also compatible with wired microphones. Simply plug one or two 6.5mm microphones into the corresponding ports on the back of the machine. You may connect both wired and wireless microphones simultaneously.



To connect additional wireless microphones

In order to connect additional wireless microphones, purchase a compatible wireless microphone receiver set. Connect it with the Ostinato M7 per the instructions provided by the wireless microphone receiver manufacturer.

Music


How to set up playback

Your machine has six different playback options: Bluetooth, MicroSD, AUX, USB, FM, PA. Each has its own set up method. See the **Content/Parts** section above for hook up locations and the relevant subsection below for more information on how to set up your preferred playback mode.

How to obtain and play karaoke music on your machine

Your machine will not automatically transform regular music tracks into karaoke tracks. To use your machine for karaoke, purchase and download your favorite karaoke track online. (Note: there is also a great deal of free karaoke music available on many popular music sites). Next, transfer the track to your preferred playback method: Bluetooth-compatible smart device, AUX-compatible device, USB drive, or MicroSD card. Then follow the corresponding instructions below to set up your playback method as normal.

How to connect to Bluetooth: (ie. playing music from your smart device)

The machine should start in Bluetooth mode. If not, press the **Mode** button (11) until the indicator light appears next to . To use this feature, simply search for the machine name ("Masingo") under your playback device's Bluetooth connection settings and enter the pin code ("0000") to connect.

Caution: Do not turn your smart device volume to maximum or damage to speakers may occur. Place your device volume at midrange and then adjust the volume using the volume control on the machine. You may however use either the controls on your device or the controls on the machine to play, pause, or switch between tracks.



How to use MicroSD mode (i.e playing music from an SD card)

When the machine is on, plug your MicroSD card into the designated slot on the back of the machine. Press the **Mode** button until the indicator light appears next to **MicroSD**. Press the **▶||** button on the front to begin playback or pause music. Press the **▶▶** button twice to move to the previous track or once to replay the current track. Press the **◀◀** button to skip to the next track

How to start USB mode (i.e. playing music from a USB drive).

When the machine is on, plug a USB stick into the designated slot on the back of the machine. Press the **Mode** button until the indicator light appears next to **USB**. Press the **▶||** button on the front to begin playback or pause music. Press the **▶▶** button twice to move to the previous track or once to replay the current track. Press the **◀◀** button to skip to the next track.

Note: You can also use this slot to charge your phone using a compatible USB cable.

How to connect to FM mode

When the machine is on, press the **Mode** button and cycle through all available modes until the mode indicator light turns off. (Note: This is not to be confused with the Mic Signal Indicator light). Your machine is now in FM mode. Extended the antenna at the back of the machine. Use the **▶||** button to automatically scan for stations or the **◀◀** and **▶▶** buttons to manually switch between stations.

How to use PA mode

When there is no music playing, this machine will automatically start in PA Mode. Simply use the microphone by ensuring that it is properly connected as instructed above. Adjust the microphone's volume on the machine's main panel.



How to use AUX mode

Playing music *from* an AUX-compatible device (TV, Phone, Tablet, or MP3 player):

When the machine is on, plug the AUX or AUX-RCA cable into the **line-in** port on the back of the machine to activate AUX mode. Then, plug the other end of the adapter into the designated output on your device. Press the **Mode** button until the indicator light appears next to **AUX**. Play your music just as you normally would.

Caution: Do not turn your external device volume to maximum or damage to speakers may occur. Place your device volume at midrange and then adjust the volume using the volume control on the M7 machine. You may, however, use either the controls on your device or you may use the controls on the machine to play, pause, or switch between tracks.

Playing music *to* an AUX-compatible device (i.e playing to an external speaker):

To play your music or voice from an external speaker rather than the Ostinato M7, plug the AUX cable into the **line-out** port on the back of the machine. Then, plug the other end of the adapter into the designated input on your chosen speaker. Set up one of the other modes as instructed above. Your sound will now play from the external speaker you have connected.

Caution: Do not connect **line out** port on the Ostinato M7 with a smart device

How to use multiple playback modes

To use playback modes interchangeably, simply activate each mode according to the instructions above, then click **Mode** to switch between the inputs.

Maintenance

How to Clean

Turn the machine and microphones off. Unplug the machine from any connections to AUX, RCA, or power.

Gently wipe the outside of the machine using a clean, dry cloth. Keep all vents, buttons, and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

How to Store

Charge the machine and microphones so that they are ready for next use. Dock the wireless microphones in their holsters. Make sure that the machine is clean and dry.

Bind the power cord, AUX cable, and RCA cable individually and gently with electrician-approved fasteners. (Note: Do not wrap or fold against the natural bend of the cords or cable). Do not wrap the cord around the machine. Store the machine in a cool, dry place away from damaging elements.

For best results, clean and store the machine after each use.



5. *When things go flat* Troubleshooting

Problem	Solution
Battery Icon on Microphone is red. OR Microphone will not turn on.	The Microphone battery is low or depleted. Replace the AA batteries in the microphone.
Machine will not turn on	The battery is depleted. Be sure to charge the machine after each use.
USB or MicroSD mode will not work	Turn off the selected mode, unplug either the USB or MicroSD, turn it back on, and plug the USB or MicroSD back in.
AUX mode will not work	Ensure that the machine is set on AUX mode. Ensure that input and output ports are paired correctly, and that the device volume is on. AND/OR Turn off the selected mode, and unplug the AUX cable. Restart your AUX device. Turn AUX mode back on, and plug in the AUX cable once more.

<p>Machine is not playing microphone vocals</p>	<p>Ensure that the microphone volume control is raised to the proper level.</p> <p>Ensure that each microphone is on.</p>
<p>No sound is playing from the speaker</p>	<p>Ensure that the volume on the machine, remote, and your device (if applicable) are all turned up.</p> <p>Also check to see whether you are on Mute mode by pressing Mute on the remote control to see if the audio resumes.</p>
<p>Button or knob on the machine/remote control is not working properly</p>	<p>Power off the machine and turn it back on.</p>

If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair. Do not attempt to modify or repair the machine yourself. You can also contact our customer service department (see back cover).

Don't end things on a bad note.

We're here for you.

If you encounter any issues with your machine—or if you have any questions or comments—please feel free to contact us. Have your warranty information on hand for faster service.

**90-Day
Limited
Warranty**



844-262-7464



support@masingo.net



www.masingo.net

Love your new machine?
We want to hear about it!



 SCAN ME

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.