

# MASINGO

It's a Karaoke **Party** all night long

Karaoke Machine *Presto G2*

# USER MANUAL

# MASiNGO

## Performer's Manual



Karaoke Machine - Presto G2

# ***Congratulations!***

## You've just taken your party game up a notch

---

 
Whether you're celebrating with a few friends or with the whole gang—in the comfort of your home or in a big event space—your parties will be peppier with this beautifully-designed, deceptively-compact **Presto G2 - Karaoke Machine** from Masingo.

Choose from Bluetooth, AUX, USB, or MicroSD and get the music going—or just connect to your TV. Sing out some show tunes with grandma, blast out some big hits with your pals, or serenade your sweetheart. Use the colorful LED lights to set the stage as you belt out your best into one of our top-quality karaoke microphones. You can even adjust your volume and vocal effects to enhance your performance. No matter what your skill level, this box of magic is sure to delight vocalists of all ages—from 5 to 125.

Need to send out some announcements during your big bash? No problem! This portable, multi-functional machine doubles as a punchy PA system. Simply turn off the music and speak into the mic for volume-adjustable, crystal-clear announcements. Plus, the contoured speaker grill directs the sound up and out so you can be sure your voice is heard.

When all is said and sung, just turn off the machine and plug the microphones into the convenient, built-in charging docks. In no time at all, you'll be ready for an encore.

**Sing on!**

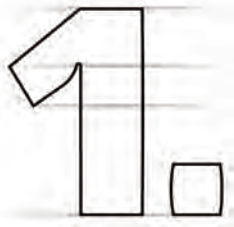


# ***Take note:***



## **Parts & Features**

---

### **What's included...**

   - 1 x Masingo Karaoke Machine
  - 2 x Rechargeable microphones
  - 1 x 3.5 mm AUX cable
  - 1 x 3.5 mm AUX - RCA cable
  - 1 x Micro-USB charging cable
  - 1 x USB charger plug
  - 1 x Performer's manual
- 

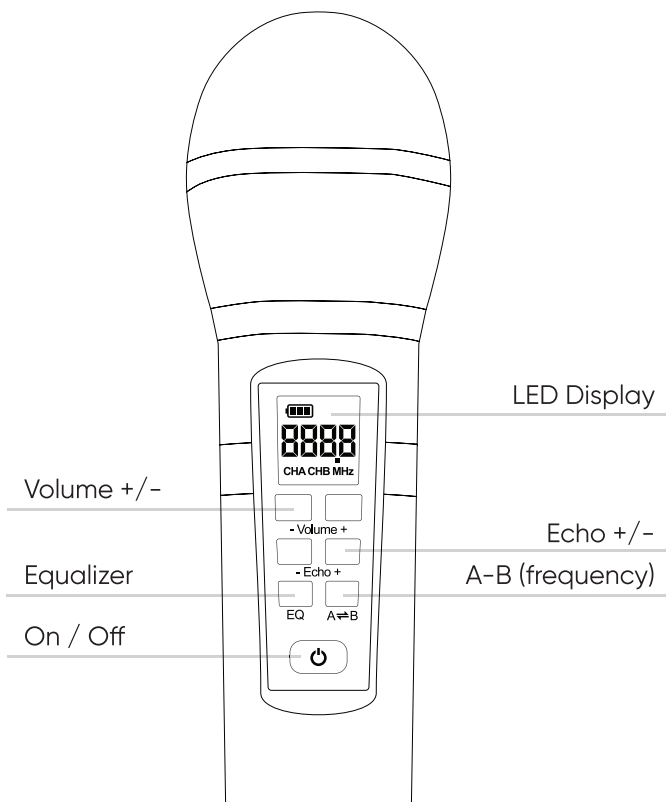

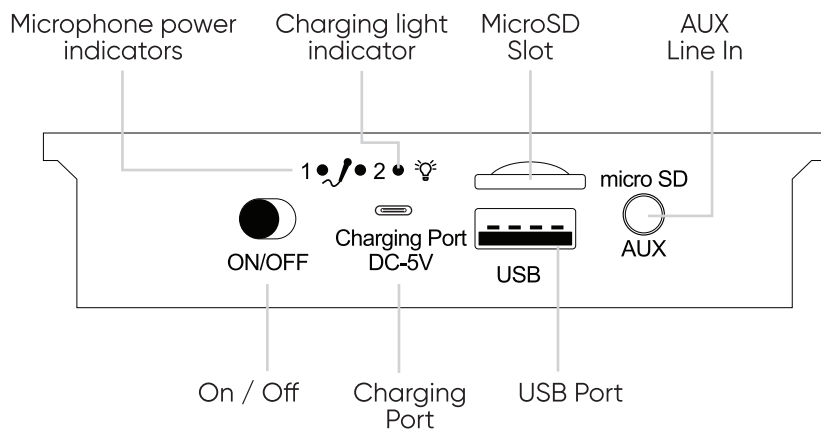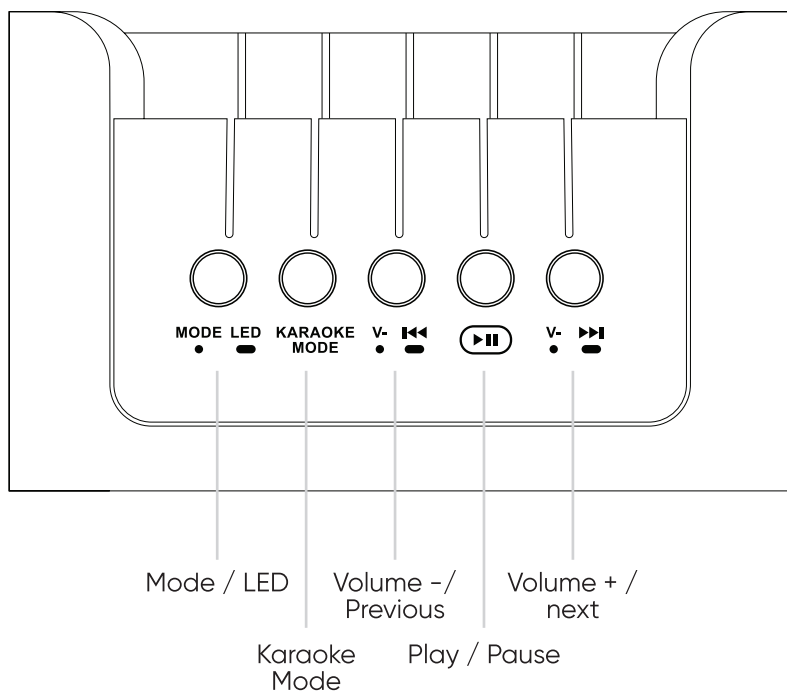

# 2

## ***Ready, set, sing!*** Quick start guide

---

**#1** Charge the machine and microphones before each use.

**#2** Turn the machine and microphones on.

**#3** Choose your preferred playback setting.

**#4** Display your lyrics.

**#5** Rock on!

**Note:** See the "[Usage Guide](#)" section of this manual for more information on how to operate your machine.



Do not turn on the microphones while they are charging.



Use caution when charging microphones in docks while machine is unplugged. Battery will deplete quickly.



Clean and store the machine after each use.



 
Check the machine for damage before each use.



Do not use the machine with attachments not approved by the manufacturer.



Keep the machine away from heat, steam & water.

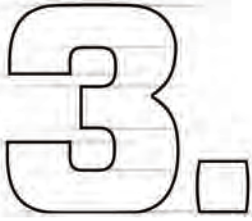

## ***Never miss a note*** **Detailed usage guide**

---

### **Machine**

#### **How to charge the machine**

Connect the USB charger plug or a compatible type C cord into machine and to a polarized outlet. Be sure to charge fully before each use. The indicator light on the back of the machine will turn on to indicate charging and power.

---

#### **How to turn the machine on**

Turn the **Power** switch on the back of the machine to the 'on' position.

---

#### **How to turn LED lights on/off**

Press and hold the Mode/LED button.

## Microphones

### How to charge the microphones

Place the microphones in the charging docks on the machine or plug them into a compatible charger using the micro-USB charging cable. Be sure to charge fully before each use. While charging, the top bar of the battery icon on the display will flash, then stop flashing when the battery is full.

### How to turn the microphones on

Remove the microphones from the charging docks and turn them on using the power button on the handle. They will automatically connect to the machine.

**Note:** Microphones will automatically turn off after 15 minutes of no use.

### How to set up the microphone

The A-B button controls both the microphone's channel and the microphone's frequency band.

**IMPORTANT:** When using both microphones simultaneously, each microphone must be set to a different frequency band (that is, one must be set to CHA while the other one is set to CHB). If both microphones are set to the same frequency band, the microphone audio may cut in and out.

**Changing the Frequency Band:** The frequency band is represented by the letters CHA or CHB in the bottom left corner of the LED display. To change the microphone's frequency band, hold the A-B button for one second until the desired band is reached. One microphone **MUST** be set to CHA while the other **MUST** be set to CHB.

**Changing the Microphone Channel:** Channel is represented on the microphone LED screen as a number from CH1 to CH8. To cycle through possible channels, click the A-B button until the desired channel is reached. Unlike frequency bands, having both mics on the same numbered channel will not negatively impact performance.



---

### How to customize your microphone vocal mix

To adjust the volume of your singing over the music, click the **Volume +/-** buttons up or down until it reaches your preferred volume.

To modify the reverb effect on your singing, click the **Echo +/-** buttons up or down as desired. Use the **EQ** button to choose between 5 different equalizer selections.

## Music

### How to set up playback

Your machine has 5 different playback options: Bluetooth, SD, AUX, USB, PA. Each has its own hook up location (diagram in the "Contents/Parts" Section) and set up method (see the "Music" subsection below). See the aforementioned sections for more information on how to set up your preferred playback mode.

If desired, you can also place your phone or tablet in the mount on the front of the machine to display your song lyrics.

---

### How to connect to Bluetooth

Playing music from your device

This machine will be ready to connect via Bluetooth as soon as you turn it on. To use this feature, simply search for the machine name ("MASINGO") under your playback device's Bluetooth connection settings and click to connect.

---

### How to use SD mode

Playing music from an SD card

Plug your MicroSD card into the designated slot on the back of the machine. Playback will begin immediately. Use operation instructions in the "Music" subsection below to adjust settings.

---

---

## How to start AUX mode

Playing music from an AUX-compatible device

Plug the AUX or AUX-RCA cable into the designated slot on the back of the machine to activate AUX mode. Then, plug the other end of the adapter into the designated inputs on your device and play your music just as you normally would.

---

## How to start USB mode

Playing music from a USB drive

Plug a USB stick into the designated slot on the back of the machine. Your music will begin playing automatically. You can also use this slot to charge your phone using a compatible USB cable. Use operation instructions in the "Music" subsection below to adjust settings.

---

## How to use PA mode

When there is no music playing, this machine will automatically start PA Mode. Simply use the microphones as directed in the above subsection.

---

## How to customize your music

Karaoke mode allows you to instantaneously convert a song into a karaoke version by muting the vocals. In order to do so,

1. Connect your device via Bluetooth as instructed in the "How to connect to Bluetooth" section.
2. Press the "Karaoke Mode" button on the machine's function board until the song's vocals are muted. To restore vocals, simply press the "Karaoke Mode" button again.

To adjust the music volume, click the **Volume -** /  and **Volume +** /  buttons as needed.

To skip back or forward in your song list, press and hold the **Volume -** /  and **Volume +** /  buttons as needed.

---

---

### How to connect to an external media source

Playing music from a MP3 Player, Phone, or TV

Plug the AUX or AUX-RCA cable into the designated slot on the back of the machine. Then, plug in your preferred compatible device into the other end of the adapter and use the machine as indicated.

---

### How to use multiple playback modes

To use playback modes interchangeably, simply activate each mode according to the instructions above, then click **Mode button** to switch between the inputs.

## Maintenance

### How to clean

Turn the machine and microphones off and unplug from the wall and from the machine speaker.

Gently wipe the outside of the machine using a clean, dry cloth. Keep all vents, buttons, and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

---

### How to store

Charge the machine and microphones so that they are ready for next use.

Make sure that the machine is clean and dry. Bind the unplugged cord gently with an electrician-approved fastener. Do not wrap the cord around the machine.

Store the machine in a cool, dry place away from damaging elements.

For best results, clean and store the machine after each use.



# *When things go flat*

## Troubleshooting

Problem	Solution
Battery icon on the microphone screen is blinking  Microphone will not turn on	The microphone battery is low or depleted.  Charge before use.
Machine will not turn on	The battery is depleted. Be sure to charge the machine after each use and, when charging the microphones in the charging docks, keep the machine plugged in.
Machine is not playing microphone vocals	Ensure that each microphone is on a separate frequency band. This is represented by CHA or CHB in the bottom left corner of the microphone LED screen. (To switch channels, hold down the A-B button for one second). Microphones will not work properly unless one mic is set to CHA while the other mic is set to CHB.  After 15 minutes of inactivity, the microphones will turn off.

If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair. Do not attempt to modify or repair the machine yourself. You can also contact our customer service department (see back cover).

**We're here for you.**

If you encounter any issues with your machine or have any questions or comments, please feel free to contact us. Have your warranty information on hand for faster service.

90-DAY  
LIMITED  
WARRANTY



844-262-7464



[support@masingo.net](mailto:support@masingo.net)



[www.masingo.net](http://www.masingo.net)

***Love your new machine?***  
**We want to hear about it!**



## **FCC Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.