 


MINISO

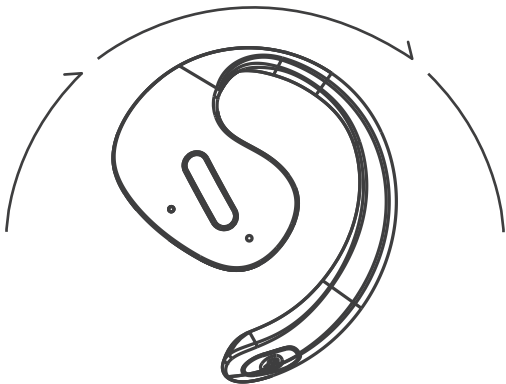


MINISO Wireless Earbud X15PRO Product Manual

CATALOGUE

01 How to wear headphones correctly	5
02 Product Introduction	9
03 Touch Operation	12
04 Item list	21
05 Name and content of hazardous substances in products	23
06 Warranty Statement	24

 
Welcome to MINISO Open Wearable Stereo

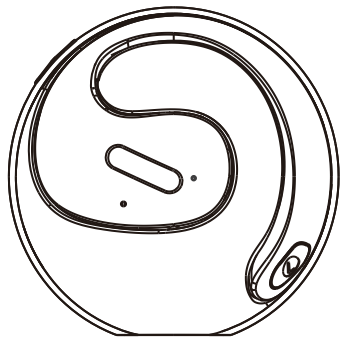


Take out and pair it


When using for the first time, take out the left and right earphones at the same time. When the white light and ice blue light of the earphones flash alternately, the earphones will enter the automatic pairing mode.

  How to wear headphones correctly

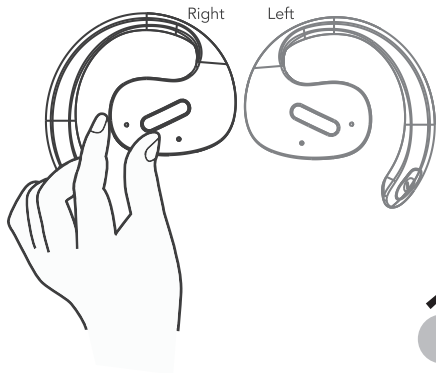


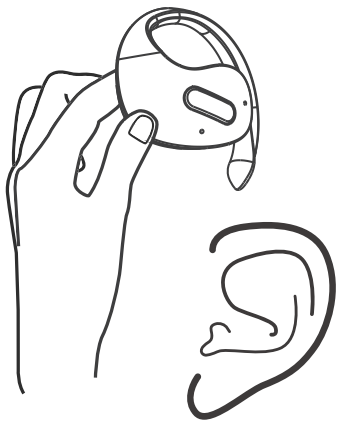

2

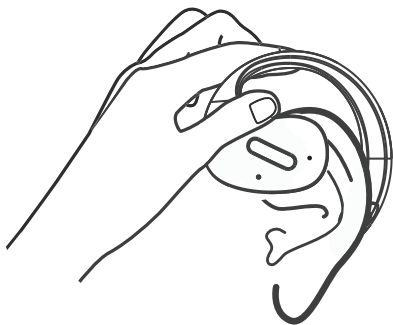 


3

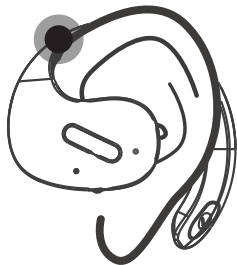 

4

Product Description

 
Multi function key
touch position

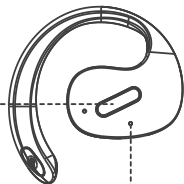

Bluetooth LED
Display light



 Charging Contacts

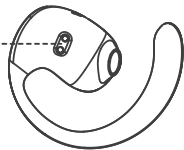

Specification of Product

Model of Product: X15PRO

Version: V5.4

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 14.2\text{mm}$

Impedance: 16Ω

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: $-42\text{dB}\pm 3\text{dB}$

Earphone Input: $5\text{V}\approx 40\text{mA}$

Charging Case Input: $5\text{V}\approx 300\text{mA}$

Charging Case Output: $5\text{V}\approx 80\text{mA}$

 
 
Earphone Battery Capacity: 40mAh

Charging Case Battery Capacity: 300mAh

Duration: Approx. 4.5 H (Earphone)

Earphone Charging Time: Approx. 1 H


Charging Time of the Charging Case: Approx. 1 H

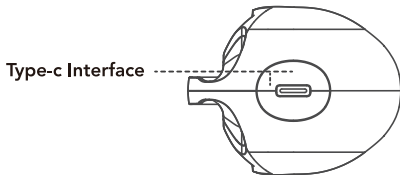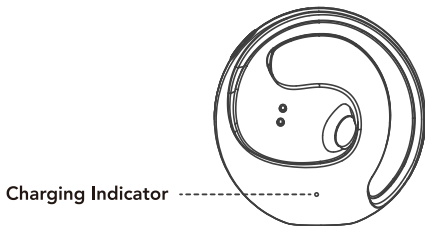

Connect with Bluetooth device



 Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-X15PRO". Click the pairing name to pair.

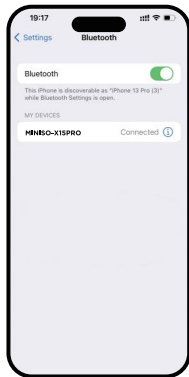

Indicator Light Description



· When the headset is turned on: the white light and the ice blue light flash alternately

· When the headset is turned off: the white light flashes 3 times quickly and then goes out

 
· Pairing status: white light and ice blue light flash alternately

· Connection successful: no light



· Headphone Charging: The Charging case indicator light is always white, and the headset white light is always on. After the headset is fully charged, the white light turns to ice blue and then goes out, and the Charging case indicator light goes out at the same time.

· Charging of the Charging case: The ice blue light of the Charging case indicator flashes. After the Charging case is fully charged, the indicator light of the Charging case is always on.

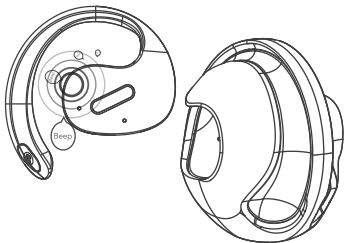

Power On

Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du".

Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

 
Power Off

Auto power off: Put the Earphone in the charging case, the Earphone will be powered off, with the prompt sound of "Du".

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; If it is not connected to a Bluetooth device after 3 minutes, it will automatically power off after 3 minutes, with the prompt sound of "Du".

Once Press

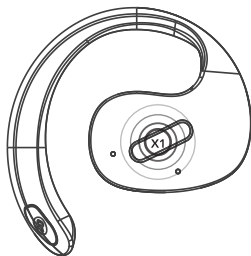

Music mode



 
Play/Pause

Phone mode



Call Answer/End

Double Press

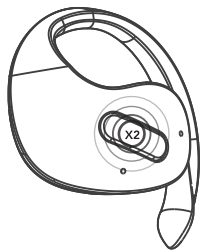

Music mode

 


Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press

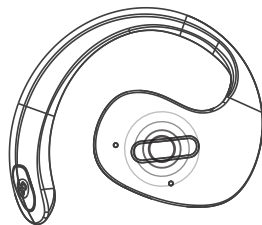

Wake up voice assistant



When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press



Music mode



Triple press on the left ear:
Previous song

 


Triple press on the right ear:
next song

*Note: When using one ear, when you click the left (or right) earphone triple-clicking, it will be the next song.

Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

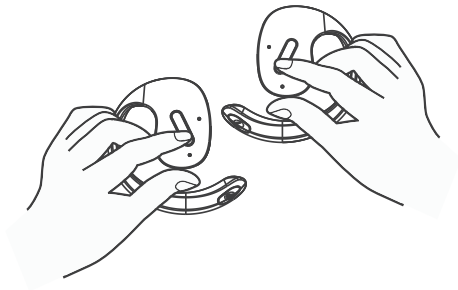

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

 Switch between game mode and music mode (Mono/Binaural operation)

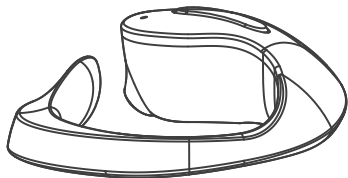

Game mode



Press and hold the multi-function button on the right ear for 2 seconds

Music mode



Press and hold again for 2 seconds


Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode


Item list



 
Headphones *1

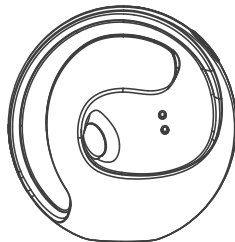

Charging case *1

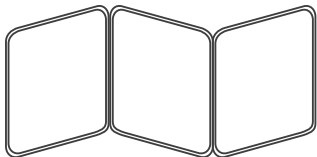 

Instruction *1

 

Charging cable *1



Lanyard *1

Name and content of hazardous substances in products

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.

○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.

✕: Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds The limit requirements specified in GB/T 26572.

The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.

Printed circuit board components: Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.



Electronic and electrical products sold in the People's Republic of China must mark this LOGO, the number in the logo represents the product under normal use Environmental protection use period.



Warranty statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

FCC ID: 2A83K-X15PRO

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company name: UUX GROUP INC
Address: 36 South 18th Avenue, Suite A Brighton,
CO USA 80601
Contact Person: Jack Fu
Email: uuxforever@outlook.com
ContactPhone: (213) 375-3998

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: 7@hifi-earphone.com

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

Service supervision hotline: 400-812-0102

Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the “Warranty Period”), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant’s instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

② Safety matters:

 
Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause The battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

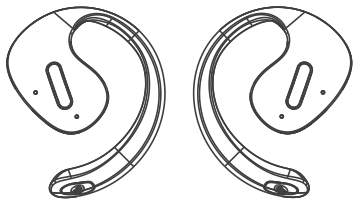

Copyright©2024 MINISO Group affiliated companies and its licensors. All rights reserved

Creating sound
to live with