
thinkplus Live Pods X16 直无线蓝牙耳机

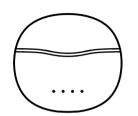

使用说明书 使用前请阅读使用说明书

产品规格

有效距离:≥10m 喇叭直径: 614,2mm

随即功率, 3mW*2

阻抗: 32Ω 麦克风灵敏度: -42dB ± 3dB

信區比。≥90DR 失直度, < 2% 频率响应, 20Hz-20KHz 揭放时长,约3.5小时

耳机由池容量。30mAh 充电仓电池容量: 300mAh

(所有技术信息以实际性能为准)

物品清单

蓝牙耳机, x 2 充电线 × 1

充由倉 x 1 说明书 × 1

触摸位

产品抑核

产品注意事项 (1) 除说明书有特殊标示的操作方式以外、请勿尝试报知或更换产品 由的红荷要件

(2)本产品含内置可充电电池、禁止撞击、挤压、刺破、短路电池、若出 现温度过高、变形、 鼓胀、 混液等异常现象 请停止使用 请勿置由池干 明火、阳光爆晒、加热器、火炉等高温以及高压环境中,电池浸水后禁 止使用。耳机使用后 勿將耳机放在潮湿。 充满发尘。 沖烟。 蒸气。 阳 光百射等高温高压等环境中 以免洗成百机及由池损坏。由池可在协由 次数有限 最终会表化 由池使用豆堂时可更换新由池 伯切勿白行更换由 池 如果由池市换不当会有惯性危险 贝能通过售后服务商市换同签类型 或者等效类型的由液使用。

(3)产品使用报废后 勿將产品扔置火中 废旧处理应严格按照垃圾分类 进行处理。请合理正确的使用此产品,以免造成一定的伤害和环境破坏。 (4) 在耳机使用过程中,由于远距离、中间有障碍物或者有其他无线 电信号、蓝牙信号、WIFI信号等一系列的干扰的情况下,耳机在使用时 听音乐、看视频、玩游戏等情况下。会出现偶尔的卡顿、语音不同步或

者断连的情况,如出现此情况请重新连接耳机或者远离干扰物。 (5) 充电时充电器请使用输出电压为直流DC 5V/1A的充电设备、必 须选择正规生产厂家获得CCC安全认证过的充电设备,请勿使用快充充 由器、以争选成由涉免裁大大、而产生由涉损坏、连续充由时间违勿招

讨规定的充由时间, 充由时请勿使用, 以免造成损坏。

注意、请在使用蓝牙耳机前首先阅读此信息。

用户如果未经许可而对此蓝牙耳机进行改动或改装,将丧失继续享 有该设备所含服务的权利。

安全与有效使用指南

电子设备: 为避免电磁干扰或配置不兼容的影响, 请在标有明确指示的场 所中按昭规定关闭您的蓝牙设备。

R 航· 登机后 请根据罪备人员的提示关闭您的蓝牙耳机。飞行中严 禁使用蓝牙耳机 以免对飞机通信系统产生干扰。

の中全事で

放 置: 建议您在不使用蓝牙耳机时,将其放置在不受挤压的地方, 护 压有可能会导致产品的损坏或人身的伤害。

儿 童: 不要让儿童玩弄蓝牙耳机,其中一些小部件可拆卸,有可能被吞 明而诰成危险.

产品操作说明

1.开机

方式--- 将左右耳机从充电仓取出。耳机开机。

2.关机

方式一: 将开机状态下的左右耳机直接放入充电仓, 耳机关机。

3.TWS配对

a.耳机使用过程中、把左(右)耳放进充电盒充电、会自动切换到右 (左)耳播放(并继续保持切换前的音乐状态)。

b.耳机使用过程中, 把左(右)放进充电盒充电, 不会影响右(左)耳 的正常工作

c.TWS连接后任意单耳使用过程中,取出另一耳机可自动TWS连接, 左右耳继续当前工作状态。

5.与蓝牙设备讲行配对连接

打开准备配对的蓝牙设备的蓝牙设置洗项,进入洗项,找到耳机的蓝牙 配对名"联想 thinkplus X16",点击配对名进行配对。

6.播放音乐

方式二: 互机关机的状态下(在充电仓外), 长触左右互机多功能触提 键约3秒, 耳机开机。

方式 ... 外干开机状态下的左右互机多功能键触描键约5秒、互机关机。 注: 当耳机开机后,5分钟未与相应蓝牙设备进行配对连接,便会自动 关机; 超出信号有效连接距离, 未与相应蓝牙设备连接, 5分钟后, 耳 机自动关机。

a.左右互机无配对记录的情况下,左右互机开机后,自动进行配对。 b.左右耳机有配对记录的情况下, 开机自动回连。

4 左右耳白动切换

d.单独开启左耳或右耳,都可同连手机。

8.电话免提(单耳机操作)

9 激活语音助手

10.指示灯显示

下一曲:连续短触右耳耳机多功能触摸键三次 会暴加, 连续短触去百百和名功能轴道键面次 音量减,连续短触左耳耳机多功能触提键两次

暂停/福放、短触任意互机多功能触提键--次

来电时,接听,短钟耳机多功能钟提键--次

来由时, 拒接, 短触耳机多功能触提键2秒钟

结束诵话挂断、短触耳机多功能触描键--次

亮; 当充满电后,耳机指示灯熄灭。

7 由话免提(双百机配对操作)

来由时、接听。 铅钟仟音百机多功能钟描键—次

· 表示该有害物质至少在该部件的某一均质材料中的含量超出 来电时、拒接、短触任意耳机多功能触摸键2秒钟 GB/T 26572 规定的限量要求。 结束通话挂断:在接通电话状态下,短触任意耳机多功能触提键一次

表单标记"X"的部件,皆因全球技术发展水平限制而无法实现有害

表示该有事物所在该部件所有均质材料中的含量均在

产品中有害物质的名称及含量

(Ph) 表(Ha) 類(Cd) 六价铬 多溴联苯 多溴二苯酚

印刷电路板组件*,包括印刷电路板及其零部件、电子元器件等。

根据产品型号不同,您所购买的产品可能不会含有以上所有部件



部件名称

印刷电路组件

外志等小结构任

在中华人民共和国境内销售的电子电气产品必须标识此 伝志、标志内的数字代表在下堂的使用状态下的产品的 环保使用期限。

木使用手册没有任何形式的招保, 立场表达或其他暗示, 木使用手册所 提到的产品、规格及信息仅供参考,内容亦会随时更新于网页,恕不另

保修害田.

(13) 个日计管。

就本文件附随的产品做如下保证:如产品在您购买日起十二(12)个月 "保修期") 内,在正堂使用情况下因质量瑕疵发生损坏,能修理的

◆弗修理, 经厂家确认无法修理的、◆弗雷维, 修理或事推后的产品 在剩余保修期(最短不少于30天)内继续享有保修、购买日以销售发 酉日期为准、加无法确定购买日、则保修期白产品生产日期起按十三

如申请保修,请先致电产品服务热线,并按我们指示的方式执行。 申请保修时,您需要提供准确、完整和清晰填写的有效销售发票。

以上保证不适用于下列情况:

1 認计三句有效期的。

2.涂改保修卡、产品编码与产品本体不符:

3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故

4.因不可抗力(如地震、战争、火灾等)或意外导致的故障或损

5.拉链、塔扣因受力过大而损坏;

6.因承载过重造成的脱线或撕裂; 7.任何因尖锐物体造成的损坏:

8.有烧损或水浸迹象的产品;

9 因接自振改导致的提拔: 10.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。

11 加产品原有标识标签被重改或指导。本保证路生效。 产品及随附物料的齐备和外观完好不属于保证范围,您应在接收产品时 当场检验并对任何不符提出异议。


以上保证是我们就产品做出的全部保证,且仅在中国大陆地区境内适用 本文件的任何内容均不影响根据法律抑定不能推除或限制的消费者权

服务监督执线, 400-812-0102

集后邮箱、frank@szevsan.cn

"Lenovo", "thinkplus" 是联想集团所属企业的商标,提及 的其他公司、产品和服务名称可能是其他公司的商标。 版权所有@2022联想集团所属企业和其许可方保留所有权利。 此产品仅限中国大陆地区销售。

thinkplus Live Pods X16

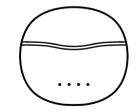

USER MANUAL PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Product enecifications Effective distance: ≥ 10m Horn diameter: \$ 14,2mm Horn nower: 3mW * 2 Impedance: 32 Q Microphone sensitivity: - 42dB ± 3dB SNR: ≥ 90dB Distortion: ≤ 2% Frequency response: 20Hz-20KHz Duration: about 3.5 hours

pperation methods that are specially marked in the manual Any parts

This product contains a built-in rechargeable battery, It is forbidde to hit, squeeze, puncture, or short-circuit the hattery If the current temperature is too high, deformation, swelling, liquid

etc., the battery should not be immersed in water, Stop use.

After using the headset, do not place the headset in damp, dust, oily smoke, steam, In high temperature and high pressure

(4) During the use of the headset, due to long distances, obstacles in the middle, or other wireless In the case of a series of interference such as electrical signal, Bluetooth signal, WIFI signal, etc., when the earphone is in use, listening to music, watching video, playing games, etc., there will be occasional freezes, unsynchronized voice or disconnection, such as In this case, please reconnect the headset or

(5) When charging the charger, please use a charging device with an output voltage of DC 5V/1A. You must choose charging equipment that has been certified by a regular manufacturer with CCC safety certification, and do not use fast charging Electrical appliances, so as not to cause too much battery load, and cause battery damage. The continuous charging time should not exceed the specified charging time, and do not use it during charging to avoid damage.

Electronic equipment: To avoid the influence of electromagnetic

interference or configuration incompatibility, pleaseTurn off your

1 Electromagnetic interference:

Placement: It is recommended that you place the Bluetooth headset

in a place where it will not be squeezed when not using it Pressure may cause product damage or personal injury. small parts are detachable and may be swallowed. Swallow and cause

Product operation instructions

1 Power on:

Mode 2: when the earphone is off (outside the charging bin), touch

the left and right earphone multi-function touch button for about 3 seconds, and the earphone is on.

Method 1: put the left and right earphones in the charging bin directly

Mode 2: long touch the left and right headphone multi-function keys in the power on state, touch the key for about 5 seconds, and the headnhone is turned off

s not paired with the corresponding Bluetooth device for 5 minutes: Beyond the effective connection distance of the signal, it is not connected with the corresponding Bluetooth device. After 5 minutes the headset will automatically turn off.

after they are turned on

a. In the process of using the headset, put the left (right) ear into the charging box to charge, and it will automatically switch to the right left) ear to play (and continue to maintain the music state before

游活语音助手、短触任意耳机多功能触摸键2S松开,可激活智能语音功

充电仓给耳机充电: 充电仓在给耳机充电过程中, 耳机指示灯呈白灯常

充电仓充电: 充电器给充电仓充电过程中, 充电仓白灯阶梯式闪烁, 当

左边第一个白灯长亮时表示充电仓电量约20%-30%, 当左边第二个白

灯长亮时表示充电仓电量约45%-55%, 当左边第三个白灯长亮时表示

充电仓电量约70%-80%, 当左边第四个白灯长亮时表示充电仓电量接

b. In the process of using the earphone, put the left (right) into the charging box for charging, which will not affect the normal operation of the right (left) ear

ears continue to work

d. Turn on the left or right ear separately to connect the mobile

Pairing with Bluetooth devices:

Open the Bluetooth setting option of the Bluetooth device to be paired, enter the option, find the Bluetooth pairing name of the headset "Lenovo thinkplus X16", and click the pairing name to pair,

Last song: touch the left ear headset multi-function touch key three imes in a row

Volume plus: touch the right ear earphone multi-function touch button twice in a row

Volume reduction: touch the left ear headphone multi-function touch button twice in a row

key once When calling, refuse to answer: short touch any headset

multifunction touch key for 2 seconds End the call and hang up: when the call is on, short touch any

产品中有害物质名称及含量

本表格依据SJ/T 11364的规定编制。

GR/T 26572 抑宁的限量要求以下

headset multifunction touch key once

8. Hands free (single headset operation):

When calling, answer: short touch the headset multifunction touch When calling, refuse to answer; short touch the headset

multifunction touch key for 2 ecconde

charged, the headset indicator light turns off.

9. Activate voice assistant: Activate voice assistant: short touch any headset multi-function touch key 2s to release, which can activate the intelligent voice

headset, the headset indicator light is always white When fully

Charging bin charging: During charging of the charging bin by the

charger, the white light of the charging bin flashes in a stepwise

it means that the charging battery is about 20%-30%, when the

it means that the charging battery is about 70%-80%. When the

compartment is close to saturation. When the fourth white light on

the left is on, it means that the charging compartment is close to

fourth white light on the left is on, it means that the charging

End call hang up: short touch the headset multi-function touch key

Indicator light display:

saturation.

following two conditions: (1) This Charging bin to charge the headset: the charging bin is charging the device may not cause harmful accept any interference received, ncluding interference that may cause undesired operation manner, when When the first white light on the left is on for a long time Any Changes or modifications not expressly approved by the party second white light on the left is on for a long time, it means that the esponsible for compliance could void charging battery is about 20%-30%. When the first white light on the the user's authority to operate the left is on for a long time, it means that the charging battery is about 45%-55%, when the third white light on the left is on for a long time RF warning for Portable device:

touch key

This device complies with part 15 of the FCC Rules. Operation is subject to the interference, and (2) this device must The device has been evaluated to meet

general RF exposure requirement. The device can be used in portable exposure condition without restriction.

comply with the limits for a Class B digital device. pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful nterference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.

Note: This equipment has been tested and found to

-Increase the separation between the equipment and -Connect the equipment into an outlet on a circuit different from that to which the receiver is

Consult the dealer or an experienced radio/TV technician for help.

Earphone battery capacity: 30mAh Battery capacity of charging chamber: 300mAh (All technical data is subject to actual performance)

Bluetooth headset x 2 Charging box x 1

Do not try to disassemble or replace the product except for the

leakage and other abnormal phenomena, please stop using it and do not place the battery in the In high-temperature and high-pressure. environments such as open flames, sun exposure, heaters, stoves,

environments such as direct light, so as not to cause damage to the a limited number of times, and it will eventually age, When the battery is used abnormally, you can replace the battery with a new one. However, do not replace the hattery by yourself. If the hattery is

incorrectly replaced, there is a danger of explosion, Battery usage, (3) After the product is scrapped, do not throw the product into the fire, and the waste treatment should be strictly in accordance with the garbage classification To process, Please use this product reasonably and correctly, so as not to cause certain harm and environmental

stay away from the interference

Guidelines for safe and effective use

Note: Please read this information before using the Bluetooth headset. If the user changes or modifies this Bluetooth headset without permission, he will lose the continued enjoyment, Have the right to the services included in the device.

Rhietooth device in accordance with the regulations Civil Aviation: After hoarding, please turn off your Bluetooth headse

according to the instructions of the flight attendant. It is strictly forbidden to use Rhietooth headsets in flight to avoid interference with the aircraft communication system 2 Safety matters:

Children: Don't let children play with Bluetooth headsets, some of the

Method 1: remove the left and right earphones from the charging bir and turn on the earnhones

2. Power off:

and turn off the earnhones

Note: when the headset is turned on, it will automatically turn off if it

3. TWS pairing:

a. When there is no pairing record between the left and right earphones, the left and right earphones will be paired automatically

b. When the left and right earphones have matching records, they

will be automatically connected back when they are turned on. 4. Automatic switch between left and right ears:

c. After TWS connection, when any one ear is in use, take out another headset to automatically connect TWS, and the left and right

phone back.

6. Play music:

Next song: touch the right ear earphone multi-function touch key

Pause / play: short touch any headset multifunction touch key once Hands free telephone (paired operation of two earphones):

When calling, answer; short touch any headset multi-function touch