

封底

封面

MINISO

PRODUCT MANUAL

Creating sound to live with

Wireless Earbud X30

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly 5

02 Product Introduction 9

03 Touch Operation 12

04 Item list 30

05 Warranty Statement 32

Welcome to MINISO Wireless Earphones

How to wear headphones correctly

Take out and pair it

When using it for the first time, take out both the left and right earphones at the same time. When the white and red lights of the earphones flash alternately, the earphones will enter automatic pairing mode.

Product Description

Specification of Product

Model of Product: X30
Version: V5.4
Effective Distance: Approx. 10m
Speaker Diameter: φ16mm
Impedance: 32Ω
Frequency Response: 20Hz-20KHz
Microphone Sensitivity: -42dB±3dB
Earphone Input: 5V=50mA
Charging Case Input: 5V=400mA
Charging Case Output: 5V=100mA
Earphone Battery Capacity: 50mAh
Charging Case Battery Capacity: 400mAh
Duration: Approx. 6H (Earphone)
Earphone Charging Time: Approx. 1.5 H
Charging Time of the Charging Case: Approx. 2 H

Touch Operation

Connect with Bluetooth device

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-X30". Click the pairing name to pair.

Indicator Light Description

- When the headset is turned on, the white light and the ice blue light flash alternately
- When the headset is turned off, the white light flashes 3 times quickly and then goes out
- Pairing status: white light and ice blue light flash alternately
- Connection successful: no light

Headphone charging: The charging case indicator light is always white, and the white indicator light for the headphones is always on. After the earphones are fully charged, they turn off, and the charging case indicator light also goes off.

Charging of the charging case: The charging case indicator light flashes slowly. After the charging case is fully charged, the red indicator light on the charging case remains on.

Once Press

Power On
Automatic power on: The earphones are in the charging case, open the charging case cover, the Earphone will be powered on, with the prompt sound of "Du".
Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

Power Off
Auto power off: Put the Earphone in the charging case, close the charging case cover, the Earphone will be powered off, with the prompt sound of "Du".
Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; if it is not connected to a Bluetooth device after 3 minutes, it will automatically power off after 3 minutes, with the prompt sound of "Du".

Music mode: Play/Pause
Phone mode: Call Answer/End

Double Press

Music mode: Double press the right ear: Volume up; Double press the left ear: Volume decreases

Long Press

Wake up voice assistant
When using both ears, press and hold the left ear multifunction button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant.

Phone mode: Press and hold the left (or right) ear multifunction button for two seconds: call rejection

Triple Press

Music mode: Triple press on the left ear: Previous song; Triple press on the right ear: next song

Clear Bluetooth pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

Wireless pairing mode

- When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
- When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep".

Switch between game mode and music mode (Binaural operation)

Game mode: Press and hold the multifunction button on the right ear for 2 seconds

Music mode: Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.
Note 2: The factory setting defaults to music mode.

Icon Introduction

Bluetooth status

White status: The charging compartment is not connected to the headphones
Green status: The charging compartment is connected to the earphones, but the earphones are not connected to the phone
Blue status: The charging compartment is connected to the headphones, and the headphones are connected to the phone.

Connection prompt

No.3: This interface represents the use of this function, which requires the charging compartment to be connected to the headphones.
No.5: This interface represents the use of this function, which requires headphones to be connected to Bluetooth devices on the phone or computer.

Battery status

Charging status indicator icon for the charging compartment
Green: Charging in progress
Blue: Fully charged
Red: Low battery
White: Normal battery level, not charging

Headphone charging status indicator icon
Green: The earphones are charging in the charging compartment
Blue: fully charged
White: The headphones are not charging

Phone Music interface

Volume adjustment interface

Unlock: Slide to the right to unlock the screen

Spatial sound interface

Equalizer interface

Switch between different EQ sound effects: Standard, Rock, Pop, Classic, Jazz

Alarm clock interface

Switching requires setting the alarm time: 5 minutes, 10 minutes, 30 minutes, 60 minutes

Light Level interface

Click the left button to decrease the screen brightness; Click the button on the right to increase screen brightness

Language Switch interface

Click to switch languages from different countries

Screen lock interface

Click to switch between different lock screen wallpapers, the current screen is the selected lock screen wallpaper

Find My Earphone interface

Click the LR button, and the number * screen will appear

Time setting interface

Automatic update: When the charging compartment, headphones, and phone are connected, the time on the phone will be automatically updated to the charging compartment.
Manual update: Click the button to enter manual settings

Like interface

Photograph interface

Click the button to turn on the flashlight, the entire screen turns white and the brightness of the screen increases

Item list

FCC ID: 2A83K-X30

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Company name: LUX GROUP INC
Address: 35 South 18th Avenue, Suite A Brighton, CO USA 80601
Contact Person: Jack Fu
Email: luxforever@outlook.com
ContactPhone: (213) 375-3998

US REP

Warranty statement

MINISO product warranty card

Product number	SN number	
User info	name	Purchase date
	telephone	
	address	
Sales unit information	Invoice number	
	name	(stamp)
	address	
	telephone	

The above guarantee does not apply to the following situations

- The validity period of the three guarantees has exceeded.
- Altering of the warranty cards and product code do not match the product itself.
- Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage.
- Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident.
- Zipper and tower buckles are damaged due to excessive force.
- Cracks or tear caused by overloading.
- Any damage caused by sharp objects.
- Products with signs of burn damage or water logging.
- Damage caused by unauthorized dismantling and modification.
- Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
- If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on the when receiving it and raise objections to any discrepancies.

Service supervision hotline: 400-812-0102

MINISO Product service policy
If you encounter a problem, please contact our customer service to solve it.
After-sales email: 70hifi-earphone.com

RoHS CE

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or replaces any parts in the product without permission, the user will lose the right to continue to enjoy the services included in the device.

① Electromagnetic interference:
Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.
Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.
② Safety matters:
Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.
Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

① Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
② This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoky, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself! If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type, battery usage.
③ After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
④ During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lag, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
⑤ When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery heat, which may cause the battery to be damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

Copyright©2024 MINISO Group affiliated companies and its licensors. All rights reserved