 


EMERGENCY RADIO

DF-587

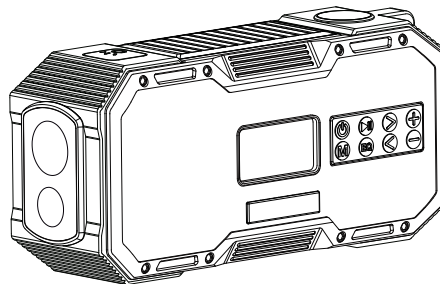

User Manual

Contents

- Safety use rules-----01
- Getting to know your Weather Radio-----03
- How to charge other devices by radio-----06
- How to charge your Weather Radio-----08
- How to use FLASHLIGHT, READING LAMP or SOS ALARM etc.-----08
- How to use bluetooth speakers-----09
- How to use radio (am/fm)-----09
- Specification-----11
- Kind reminder-----11

Thank you very much for this purchase. Please read this manual carefully and use it correctly. Please be sure to read the "Safety Rules" before using the product. After reading it, please keep this manual properly

Safety use rules

In order to prevent hazards or damage to the user and to people or objects in the vicinity, this manual sets out the matters that you are expected to observe. In order to use the product safely, please fully understand the relevant contents.

Caution This symbol indicates that if the content is ignored, it is expected to cause damage to people or damage to objects

- In case of thunder when using outdoors, please fold the antenna and evacuate to a safe place.
- Do not use it in an unstable place or condition.
- Do not use, install or store the antenna in a place near the fire, such as a fireplace.
- Please be sure to use the configured USB charging cable for charging the body. Otherwise, there is a risk that it will not charge properly.
- Do not tie up the charging cable or place objects on it.
- Do not operate or use with wet hands.
- Do not subject the device to strong impacts such as drops or collisions.
- Do not expose your eyes to light. Otherwise, it may cause physical discomfort.
- Do not place it in a place facing the sun or under the sun for a long time.
- Do not disassemble or modify.
- Do not insert external objects into the ports or connectors of the product.
- Do not drop it in water, immerse it in water, or leave it in the rain for a long time.
- Do not wipe the machine body with thinner gasoline or alcohol.
- *Please put a little neutral cleaning solution in the water and wipe off the stain with a hard cloth.
- Do not use if there are any abnormalities such as odor, heat, discoloration, deformation, etc., during use or storage.

Getting to know your Weather Radio

- Only for people over the age of children, please do not put it in a place where young children can reach.
- Please unplug the USB charging cable if it is not used for a long time.
- Please do not use or store the device in a state where it is covered with oil, etc.
- When disposing of it, please follow the waste disposal instructions of each place.

*We will not be responsible for anything caused by the wrong Method of use. Please be aware of this.
*The LED in the product cannot be replaced. Please be aware of this.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
 
 
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

How to charge your Weather Radio

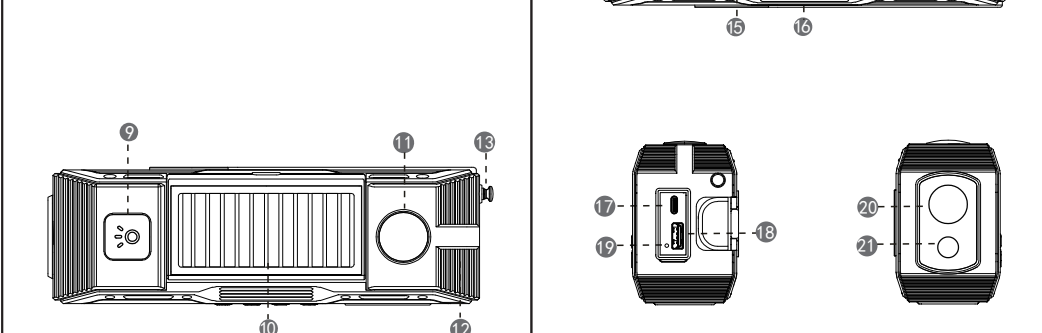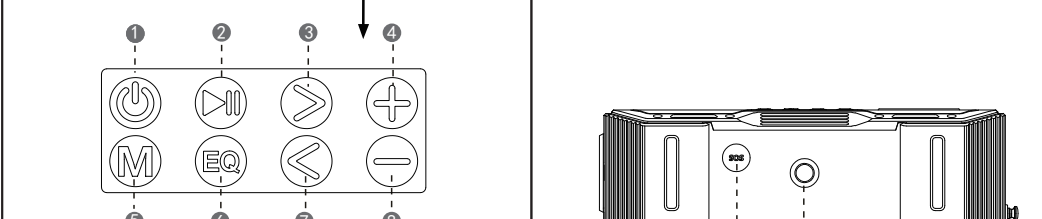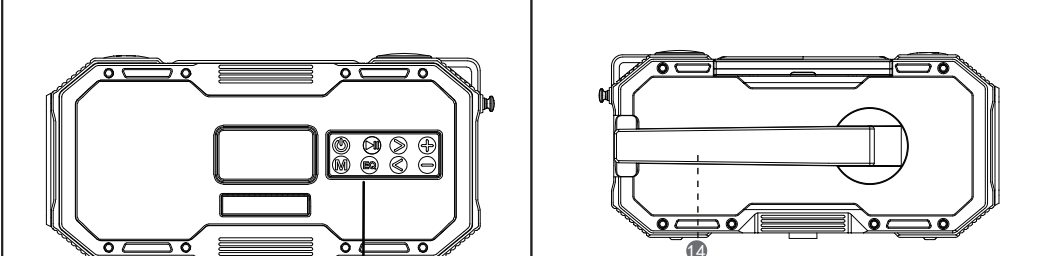

1. Power: ON / OFF (long press) / Mute
2. Pause/Playback
3. In Bluetooth Mode
 - Short Press: Pause/Playback
 - Long Press: Disconnect bluetooth
4. In FM/AM Mode
 - Short Press: Switch between saved stations
 - Long Press: Automatically search for stations
5. Right:
 - In Bluetooth Mode
 - Short Press: next song
 - In FM/AM Mode
 - short press: next frequency
 - long press: search for next station
6. Volume Up
7. M/Key: Switch Mode BT/FM/AM
8. EQ: Audio switching (Bluetooth mode)
 - 0 Standard; 1 Rock; 2 Pop; 3 Classic; 4 Jazz; 5 Country;
9. Left:
 - In Bluetooth Mode
 - Short Press: previous song
 - In FM/AM Mode
 - short press: last frequency
 - long press: search for previous station
10. Volume Down:
11. Flashlight button
12. Solar panel (back: secondary light)
13. Thermometer
14. Lanyard hole
15. Antenna
16. Hand crank
17. SOS button (button side): alarm tone (long press)
18. 1/4" screw hole (button side)
19. USB-C charging socket
20. USB output
21. Reset button
22. Torch
23. Emergency Light



 
USB (Type-C) charging cable



Spring Buckle

How to charge other devices by radio

1. Press and hold the power button to turn off the power. Please do not charge with the power on.
2. Open the port cover
3. Plug in the USB charging cable at the output port Plug in the USB charging cable at the output port and connect to an external machine. * The cable for charging is not provided. Please use the cable that comes with the external machine




- The output of this product is 1.5A. Please do not use it if the device being charged does not support 1.5A.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the recharged device.
- This product is not guaranteed to charge all external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable

 
1. Press and hold the power button to turn off the power. Please do not charge with the power on
2. Open the port cover
3. Plug the included USB (Type-C) charging cable into the input port of the device, and connect the other end of the charging cable to your own USB adapter or a computer's USB port. The charging light on the display will light up red during charging. The charging light will turn green when charging is complete.




4. Unplug the USB charging cable to close the port cover

How to use FLASHLIGHT, READING LAMP or SOS ALARM etc.

 1. Press the button, the high beam will be on, and press again the light will be off



 
1. Open the solar panel
2. Press the light button to adjust the brightness of different lights



1. Press and hold the SOS button at the bottom of the body. The alarm will sound, and the SOS light will flash red and blue.
2. Press the SOS button again, and the alarm will stop.



 1. Install the spring buckle on the hanging buckle.
2. Screw the spring buckle part of the lock tightly.




1. Press the + button, the volume will increase.
2. Press the - button, the volume will decrease.
3. The volume can be adjusted from V-00 to V-27. V-00 is silenced.
- FM/AM Mode: Press the "Power button" to enter the mute mode, and then press again to release the mute mode.



How to charge other devices by radio

 1. Press and hold the power button to turn off the power. Please do not charge with the power on.
2. Open the port cover
3. Plug in the USB charging cable at the output port Plug in the USB charging cable at the output port and connect to an external machine. * The cable for charging is not provided. Please use the cable that comes with the external machine




- The output of this product is 1.5A. Please do not use it if the device being charged does not support 1.5A.
- Damage or accidents to this product or rechargeable products caused by the use of unsupported equipment are not warranted.
- Please check with the manufacturer of the charged device to see if it is supported. The battery life of the recharged device may be shortened due to different specifications of the recharged device.
- This product is not guaranteed to charge all external devices. The charging speed may be very slow or almost impossible due to the specification of the device and cable being charged.
- Due to the specification of the charged device and cable, it may only charge up to 90-99%.
- Do not charge external devices at the same time as charging the unit.

How to charge your Weather Radio

Charging method when using a USB (Type-C) charging cable

 1. Press and hold the power button to turn off the power. Please do not charge with the power on
2. Open the port cover
3. Plug the included USB (Type-C) charging cable into the input port of the device, and connect the other end of the charging cable to your own USB adapter or a computer's USB port. The charging light on the display will light up red during charging. The charging light will turn green when charging is complete.




4. Unplug the USB charging cable to close the port cover

How to use FLASHLIGHT, READING LAMP or SOS ALARM etc.


1. Press the button, the high beam will be on, and press again the light will be off



 1. Open the solar panel
2. Press the light button to adjust the brightness of different lights



 1. Press and hold the SOS button at the bottom of the body. The alarm will sound, and the SOS light will flash red and blue.
2. Press the SOS button again, and the alarm will stop.



1. Install the spring buckle on the hanging buckle.
2. Screw the spring buckle part of the lock tightly.



1. Press the + button, the volume will increase.
2. Press the - button, the volume will decrease.
3. The volume can be adjusted from V-00 to V-27. V-00 is silenced.
- FM/AM Mode: Press the "Power button" to enter the mute mode, and then press again to release the mute mode.

 


How to use FLASHLIGHT, READING LAMP or SOS ALARM etc.

1. Press the button, the high beam will be on, and press again the light will be off




1. Open the solar panel
2. Press the light button to adjust the brightness of different lights



1. Press and hold the SOS button at the bottom of the body. The alarm will sound, and the SOS light will flash red and blue.
2. Press the SOS button again, and the alarm will stop.



 1. Install the spring buckle on the hanging buckle.
2. Screw the spring buckle part of the lock tightly.



1. Press the + button, the volume will increase.
2. Press the - button, the volume will decrease.
3. The volume can be adjusted from V-00 to V-27. V-00 is silenced.
- FM/AM Mode: Press the "Power button" to enter the mute mode, and then press again to release the mute mode.

 


How to use FLASHLIGHT, READING LAMP or SOS ALARM etc.


1. Press the button, the high beam will be on, and press again the light will be off



1. Open the solar panel
2. Press the light button to adjust the brightness of different lights



 1. Press and hold the SOS button at the bottom of the body. The alarm will sound, and the SOS light will flash red and blue.
2. Press the SOS button again, and the alarm will stop.



1. Install the spring buckle on the hanging buckle.
2. Screw the spring buckle part of the lock tightly.

 


1. Press the + button, the volume will increase.
2. Press the - button, the volume will decrease.
3. The volume can be adjusted from V-00 to V-27. V-00 is silenced.
- FM/AM Mode: Press the "Power button" to enter the mute mode, and then press again to release the mute mode.



Automatic channel search


- Press and hold the automatically search the radio's station. Press and hold the automatically start frequency search from the low, select and save the receivable channels. When the first receivable channel is retrieved, the frequency will stop once, and "P01" will be displayed. When the second channel is retrieved, the frequency will stop again, and "P02" will be displayed. In this way, the reception will continue automatically until all the channels are received.



* The number of channels that can be received varies depending on the radio wave condition of the place of use.
* Station search by manual operation cannot be saved.

How to use bluetooth speakers

 - Turn on the device, press the "M" button, switch to "BT" mode



When "BT" is flashing, turn on the Bluetooth of your phone, search for "DF-587/DF-587W", click it and connect. When the device is connected, "BT" will not blink.

Pause/playback

- Short press "P" to pause or play

Switch to the next song

- Press ">" to play the next song

Switch to the previous song

- Press "<" to play the previous song

EQ

- In Bluetooth mode, press the "EQ" button to switch 6 different music sound effects: 0 Standard; 1 Rock; 2 Pop; 3 Classic; 4 Jazz; 5 Country;

How to use radio (am/fm)

- Press the "M" button, and the FM/AM of the radio will be switched



Specification

Bluetooth version	5.0, compatible with Bluetooth V5.0+BR+EDR+BLE
Power Supply	Rechargeable (DC3.7V Li-polymer battery 5000mAh)
Light source used	Main light: LED (daylight color) 1W Sub light: LED (daylight color) 0.2W
Brightness	Main light: 120lm ; Sub light: 40lm
Charging time	Approx. 4 hours (when using USB)
Charging time	Speaker 12Hours; Radio 15Hours
Charging input	DC 5V 2.0A
Rated power	7W
Port	Input: USB (Type-C) ; Output: USB (Type-A)
Receiving frequency	FM:76~108MHz(Supports wide FM) AM:522~1710Khz
waterproof specifications	IPX5
Accessory	USB (Type-C) Charging cable, spring buckle
Material	ABS, TPU

*For the improvement of products, specifications and appearance may be changed without prior notice

Please assist in battery recycling when disposing of then product. Lithium polymer batteries are used in the product. For efficient use of resources, please follow the waste disposal instructions of each local government when disposing of the product.

Kind reminder

- When this product is wet, wipe off the moisture with a soft measuring cloth.
- When this product is stained, please put a little neutral detergent in water and wipe it off with hard cloth, and dry it in the back shade after wiping with water.
- Do not wipe the body with thinner gasoline or alcohol.
- Please charge the battery every 2-3 months.
- * Due to the characteristics of the battery, the battery life may be greatly shortened and may not be recharged.
- Please disconnect the power for storage.
- * The battery life may be greatly shortened.
- Do not store in a humid environment.
- * Metal parts may rust.

