


Wireless Earbuds User Manual

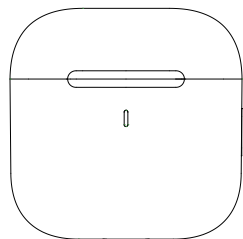

1 ID Diagram



2 Instructions

① Pairing the Earbuds with Android system/iOS system

1. Open the top cover of the charging case, the earbuds will automatically turn on
2. Turn on your phone: Settings>Bluetooth>Turn on (menu may vary by device)
3. Select "airplus", if the phone asks for a password, enter four zeros (0000)
4. The mobile phone can be used after the connection is successful

② Power off

1. Put the earbuds into the charging case and close the lid for 3 seconds to shut down;
2. Auto-power off in 3 minutes without connecting the device.

3 Function Description

① About Call

Incoming call rings	It comes with ringtone
Answer a call	Press left/right earbud once
Hang up a call	Press left/right earbud once
Reject a call	Double press on the left/right earbud

② About Music

Play / Pause	Click left/right earbud once
Previous song	Triple press the left/right earbud
Next song	Double press on the left/right earbud

③ Siri/Voice assistant

Long press the left/right earbud for 2s to wake up

④ Both Earbuds can be switched freely

The left and right earbud can be connected to the mobile phone at will, switch freely, and connect back in seconds after booting

⑤ In-ear sensor

After the TWS is successfully paired, the first earphone comes with prompt tone "dong" and the second earphone has no prompt tone

4 Prompt tone description

Items	Prompt tone
Connected	Prompt tone: "dong"
Disconnected	Prompt tone: "dong"
Touch	Prompt tone: "beep"
Low battery alarm	Prompt tone: "beep"*"beep"

5 Earphone Specification

No.	Items	Specifications
1	Product name	Wireless Earbuds
2	Battery	30mAh
3	Charging current (dual-earbuds)	30mA
4	Frequency response range	20Hz~20KHz
5	Impedance	32Ω
6	Sensitivity	113±3dB
7	Size	31.34*17.96*16.63mm
8	Available distance	10 meters (standard environment)
9	Weight	3.6g(exclude charging case)
10	BT version	V5.3
11	Supporting protocol	HFP/HSP/A2DP/AVRCP
12	Transmission frequency	2.4MHz(2.402~2.480MHz)
13	Charging time	About 1.5 hours

14	Working time	Call time: about 4.5 hours Music time : about 5.5 hours (50 % volume) Standby time: 200 days
15	Charging voltage/current	5V 1A
16	Working temperature	-10 °C~+45 °C
17	Storage temperature	-20 °C~+70 °C

6 Precautions

- ◆ Please store and use this product in a normal temperature environment
- ◆ Do not expose this product to rain or moisture
- ◆ Do not throw , to avoid product damage due to falling
- ◆ Do not disassemble, repair or modify this product
- ◆ Do not use chemical solvents to wipe this product
- ◆ Do not discard it at will, or place it in high temperature (temperature higher than 60 degrees) and fire to avoid danger

小五代杰里（非弹窗、非降噪）+无线充说明书

材质：105g双铜

尺寸：86*86mm

印刷：正反印+4C

折叠方式：风琴折

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.