

1正面

2正面

3正面

4正面

5正面

6正面

7正面

8正面

9正面

10正面

11正面

12正面

TRIBUTE TO INNOVATION



BOSGAME H66/H68/H77 USER MANUAL

Friendly Reminder

Thank you for choosing BOSGAME ,please read this user manual carefully and save it for future reference.Certificate/inspected

The information contained in this document is subject to change without notice; nothing in this document should be construed as creating any additional warranty. BOSGAME shall not be liable for technical or editorial errors or omissions that may appear in this document.

In case of any problem or demand during usage, welcome to contact us via email address on the 8th page, we are always here to support!

Safety warnings and precautions

Before using and operating this equipment, please read and observe the following precautions carefully to avoid dangerous or illegal operations.

Use environment Do not use the device in dusty and humid places to avoid causing internal circuit failures. Do not place this equipment near heating objects such as electric heaters. The working temperature of this equipment is 0-40 degrees, and the normal working temperature is 10-50% RH.


Power Please use the special charger that comes standard with this product.

Waterproof This device is not waterproof, please keep it dry.

Maintenance For all maintenance services, please contact the dealer's maintenance personnel. Do not insert any sharp objects into the device; Do not drop or bump the device to avoid damage to the device.


About the Device

Please familiarize yourself with the interface and buttons of the device before use.

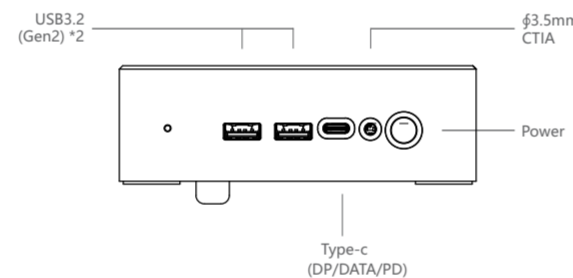

About the Device

Please familiarize yourself with the interface and buttons of the device before use.

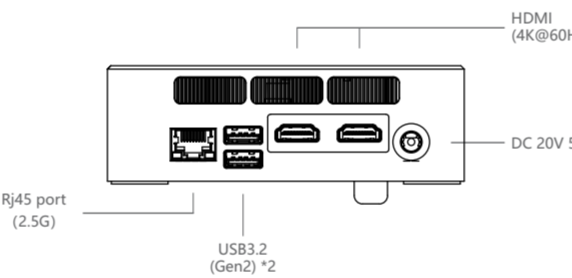

H66 Technical specifications

Table with 2 columns: Category and Specification. CPU: AMD Ryzen 5 Mobile Processors with Radeon Graphics 6600H, 7nm FinFET, 8 Cores/12 Threads, Max 4.0GHz L3 Cache 16MB, TDP 45W. GPU: AMD Radeon 660M (8 Cores/1900MHz). RAM: DDR5, SO-DIMM*2, 32GB. Storage: M.2 2280 512GB (Product capacity is subject to actual purchase). 4G LTE: N/A. Network: Wi-Fi (802.11 a/b/g/n/ac), BT BT5.2. Charger: DC port 20V 5A/6A. Packing list: 1* mini PC + 1* user manual/warranty card + 1*DC charger+ 1*VESA bracket + 1*HDMI cable.

Note: The pictures listed in this manual are for reference only. Product specifications/button definitions and appearance are subject to change without notice.

H68 Technical specifications

Table with 2 columns: Category and Specification. CPU: AMD Ryzen 7 Mobile Processors with Radeon Graphics 6800H, 7nm FinFET, 8 Cores/16 Threads, Max 4.7GHz L3 Cache 16MB, TDP 45W. GPU: AMD Radeon 680M (12 Cores/2200MHz). RAM: DDR5, SO-DIMM*2, 16GB. Storage: M.2 2280 512GB (Product capacity is subject to actual purchase). 4G LTE: N/A. Network: Wi-Fi (802.11 a/b/g/n/ac), BT BT5.2. Charger: DC port 20V 5A/6A. Packing list: 1* mini PC + 1* user manual/warranty card + 1*DC charger+ 1*VESA bracket + 1*HDMI cable.

Note: The pictures listed in this manual are for reference only. Product specifications/button definitions and appearance are subject to change without notice.

H77 Technical specifications

Table with 2 columns: Category and Specification. CPU: AMD Ryzen 7 Processors with Radeon Graphics 7735HS, 7nm FinFET, 8 Cores/16 Threads, Max 4.7GHz L3 Cache 16MB, TDP 45W. GPU: AMD Radeon 680M (12 Cores/2200MHz). RAM: DDR5, SO-DIMM*2, 32GB. Storage: M.2 2280 512GB (Product capacity is subject to actual purchase). 4G LTE: N/A. Network: Wi-Fi (802.11 a/b/g/n/ac), BT BT5.2. Charger: DC port 20V 5A/6A. Packing list: 1* mini PC + 1* user manual/warranty card + 1*DC charger+ 1*VESA bracket + 1*HDMI cable.

Note: The pictures listed in this manual are for reference only. Product specifications/button definitions and appearance are subject to change without notice.

Connection Steps

- 1. Please use the power adapter that comes with this product to connect the power supply to the monitor;
2. Connect the monitor with the HDMI cable please make sure that the HDMI cable is qualified;
3. Connect the keyboard and mouse.
4. During the first system startup of the new device, please operate according to the Windows startup guide. During this process, remember not to disconnect the power supply. It will take about ten minutes for the first startup to enter the user desktop, please wait patiently.
5. During the system startup process, if you cannot log in to your personal account, please turn off the Wi-Fi and local area network, select "skip option", and then log in to your personal account in the system.

Warranty commitment

Entitled 12-month warranty for the product quality problems caused by non-human factors.

Certificate/Inspected

Company: Shenzhen Welken Electronic Technology Co., Ltd. Address: 1908, No. 2, Baolong Factory, Anbo Tech, No. 2, Baolong 4th Road, Longgang Dist., Shenzhen



FCC Compliance Statement:

FCC Compliance Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement: This equipment must be installed and operated in accordance with provided instructions and the antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure



www.bosgame.com BOSGAME H66/H68/H77 USER MANUAL