



Yoosee Smart Camera

User Manual (V2.2)

Before using this product, please read this manual carefully and keep it for future reference.

Trouble Shooting

Q:The camera can not connect with WiFi?

A:Please double check whether the WiFi password is correct.
Ensure the WiFi is 2.4 GHz. If you use 2.4 GHz-5 GHz dual band router, please select 2.4 GHz.
The router can not have WiFi restrictions such as enabling AP isolation, preventing Wi-Fi squatting etc.
Some phones need to get mobile phone GPS permission and turn on GPS to get a WiFi list.

Q:Device is offline in device list?

A:Check whether the device network is good or not.
If there is TF card inserted, please unplug the TF card, reset the device and router. Check whether the device is online or not.
If the problem still exists, please reset the device (Insert the thimble into the "reset" hole and long press for 5s to 10s). Please re-add the device.
After that, check the device firmware and App version and upgrade them to the latest version.

Q:How to do if the device is offline after changing a router or WiFi password?

A:The device keeps the original password. If password is changed and can not match with the original password, the device is not able to be online then. Under this situation, please reset the device (Insert the thimble into the "reset" hole and long press for 5s to 10s) and re-add according to the App tips.

Q:The playback video can not be watched?

A:Unplug the TF card and re-insert. Please check whether the record mode is open.
If the record mode is open but no video is made, please go to "Settings", enter "Record settings", disable "Record switch", and format the TF card. If the video can not be watched still after formatting TF card, please replace a new TF card to try.

For more questions, please refer to "Help and feedback" in Yoosee App.

Note

- The device supports 2.4 GHz WiFi connection only. Before connecting the camera, please ensure the WiFi is 2.4 GHz.
- The device supports 128G card storage at maximum and the TF card should be formatted with FAT32 format.
- The device uses loop record technique, when TF card is full, the camera will cover the earliest files automatically to save new videos.
- Please do not install the product in a harsh environment. The product may be damaged if exposed to high temperatures, high humidity, dust and smoke etc.
- The Yoosee App and the device firmware will be updated occasionally. Please update when the software notifies you that an update is available.
- The device will be automatically bound with the Yoosee account after connecting to network. Before binding a new Yoosee account, please unbind the device with the first Yoosee account.
- Yoosee CMS is available in windows PC for camera surveillance. Please go to <http://www.yoosee.co> and download to install.

Customer Service

For users who need technical support, please contact:

✉ support@gwell.cc

Quick Start Guide

1 Download the App

You can either scan the QR code or search "Yoosee" in the App Store or Google Play, then register to login.




2 Power on the device

Power on the device and the device will give out "Du du" sound in around 30s. If the "Du du" sound can not be heard, please Insert the thimble into the "reset" hole and long press it until the device emits the voice tone.




3 Add the device

- 1.Connect the mobile with 2.4 GHz WiFi.
- 2.Go to 'Device' in Yoosee app, click '+', select 'Scan QR code to add device' and then scan the QR code on the camera.

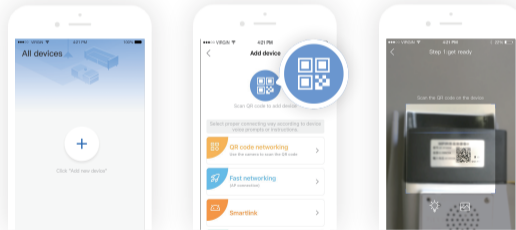


- 3.Input the WiFi password and proceed next.
- 4.Align the camera to scan the QR code at a distance of 10-20cm. After hearing a tone of success, click the button to proceed next to add the camera according to the App instructions.

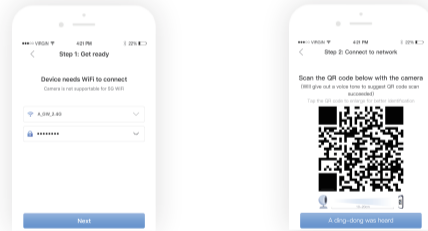

The interface above is for reference only. The App interface may be upgraded occasionally to improve user experience.

Device Sharing

- 1 Invite your friends to download and install Yoosee App, and register to log in.
- 2 The device owner can click the 'share' icon to choose either way to share.
- 3 You can follow the App instruction to configure the visitor permissions and complete the share.

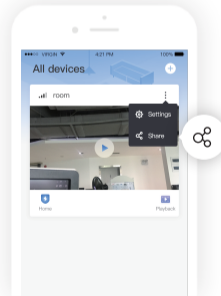

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.