

背面

正面

105mm

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

74.25mm

ANWEISUNG

- | | | |
|--|----------|--|
| Einmal drücken:
Wiedergabe/Pause | + | Einmal drücken:
Nächstes Lied |
| Zweimal drücken:
Letzte Nummer abrufen | | Langes Drücken:
Lautstärke erhöhen |
| Dreimal drücken:
Sprachassistenten aufrufen | - | Einmal drücken:
Vorheriges Lied |
| Langes Drücken:
Ein- oder Ausschalten | | Langes Drücken:
Lautstärke verringern |
- **Warme Aufforderung zum Aufladen des Kopfhörers**
Wenn der Kopfhörer längere Zeit nicht verwendet wird, können Sie die Akkulaufzeit verlängern, indem Sie Es wird empfohlen, den Kopfhörer jeden Monat vollständig aufzuladen

ISTRUZIONI

- | | | |
|--|----------|--|
| Premere una volta:
riproduzione/pausa | + | Premere una volta:
brano successivo |
| Premere due volte:
richiama l'ultimo numero | | Pressione prolungata:
volume su |
| Premere 3 volte:
richiama l'assistente vocale | - | Premere una volta:
brano precedente |
| Pressione prolungata:
attiva o disattiva | | Pressione prolungata:
volume giù |
- **CALDA RICHIESTA DI RICARICA DELLE CUFFIE**
Se le cuffie non vengono utilizzate per un lungo periodo, per prolungare la durata della batteria, si consiglia di caricare completamente le cuffie ogni mese

INSTRUCCIÓN

- | | | |
|---|----------|--|
| Presione una vez:
Reproducir / Pausa | + | Presione una vez:
siguiente canción |
| Presione dos veces:
recuperar el último número | | Pulsación larga:
subir volumen |
| Presione 3 veces:
llame al asistente de voz | - | Presione una vez:
canción anterior |
| Pulsación larga:
encender o apagar | | Pulsación larga:
bajar volumen |
- **INDICACIÓN CALIENTE DE CARGA DE AURICULARES**
Si los auriculares no se utilizan durante un periodo prolongado, para prolongar la duración de la batería, Se recomienda cargar completamente los auriculares cada mes.