



Attention:

- This handbook contains important security measures and the correct use of the product information. In order to avoid accidents, please read the manual carefully before using the device.
- Please don't be in high temperature, moisture or very dust place
 - Please don't be in high temperature, especially in summer don't put the device in the car when Windows closed
 - Avoid fall or violent collision of the device, don't make the TFT display screen very violent tremor. This could cause TFT display screen abnormal or damage.
 - Please choose the appropriate volume. Use headphones should not be too big volume, if feel limited, lower the volume or stop using it
 - Please charge in the following condition,
 - The battery power (ICONS) shows near to power
 - The system automatically shut off, startup after power off soon
 - Operation buttons no response
 - The machine that the top right corner show red icons
 - When the device in the format or ongoing upload and download file, please don't suddenly disconnect. This could cause application error.
 - For those who because of damage to the product, repair, or other causes of erased the memory. The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
 - Don't disassemble the product, don't use alcohol, thinner or become to scrubbing products

- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
 - Please don't using the Tablet PC when you in driving or walking down the street.
 - USB just only be used for data transmission
- The company reserves the right to improve product, products specification and design have any change. The information is subject to changes without prior notice.
- (The tablet is no waterproof function)

[Remark 3] All pictures in this manual is just for your reference, products specification and design have any change. The information is subject to changes without prior notice.

Warning:
The device complies with part 15 of the FCC Rules. Operation is subject to the condition that the device does not cause harmful interference. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTICE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly shielded and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

User's Guide

Android technology platform

1

2

3

4

5

6

3.3 Use touch panel

Device equipped with a touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, you can go back to main screen through pressing the soft key on the bottom right corner of the main screen.

[Remark 1] The main screen soft key functions as the machine menu .

In different applications, by tapping the back soft key on the bottom right corner on the touch screen, you can return to its interface on the software.

In different applications, by tapping the menu key on the upper right corner of touch screen, the screen will appear the operation setting interface as follows.

[Remark 3] The main screen soft key functions as the machine menu .



In the main interface, you can touch the soft key to open the APPS. In different browsers, music, video, pictures, You shift and drag the scroll bar, so that the file list can up or down to roll.

7

4. Equipment basic set

Setting: Click setting icons enter setting interface



4.1 Silent mode, Volume, Notification, ringtones, Audible selection, Screen lock sounds



8

1. Desk:



1.1 Touch panel
Capacitive touch panel: In The Operation, or click/dragging on the touch panel

1.2 POWER
Hardy: Long Press and hold the power button, the system will enter the main interface
Shutdown: In the main menu interface, Press the power button about 5 second to shutdown. The system can hit "power off" option, Click "OK", you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.
Remark 1: When power is empty system will shut down automatically

2. High turn off the device, restart will scan and restore the disk. It may take longer time to enter into system

1.3 BACK
Short Press BACK button will return the last interface.

1.4 MNC
Recording

1.5 Volume + / Volume -
Go buttons on the Volume + / Volume - / Volume - achieve changes in the volume.

1.6 earphone jack
3.5 mm standard earphone jack

3

1.7 TF card

TF -CARD slot: external TF-FLASH card

1.8 Mini USB
MiniUSB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

1.9 DC Adapter
For charging, your tablet battery

1.10 Recovery
When the tablet under the condition of the crash, upgrade firmware.

2. First use
2.1 Battery management and charge
Before first use, please set the device's battery is fully charged. Just need to connect the adaptor or USB interface, then you can charge.
The first two times charging please keep about 8 hours, after that you just need 4 hours to charge.

[Remark 3] This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110-240V 50/60Hz Max. 1000mA, Output: DC5.0V 0.7A), the device without supply DC charging. USB interface can charge, Choose USB interface to charge. During the charging, the battery icon will scroll.

[Remark 1] 1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, please charge the battery once a month.
2. After low battery shut down, connect DC adaptor/device will remind low battery/charging/need to wait some time until the battery is enough power to enter into main menu.
3. Device charging should be in standby status for reach normal charging time.
Because with device and screen consumption, it may cause longer

4

charging time.

2.2 Connection with PC
If Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC



In the last mode, you can copy, delete the file on the device and the file on the memory card.

3. Equipment operation interface

3.1 Main interface describe

After startup, will enter the main interface



In the main interface, you can:
Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the

5

interface.



Delete icons: long press the icons 3 second, drag the icons to the Recycle bin icon, once it become red. Loosen your hand, after that you can delete icon.

You touch the screen keep a time, appear the dialog box "Add to Home screen" as shown below:



3.2 status bar describe
The status bar shows of the screen.
Top left display main interface software, TF flash card, USB connection status and so on.
Top right display the battery, battery charging icons, current time, set time, Settings Menu, ESC button.

Use only the supplied antenna or an approved antenna.

6

7. Basic function

Model	SW6310	T310
CPU	Type	1310
	Speed	2.0GHz
RAM	Capacity	4GB
ROM	Capacity	32GB
Camera	Front	5.0MP
	Rear	13.2MP
3G/3G+4G/LTE	Support	
Speaker	Size	Built-in BD speaker x 2
WiFi	WiFi module	WiFi 2.4G & 5G
Battery	Built-in	3000mAh
Memory card socket	External memory	Support TF Card
Screen	15.5inch IPS	10.1 inch 1360*900
Headphone jack	Music output	3.5mm standard headphone jack
Connector	Charging/data	Type C

14