


Monster Airmars XKT11 说明书尺寸：73X93MM 材质：80g铜版纸 风琴折

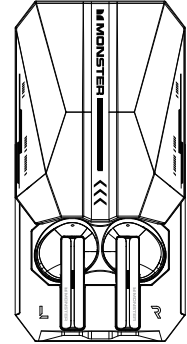

Monster Airmars XKT11
FCC ID: 2A8PV-QSMXKT11

真无线蓝牙耳机
使用说明书


产品参数

- 传输距离 ----- 10m
- 喇叭直径 ----- Φ13mm
- 喇叭阻抗 ----- 32Ω±15%
- 灵敏度 ----- 106±3.0dB
- 频率范围 ----- 20Hz-20kHz
- 电池容量 (充电盒) ----- 3.7V 300mAh
- 电池容量 (耳机) ----- 3.7V 35mAh
- 充电时间 (充电盒) ----- ≈1.5小时
- 播放时间 (耳机) ----- ≈4小时
- 配合充电盒播放时间 ----- ≈17小时

包装清单

	耳机 *2		充电盒 *1
	使用说明书 *1		Type-C充电线 *1


产品示意图

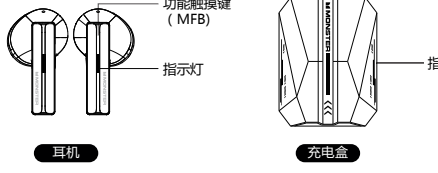

耳机 指示灯 充电盒 指示灯

给充电盒充电

用Type-C充电线连接充电盒到5V电源适配器。

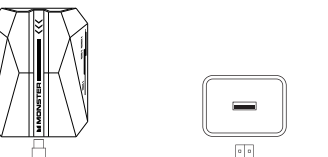

额定输入: 5V=30mA(耳机) 额定输入: 5V=300mA(充电盒)

温馨提示: 当关闭充电盒盖, 充电盒指示灯呈红灯闪烁, 请给充电盒充电。

指示灯指南

模式	描述	语音提示
开机	耳机冰蓝指示灯常亮1秒	"Power on"
关机	耳机冰蓝指示灯闪烁3次	"Power off"
配对	耳机冰蓝指示灯闪烁	"pairing"
连接	耳机指示灯熄灭	"Connected"
断开	耳机冰蓝指示灯闪烁	"Disconnected"
耳机低电	—	"battery low"
充电盒给耳机充电	耳机冰蓝指示灯常亮, 充满灯灭	—
充电盒低电	红灯闪烁	—
充电盒充电	红灯常亮	—
充电盒充满	红灯常亮	—


产品操作说明

- 开机**
方式一: 打开充电盒盖, 耳机自动开机。
方式二: 长按功能触摸键3秒, 耳机开机。
- 关机**
方式一: 将耳机放回充电盒, 关上充电盒盖, 耳机关机。
方式二: 耳机未与蓝牙设备连接状态下, 长按功能触摸键6秒, 耳机关机。
方式三: 与蓝牙设备断开连接3分钟后, 耳机自动关机。

3. 配对

步骤一: 打开充电盒盖, 耳机自动开机;
步骤二: 打开智能设备的蓝牙列表, 搜索 "Monster Airmars XKT11" 进行配对, 连接成功, 你会听到提示音 "Connected"


* 超出距离, 在断开连接3分钟内, 回到有效距离, 自动连接设备。

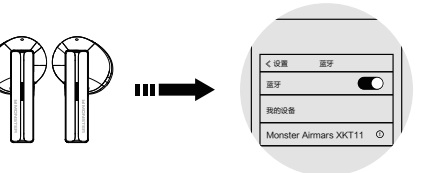

注意:
* 如果产品长时间不使用, 应先充满电, 并确保设备处于关机状态。
* 充电完成后, 请将充电线拔出, 避免长时间充电造成设备损坏。


触控键操作

常规模式

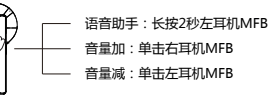


- 语音助手: 长按2秒左耳机MFB
- 音量加: 单击右耳机MFB
- 音量减: 单击左耳机MFB

音乐播放模式

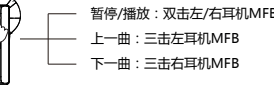


- 暂停/播放: 双击左/右耳机MFB
- 上一曲: 三击左耳机MFB
- 下一曲: 三击右耳机MFB

电话免提

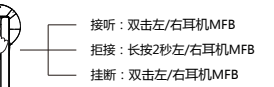

- 接听: 双击左/右耳机MFB
- 拒接: 长按2秒左/右耳机MFB
- 挂断: 双击左/右耳机MFB

游戏模式/音乐模式 切换: 已连接设备

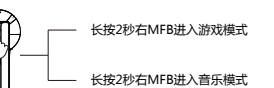

- 长按2秒右MFB进入游戏模式
- 长按2秒右MFB进入音乐模式

恢复出厂设置

耳机开机后未与蓝牙设备连接状态下, 连续单击耳机功能键5次清除配对信息后重新配对。

注意

- 充电盒开盖后, 不要按任何按键, 耳机自动开机, 配对并连接; 耳机放入充电盒并盖盖后, 充电盒会自动给耳机充电, 耳机关机。
- 常清洁, 寿命长。如长期不用, 建议15天充1次, 延长电池寿命, 耳机盒充电部分经常用棉签酒精擦拭, 能够保持电极接触, 避免接触不良, 影响使用体验。
- 电池(电池组或电池组合)不得暴露在太阳、烤箱或类似过热的环境中。
- 由于本产品采用无线连接方式, 在日常使用过程中, 受到环境、手机品牌、使用行为等因素影响, 可能在播放音乐过程中, 会出现卡顿、轻微的语音卡顿属于正常现象。

警告

- 长时间以高音量使用耳机可能会损害您的听力。建议只使用适当音量收听、通话和听音乐。
- 请不要冲凉或将产品浸入水中, 以免造成故障。
- 不要自行拆卸产品及配件, 以免导致损坏及保修失效。
- 请勿使产品受到强烈冲击或震动以免损坏。
- 请勿使用化学溶剂或清洁剂清洗产品。

Name of the Parts 部件名称	Hazardous Substances 有害物质					
	Pb 铅	Hg 汞	Cd 镉	Cr(VI) 六价铬	PBB 多溴联苯	PBDE 多溴二苯醚
Housing 外壳	0	0	0	0	0	0
Loudspeakers 喇叭单元	0	0	0	0	0	0
PCBA 电路板组件	X	0	0	0	0	0
Accessories 电源线, 连接线	X	0	0	0	0	0

This table is compiled according to SJ/T 11364.
本表格依据SJ/T 11364的规定编制。

0: Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.
X: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

FCC 声明

根据FCC规则第15部分, 本设备经过测试, 符合B类数字设备的限制。这些限制旨在提供合理的住宅设施中的有害干扰防护。该设备产生、使用并可辐射射频能量。如果未按照指定安装和使用指示可能会对无线电通信造成有害干扰。然而, 有不能保证在特定安装中不会发生干扰。如果这个设备对无线电或电视接收造成有害干扰, 可通过转动或调整设备, 关闭并打开时, 鼓励用户尝试通过一个或多个以下更多措施:

- 重新定向或重新定位接收天线。
- 增加设备和接收器之间的距离。
- 设备连接到和接收器不同的电路上。
- 请咨询经销商或经验丰富的无线电/电视技术人员以获得帮助。

此设备符合FCC规则第15部分, 操作受以下两个条件限制:

- (1) 本装置不得引起有害干扰。
- (2) 本装置必须接受任何接收到的干扰, 包括可能导致意外操作的干扰。未经合规责任方明确批准的变更或修改可能使用户对设备的操作权限失效。

Environment Friendly Use Period (EFUP)
环保使用年限

This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

保修卡

尊敬的用户, 本保修卡是您将来申请保修的凭证, 请您配合销售商填写并妥善保管!

用户信息


用户姓名	电子邮件
联系电话	邮政编码


通讯地址

产品名称	产品型号
产品条码/编号/批号	

销售商信息

名称	地址
联系电话	邮政编码
销售日期	发票号码
备注	



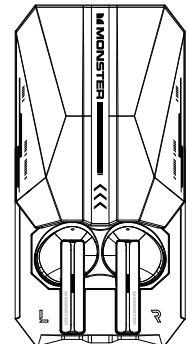

Monster Airmars XKT11
FCC ID: 2A8PV-QSMXKT11

BLUETOOTH WIRELESS HEADPHONES
INSTRUCTIONS MANUAL


Product parameters

- Transmission distance ----- 10m
- Driver diameter ----- Φ13mm
- Driver impedance ----- 32Ω±15%
- Sensitivity ----- 106±3.0dB
- Frequency response range ----- 20Hz-20kHz
- Battery capacity (Charging case) ----- 3.7V 300mAh
- Battery capacity (Headphone) ----- 3.7V 35mAh
- Charging time (Charging case) ----- ≈1.5 hours
- Music playtime (Headphone) ----- ≈4 hours
- Music playtime with charging case ----- ≈17 hours

Product Schematic Description

	Headphone*2		Charging case*1
	Instructions Manual*1		Type-C Charging Cable*1


Product Schematic Description

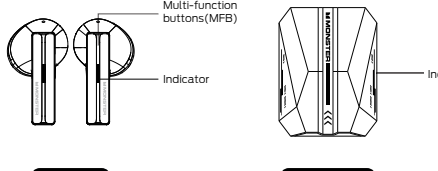

Headphone Indicator 充电盒 Indicator

Charge the charging case

Connect the charging case to the 5V power adapter with Type-C charging cable.

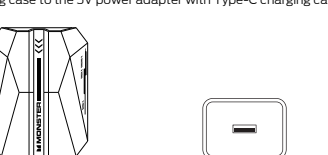

Rated input: 5V=30mA(Headphone) Rated input: 5V=300mA(Charging case)

TIPS: When charging case closed and the LED flash red, pls charging the charging case.

Indicator guide

Mode	Describe	Sound prompt
Power On	The headphones LED indicator flash in ice blue light for one second.	"Power on"
Power Off	The headphones LED indicator flash in ice blue light for three times.	"Power off"
Pairing	The headphones LED indicator flash in ice blue light	"Pairing"
Connected	The headphones LED indicator is off.	"Connected"
Disconnected	The headphones LED indicator flash in ice blue light	"Disconnected"
Low Battery	—	"Battery low"
Headphones placed in charging case	The indicator LED of headphones stay on blue when fully charged it goes out	—
Charging case low power	Red LED flash	—
Charging case charged	The LED indicator flash red slowly.	—
Charging case fully charged	Red LED stayed on	—


Product operating instructions

- Power on**
Method 1: Open the charging case, the headphones will turn on automatically.
Method 2: Long touch the MF button of the headphones for 3s to turn on the headphones.
- Power off**
Method 1: Put the headphones into the charging case and close the cover.
Method 2: When the headphones is not connected to the Bluetooth device long touch the MF button of the headphones for 6s to turn off the headphones.
Method 3: After disconnected from the Bluetooth device for 3 minutes.

3. Pairing

Step one: Open the charging case, the headphones will start pairing automatically.
Step two: Search and click for "Monster Airmars XKT11" on the Bluetooth list of the smart device, and when connection is successful, "Connected" will be heard.


* Headphones will try reconnecting to the device within 3 minutes when connection is lost

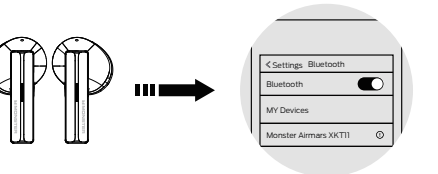

NOTE:
* Fully charge the headphones and power off before an intended not-in-use period.
* Unplug the charging cable after charging


Operation

Normal

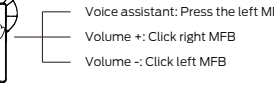


- Voice assistant: Press the left MFB for 2 seconds
- Volume +: Click right MFB
- Volume -: Click left MFB

Music playback

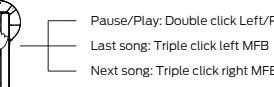


- Pause/Play: Double click Left/Right MFB
- Last song: Triple click left MFB
- Next song: Triple click right MFB

Phone

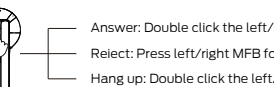

- Answer: Double click the left/right MFB
- Reject: Press left/right MFB for 2 seconds
- Hang up: Double click the left/right MFB

Game/music switching : device connected

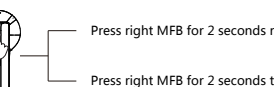

- Press right MFB for 2 seconds to enter game mode
- Press right MFB for 2 seconds to enter music mode

Restore factory settings

Headphones are not connected to the Bluetooth version device when turned on, click the MFB 5 times to clear the previous pairing information and repaired again.

Precautions

- Headphones will turn on automatically (needless to press any button) pair and connect the device when the charging case is opened. After placing the headphones in the charging case, they will turn off and automatic charging will start when the cover is closed.
- Charging every 15 days will extend battery life when not in use often. Cleaning off dirt on the charging contacts by cotton swabs with alcohol will maintain a good contact for charging.
- Keep battery (battery pack) away from inflammables or excessive heat such as direct sunlight.
- Intermittent is normal during playback for wireless products due to environmental factors, device brand, users' behavior, etc.

Warnings

- Do not use headphones at high volume for an extended period of time.
- Keep the headphones away from dust and water.
- Do not disassemble the headphones and accessories, otherwise warranty will be voided.
- Keep headphones away from any impact or vibration.
- Do not use any chemical solvents or cleaning agent on the headphones.

Name of the Parts	Hazardous Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Housing	0	0	0	0	0	0
Loudspeakers	0	0	0	0	0	0
PCBA	X	0	0	0	0	0
Accessories	X	0	0	0	0	0

This table is compiled according to SJ/T 11364
This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Environment Friendly Use Period (EFUP)

This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Warranty Service

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User info

User name	Email
Contact number	Postal code

Mailing address

Product name	Product number
Product barcode / Serial number / Batch number	

Product information

Product name	Product number
Product barcode / Serial number / Batch number	

Vendor information

Name	Address
Contact number	Postal code
Sales date	Invoice number
Remark	

