


genkinno

P1 Robotic Pool Cleaner

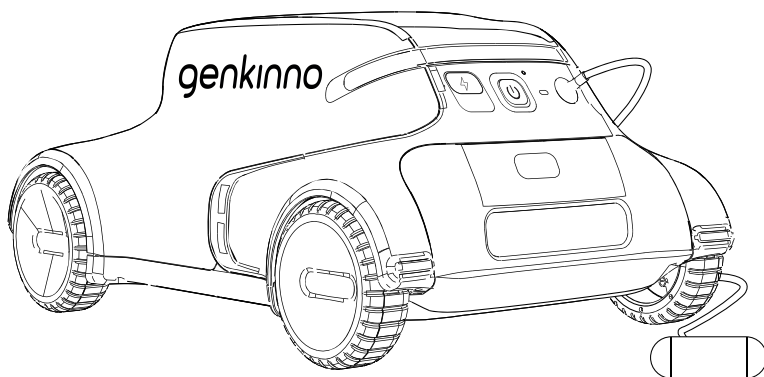

User Manual

English

CONTENTS

1. Introduction	01
2. Warnings and Cautions	01
2.1 Warnings	01
2.2 Cautions	03
2.3 Water Conditions	03
3. In the Box	03
4. Using for the First Time	04
4.1 Charging the Cleaner	04
4.2 Turn on the Cleaner	04
4.3 Check the Battery Level	04
4.4 Turn on the Remote Controller	05
4.5 Replace the Remote Controller Batteries	05
4.6 Calibrate the Compass	05
5. Robotic Pool Cleaner Parts	07
5.1 Robotic Pool Cleaner	07
5.2 Remote Controller	07
5.3 Water Filter Tank	08
6. Using the Robotic Pool Cleaner	08
6.1 Robotic Pool Cleaner Status Indicator	08
6.2 Auto Mode	09
6.2.1 Placing the Robotic Pool Cleaner into the Pool	09
6.2.2 Path Planning	09
6.2.3 Power Mode Switch	10
6.2.4 Auto Parking	10
6.2.5 Removing the Robotic Pool Cleaner from the Pool	10
6.3 Manual Mode	10
6.3.1 Changing to Manual Mode	10
6.3.2 Change the Suction Power	11
6.3.3 Control the Robot	11
6.3.4 Remote Controller Status LED	11
6.4 Cleaning After Use	12
7. Off-season Storage	13
8. FAQs	13
9. Specifications	14
10. Warranty	15

1. INTRODUCTION

Thank you for choosing the genkinno robotic pool cleaner.

This user manual helps you to keep your robot performing at its best. Please take a few moments to read through it.

If you have any questions, contact our customer service for assistance or visit www.genkinno.com for more information.

Genkinno Customer Service:

Email: support@genkinno.com

Facebook: @genkinno

2. WARNINGS AND CAUTIONS

IMPORTANT SAFETY INSTRUCTIONS, READ AND FOLLOW ALL INSTRUCTIONS!

2.1 Please adhere strictly to the following WARNINGS:

- Only use the accessories recommended or sold by the manufacturer.
- This model only applies to swimming pools with a flat floor.
- Do not allow children to ride on the cleaner or play with it.
- Use the original and authorized power adapter only.
- The charging adapter must be connected to a leakage-protected socket when charging.
- Do not operate the cleaner when people or animals are in the pool.
- While charging, the cleaner should be uncovered and kept in a cool place in order to prevent damage of internal electrical components caused by overheating.
- Only certified professionals can disassemble the sealed driving kit of the cleaner.
- Do not operate the cleaner while the pool filter is running.
- Oil sealant for the servo contains grease, which can cause water pollution if exposed.
- If the cleaner needs to be stored for a long period of time, it should be charged every three months to maintain battery life between 40%-60%.
- Please use the original and authorized power adapter only. If the cleaner is not charged for a long time, the battery voltage will be lower than the over-discharge protection voltage due to the self-discharge of the battery, which may cause fatal damage.
- Do not use or store the cleaner near any heat source.
- Do not pierce the shell of the cleaner with nails or other sharp objects.
- Do not hammer, impact, or throw the cleaner.
- Make sure the charging socket is dried before charging.

FCC Caution

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This radio is designed for and classified as “General population/uncontrolled Use”, the guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.
- Body and limbs operation; this device was tested for typical body and limbs operations kept 0mm for body worn. To maintain compliance with RF exposure requirements, use accessories that maintain a 0mm for body worn.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

2.2 Please ensure that the following PRECAUTIONS are implemented:


- Check the wheels to make sure they turn properly.
- Always clean and wash the filter tray after using.
- Turn off the cleaner when maintaining, cleaning, or when it is not in use.
- The cleaner should be stored in a cool and ventilated place, away from direct sunshine.
- Due to the limitations of the battery capacity, the cleaner is only suitable for swimming pools with sizes up to 1614 sq. ft (150m²); otherwise, the cleaning effect will be impacted or reduced.

2.3 Water Conditions

- Use the Robotic Pool Cleaner in the following water conditions:

pH	7.0 -7.8 PPM
Temperature	43°F~95°F (6°C~35°C)

3. IN THE BOX

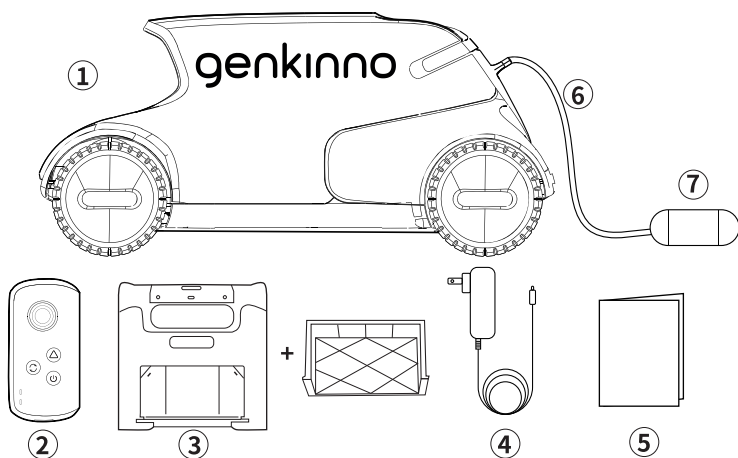


- ① 1 X Genkinno P1
- ② 1 X Remote Controller
- ③ 1 X Water Filter Tank (filter included)
- ④ 1 X Charger
- ⑤ 1 X User Manual
- ⑥ 1 X Floating Cable
- ⑦ 1 X Handle

4. USING FOR THE FIRST TIME

4.1 Charging the Cleaner

Connect the cleaner and the included charger to charge the battery.

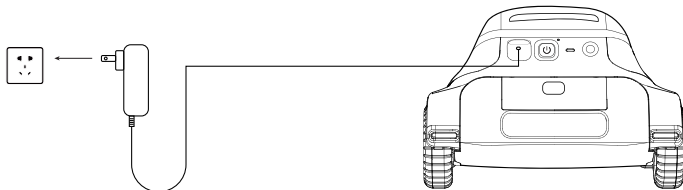

Clean the charging port before charging.


Red charging indicator LED indicates the battery is charging.

Green charging indicator LED indicates charging is finished.

4.2 Turn on the Cleaner


Press the start button once and the cleaner will power on.

The power indicator LED will turn green.

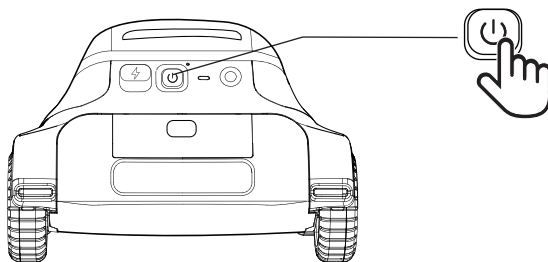


4.3 Check the Battery Level

- Green The battery is fully charged
- Orange The battery has been used
- Red The battery requires recharging

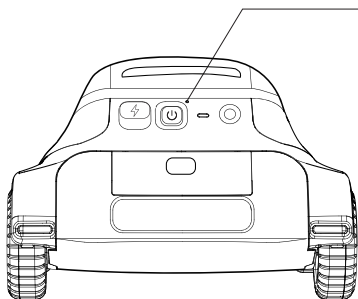

4.4 Turn on the Remote Controller


Press and hold the power button to power the remote controller on or off.

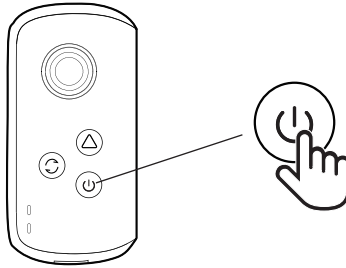

4.5 Replace the Remote Controller Batteries


When it is out of battery, green and red lights will flash.

Replace the three AA batteries inside the remote controller.

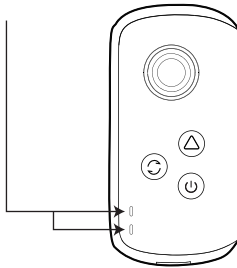


4.6 Calibrate the Compass

- When the cleaner's function LED blinks red, it indicates that the compass is abnormal, and requires calibration.
- Find a location on grass or dirt and NOT on concrete or asphalt (unless you know the concrete or asphalt does not contain rebar).
- Hold the stick of the remote control ① down and press and hold the mode switch button ② on the left side of the remote controller at the same time.

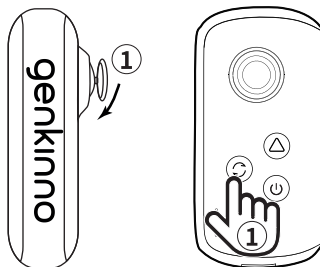


- When the wheel of the cleaner swings left and right, it indicates that you can start to calibrate the compass.
- Pick up the cleaner and turn it smoothly and steadily a full 360 degrees or more until the wheel swings, which indicates that the cleaner has completed calibration on that side.
- Point the front of the robot straight down and turn it smoothly and steadily a full 360 degrees or more until the wheel swings again.
- Calibrate the six sides of the cleaner in sequence.
- After this process is complete, long press the power switch button on the remote controller to exit compass calibration.
- Wait until the function led is green, which means the compass is normal.

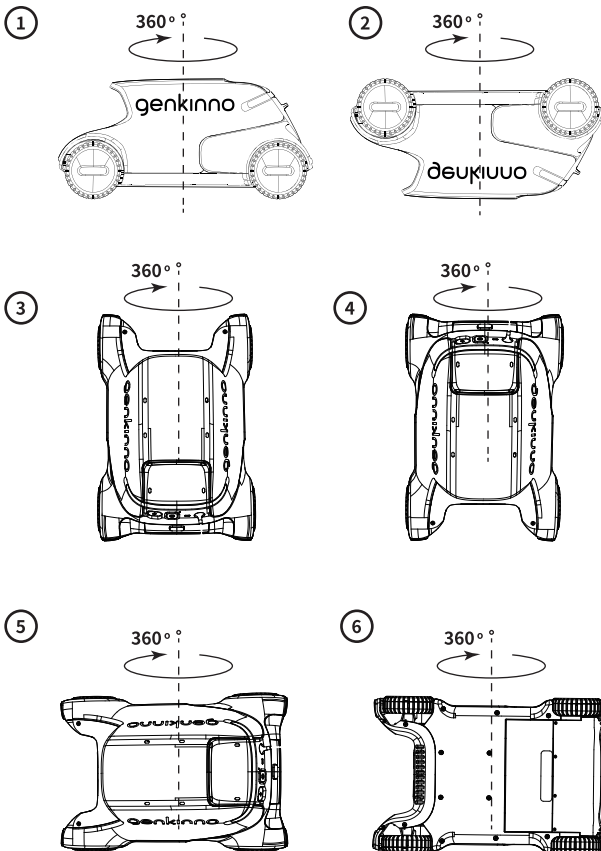

5. ROBOTIC POOL CLEANER PARTS

5.1 Robotic Pool Cleaner

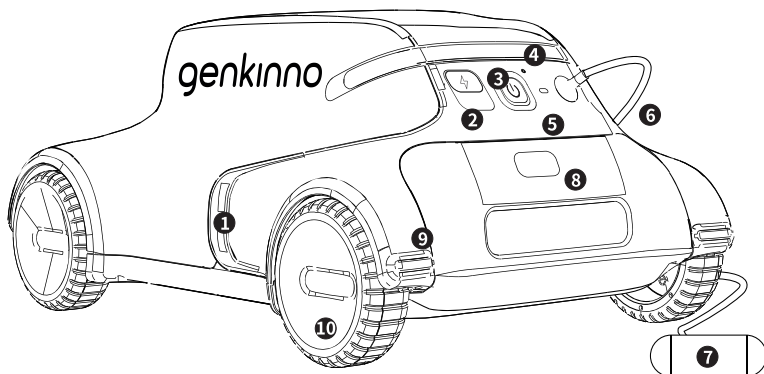

1.Drain

2.Charge Input

3.Power Button

4.Battery Level LED

5.Function LED

6.Floating Cable/Transmission Cable


7.Handle/Antenna

8.Release Button


9.Anti-collision Rubber

10.Wheel


5.2 Remote Controller

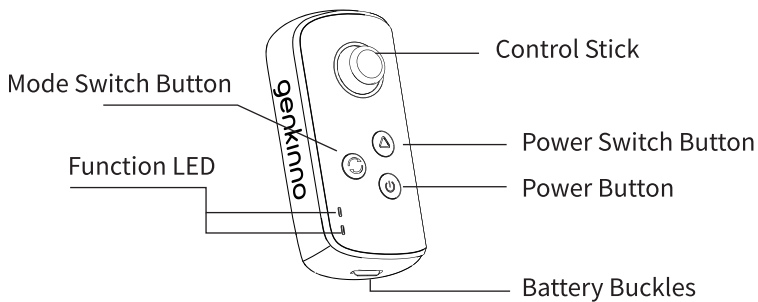

5.3 Water Filter Tank

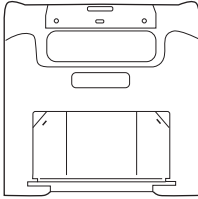

water filter tank

 

filter

6. USING THE ROBOTIC POOL CLEANER


6.1 Robotic Pool Cleaner Status Indicator

The cleaner includes LED status indicators, please refer to the table below to understand the machine status indicated by different flashing methods.

P1 Status Indicator	
Blue blinking slowly	Auto mode
Blue blinking fast	Auto mode with 25W suction power
Blue constant	Auto mode with 50W suction power
Green blinking slowly	Manual mode
Green blinking fast	Manual mode with 25W suction power
Green constant	Manual mode with 50W suction power
Red blinking	The compass is abnormal and requires calibration


6.2 Auto Mode

Once turned on, the cleaner's default mode is Auto mode, where the cleaner will begin to operate approximately 1 to 2 minutes after being placed inside the pool.

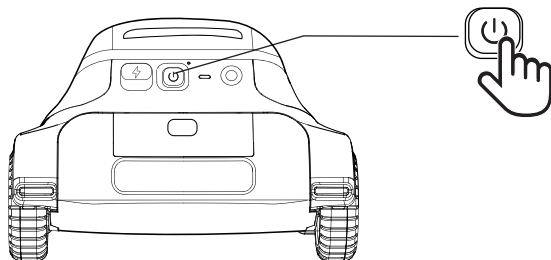


6.2.1 Placing the Robotic Pool Cleaner into the pool

Release it and let it sink to the floor of the pool.

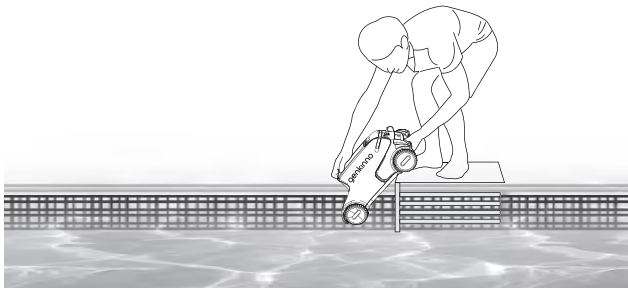

6.2.2 Path Planning

When it moves ahead and reaches one side of the pool, it can start to plan the following route parallel to the first route automatically.

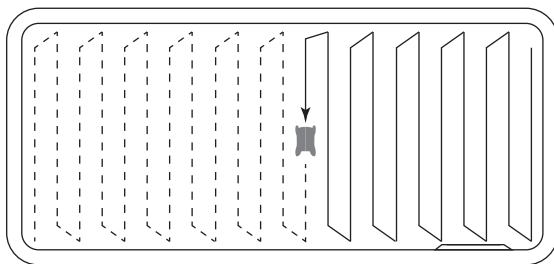

6.2.3 Suction Boost


- You can reduce suction and save energy when the pool is clean. The default is 50W power. Double-click the power switch button, and the power level will change to 25W, and the power LED will be green and quickly blinking.
- The cleaner's maximum suction power of 100W will activate automatically when the cleaner encounters large leaves and other debris.

6.2.4 Auto Parking

When the cleaner has completed its cleaning session, or the battery is low, it will park itself so that you can easily take it out.

6.2.5 Removing the Robotic Pool Cleaner from the Pool


Locate and grab the floating cable, you can then pull the cable to remove the cleaner from the swimming pool.

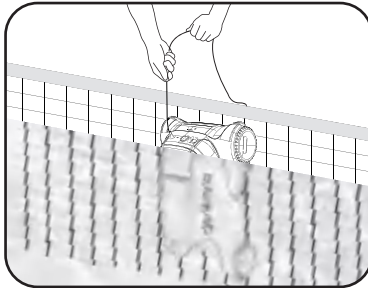

6.3 Manual mode


6.3.1 Changing to Manual Mode

Turn on the Remote Controller, double-click the Mode button, and the LED indicator will turn green, meaning the cleaner is switched to Manual control.

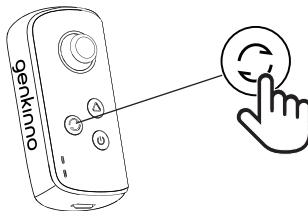


6.3.2 Change the Suction Power

You can reduce suction and save energy when the pool is clean. The default mode is 50W. Double-click the power switch button, and the power will change to 25W, and the power LED will be green and quickly blinking.

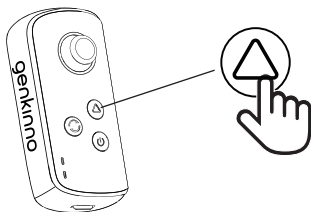

6.3.3 Control the Robot

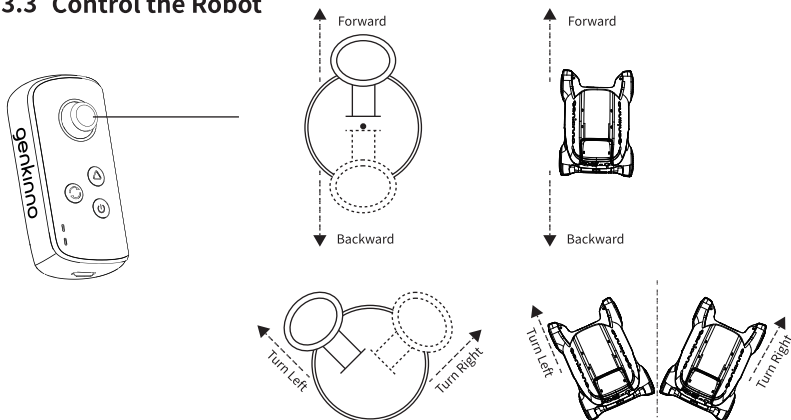



6.3.4 Remote Controller Status LED


RC Status Indicator	
Red blinking slowly	Auto mode
Red blinking fast	Auto mode with 25W suction power
Red constant	Auto mode with 50W suction power
Green blinking slowly	Manual mode
Green blinking fast	Manual mode with 25W suction power
Green constant	Manual mode with 50W suction power

6.4 Cleaning After Use


It is highly recommended to clean the filter basket after each cleaning cycle.

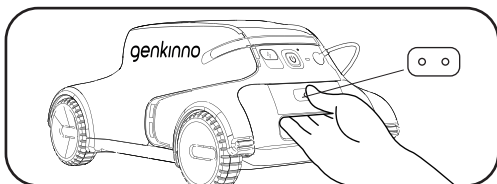


1 Press the button 

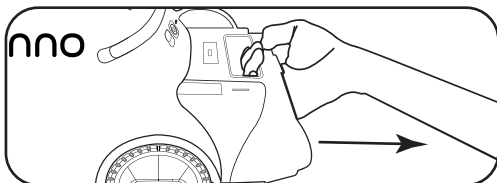


2 Pull out of the water filter tank.

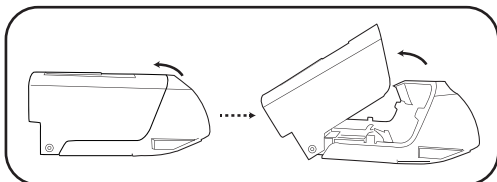


3 Open the water filter tank.

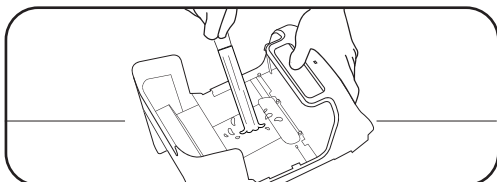

4 Clean the water filter tank.

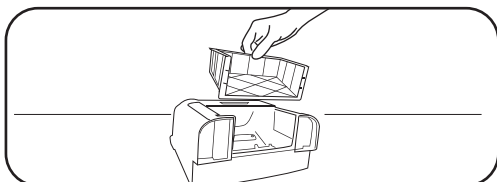

5 Take out the filter.

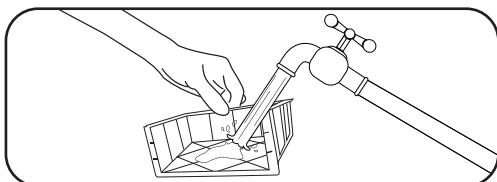

6 Clean the filter.

7. OFF-SEASON STORAGE

If the cleaner will not be in use for an extended period of time, perform the following storage steps:

- Make sure that no water is left inside the cleaner.
- Thoroughly clean the filter basket and panels and insert them back into place.
- Roll up the cable so that it has no kinks.
- Store the cleaner in a protected area away from direct sunlight or weather elements such as rain or snow.
- If the cleaner needs to be stored for a long period of time, it should be charged every three months to maintain battery life between 40%-60%.

8. FREQUENTLY ASKED QUESTIONS (FAQ)



1.Does the P1 require a remote controller to operate it?

No. Once the cleaner is turned on, the default mode is auto mode, in which the device will operate automatically and clean the swimming pool.



2.How large of a swimming pool can be cleaned?

Due to the limitations of battery capacity, the cleaner is only suitable for swimming pools with a size of up to 1614 sq. ft (150m²); otherwise, the cleaning ability will be affected.



3.How deep underwater can it work?

Because the floating cable is 2 meters, in order to keep the cleaner running properly, we suggest a max depth of no greater than 2 meters (about 6.6 feet).



4.How do I safely remove my cleaner from the water?

Gently pull on the floating cable to bring your cleaner to the edge of the pool and then remove it.



5.Why does the compass require calibration?

Compass calibration is important to ensure efficient operation. If calibration is abnormal or incomplete, it may lead to aberrations or abnormalities in the cleaner's path. When the cleaner LED indicator is red, it means that the cleaner needs to be recalibrated.



6.How often should I clean the filter?

It is highly recommended to clean the filter basket after each cleaning cycle.



7.Can the P1 clean walls and the waterline?

This cleaner is designed cleaning the floor/ground of a pool underwater. It cannot clean the walls or the waterline properly.

- ? **8.What is the runtime of the P1? How long does it take to fully charge?**
It takes approximately three hours to fully charge the cleaner, thanks to its safe fast-charge technology. Once fully charged, it can provide up to four hours of use, enough to clean most pools several times over.

9. SPECIFICATIONS

Model	genkinno P1
Rated Working Voltage	12V
Suction Power	25W/50W
Run Time	240 Minutes (when using 25W power)
Charger Input	100~240V, 50/60Hz
Charger Output	12.6V/3.1A
Battery Capacity	9000mAh
Charging Time	2-3 Hours
Max Pool Size	Up to 1614 sq. ft (150m ²)
Filter Capacity	2.4L
Filter Density	140μm
Moving Speed	39.37ft/min (Max 12m/min)
Pool Water Temperature	42.8° to 95° F (6° to 35° C)
Pool Water PH Value	7.0-7.8
Charging Environment Temperature	41° to 95°F (5° to 35° C)
Max Water Depth	6.6ft (2m)
Product Size	16.3×10.8×7.8 inches (L×W×H) 415×276×200 mm (L×W×H)
Weight	9.11lbs (4.4kg)
Storage Temperature	-4° to 113° F (-20° to 45° C), RH≤75%
Pool Slope	Max 15°

10. WARRANTY

This product has passed all quality control and safety tests in accordance with all relevant laws and regulations and the highest safety standards.

Warranty Information

- The warranty covers 24 months (only applies to the battery and motor) from the date of original purchase.
- This warranty is voided if the product has been altered, misused, or has been repaired by unauthorized personnel.
- The warranty extends only to manufacturing defects and does not cover any damage resulting from mishandling of the product by the owner.
- The order number or record must be presented for any claim or repair during the warranty period.

Genkinno support:

<http://www.genkinno.com/support>

Genkinno service:

If you have any questions about this document, please contact genkinno by sending a message to support@genkinno.com

Facebook: [@genkinno](https://www.facebook.com/genkinno)