

J5 (联想LP40) 产品说明书 尺寸: 50x70mm 材质: 80g书写纸 双面印刷 风琴折

联想 thinkplus LivePods LP40  
真无线蓝牙耳机




使用说明书  
使用前请阅读使用说明书

产品规格
蓝牙版本: V5.0 传输距离: ≥10m 喇叭直径: φ13mm 阻抗: 32Ω 麦克风类型: 硅咪 麦克风灵敏度: -32dB ± 3dB 喇叭功率: 20mW*2 播放时长: 约4小时 耳机电池容量: 35mAh 额定输入: 5V 230mAh 充电仓电池容量: 230mAh (所有技术信息以实际性能为准)
包装清单
蓝牙耳机 x 2 充电线 x 1 充电盒 x 1 说明书 x 1

产品使用简介
(1) 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。 (2) 请勿将产品放入水或其他任何液体中, 此产品非防水设计。 (3) 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。 (4) 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。 (5) 请勿将此产品放置于热源附近或直接暴露于火源附近。 (6) 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。
产品操作说明
1.开机 方式一: 将左右耳机从充电仓中取出即可开机。 方式二: 用手指轻触耳机多功能触控键2S即可开机。 注: 当耳机处于充电状态下时, 不能开机。 2.关机 方式一: 用手指轻触耳机多功能触控键3S后, 耳机关机。 方式二: 直接将左右耳机放入充电仓即可关机。 注: 当耳机从充电仓中取出, 5分钟未与相应蓝牙设备进行配对连接, 便会自动关机; 超出信号10-12M信号距离, 蓝牙无连接状态5分钟后, 耳机自动关机。 3.TWS配对 (左右耳机彼此配对)

将左右耳机同时从充电仓中取出, 左右耳机即可进行TWS配对, 5秒钟左右配对成功。  
注: 当左右耳机开机一段时间后, 如若彼此之间配对不成功, 可同时长按左右耳机达5秒钟, 左右耳机关机, 然后将左右耳机同时开机, 开机后, 左右耳机便会自动配对。  
4.主副耳自动切换  
当左右耳机配对成功后, 任意单个耳机入仓充电, 便会关机, 未入仓充电耳机为主耳耳机, 保持正常运行。  
5.与蓝牙耳机进行配对连接  
打开欲配对蓝牙设备的蓝牙设置选项, 进入选项, 找到耳机的蓝牙配对名“联想thinkplus-LP40”, 点击配对名进行配对。  
6.播放音乐  
上一曲: 连续短触左耳耳机多功能触控键三次  
下一曲: 连续短触右耳耳机多功能触控键三次  
音量加: 连续短触右耳耳机多功能触控键两次  
音量减: 连续短触左耳耳机多功能触控键两次  
暂停/播放: 短触任意耳机多功能触控键一次  
7.电话免提 (TWS双耳机配对操作)  
来电时, 接听: 短触任意耳机多功能触控键一次  
来电时, 拒接: 短触任意耳机多功能触控键2秒钟  
结束通话挂断: 短触任意耳机多功能触控键一次


8.电话免提 (单耳机操作)  
来电时, 接听: 短触耳机多功能触控键一次  
来电时, 拒接: 短触耳机多功能触控键2秒钟  
结束通话挂断: 短触耳机多功能触控键一次  
9.激活SIRI语音助手 (仅支持IOS系统用户)  
激活语音助手: 短触任意耳机多功能触控键1.5S松开,可激活SIRI智能语音功能。  
关闭语音助手: 当激活该功能后, 短触任意耳机多功能触控键1.5S松开即可关闭SIRI语音助手功能。  
10.耳机充电  
耳机放入充电仓充电时, 耳机设有指示灯, 充电仓的绿色灯会点亮, 表示正常为耳机充电。  
11.充电仓充电  
给充电仓充电时, 充电仓指示灯呈红色灯闪亮, 充满后呈红色灯长亮。

产品中有害物质名称及含量						
部件名称	有害物质					
印刷电路板组件	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBBs)	多溴二苯醚 (PBDEs)
外壳等小结构件	○	○	○	○	○	○
本表格依据SJ/T 11364的规定编制。 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 表格标记“X”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。 印刷电路板组件*: 包括印刷电路板及其零部件, 电子元器件等, 根据产品型号不同, 您所购买的产品可能不会含有以上所有部件						
	在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常的使用状态下的产品的环保使用期限。					


保修声明
免责声明 本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。 保修声明: 就本文件附带的产品做如下保证: 如产品在您购买日起十二 (12) 个月 (“保修期”) 内, 在正常使用情况下因质量问题发生损坏, 能修理的, 免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期 (最短不少于30天) 内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三 (13) 个月计算。 如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。 以上保证不适用于下列情况: 1.超过三包有效期的; 2.涂改保修卡、产品编号与产品本体不符; 3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏; 4.因不可抗力 (如地震、战争、火灾等) 或意外导致的故障或损坏; 5.拉拽、撬扣因受力过大而损坏; 6.因超载过重造成的脱线或撕裂; 7.任何因尖锐物体造成的损坏; 8.有烧损或水浸迹象的产品; 9.因擅自拆改导致的损坏; 10.产品正常使用过程中发生的老化、褪色、磨损、破裂和其他损耗。

保修声明
11.如产品原有标识标签被更改或损毁, 本保证将失效。 产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符提出异议。 以上保证就是我们产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权益。 服务热线: 400-812-0102 售后邮箱: frank@szseyan.cn

FCC 声明
根据FCC规则第15部分, 本设备经过测试, 符合B类数字设备的限制。这些限制旨在提供合理的住宅设施中的有害干扰防护。该设备产生使用并可辐射射频能量, 如果未按照规定安装和使用该指示可能会对无线电通信造成有害干扰。然而, 有不能保证在特定安装中不会发生干扰。如果这个设备对无线电或电视接收造成有害干扰, 可通过转动来确定设备, 关闭和打开时, 鼓励用户尝试通过一个或多个以下更多措施: -- 重新定向或重新定位接收天线。 -- 增加设备和接收器之间的间距。 -- 设备连接到与接收器不同的电路上的插座已连接。 -- 请咨询经销商或经验丰富的无线电/电视技术人员以获得帮助。 此设备符合FCC规则的15部分。操作受以下两个条件限制条件。 (1) 本装置不得引起有害干扰。 (2) 本装置必须接受任何接收到的干扰, 包括可能导致意外操作的干扰。未经合规责任方明确批准的变更或修改可能使用户对设备的操作权限失效。 FCC ID: 2A8SE-22090001



Lenovo thinkplus LivePods LP40

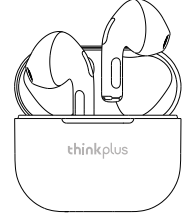


USER MANUAL  
Please read all instructions carefully and retain for future use

Product specifications
BT Version: V5.0 Transmission distance: ≥ Up to 10m Driver diameter: φ13mm Impedance: 32Ω Mic Type: Silicon Microphone(MEMS Microphone) Mic Sensitivity: -32dB ± 3dB Speaker Power: 20mW*2 S/N Rate: ≥ 70dB THD: ≤ 5% Frequency Response: 20Hz-20KHz Playing time: About 4 hours Earphone battery: 35mAh Rated input: 5V 230mA Charge case battery: 230mAh (All technical data is subject to actual performance)
Packing list
BT Earphone x 2 Charge Cable x 1 Charge Case x 1 Manual x 1

Usage Instruction
(1) Don't attempt to disassemble the unit and change any part, except there is operation method mentioned in the manual. (2) Don't expose the unit to liquid, moisture or humidity, since it is not a waterproof product. (3) Disconnect the unit with your Bluetooth device and move it to the safe area if the liquid get inside the unit. (4) Don't assemble or disassemble the unit to avoid electric shock, if there is water on your hands. (5) Don't expose the unit to extremely high temperature or dispose of the unit in fire as it will result in an explosion. (6) Don't place the unit in an electromagnetic interference environment to avoid malfunction.
Operation Instruction
1. Turn On: Method 1: Bring both earphones out from the charge case, the earphones will turn on automatically. Method 2: Press and hold on the MF button 2s to turn on the earphones Note: When the earphone is under charging, it can not be turned on. 2. Turn Off: Method 1: Press and hold on the MF button 3s to turn off the earphone. Method 2: Put the earphone back into the charge case, the earphone will turn off automatically. Note: The earphones will turn off if it has not received a signal for approx.5 minutes.

The earphones will turn off if the distance is exceeds 10-12M and no signal received within approx. 5 minutes.  
3. TWS Pairing ( R & L earphones TWS Pairing)  
Bring both earphones out from the charge case, the earphones will automatically turn on and pair with each other successfully within 5s.  
Note: If R & L earphones do not pair successfully after turn on for a while, press and hold on the MF button on both earphones 5s to turn off the earphones. Then turn on both earphones again, they will pair with each other automatically.  
4.Two earbuds automatic switch:  
After left and right earbuds paired, any one earbuds put in the charging case, it will turn off.  
The earbud not put in charging case, still work normally.  
5.Connect with BT:  
Turn on the device of BT and find “联想thinkplus-LP40” to pair.  
6.Playing music  
Previous track: Short press the MF button of left Earpod 3 times will return you to the previous track  
Next track: Short press the MF button of right Earpod 3 times will take you to the next track  
Increase Volume: Short press the MF button of right Earpod 2 times to increase the volume  
Decrease Volume: Short press the MF button of left Earpod 2 times to decrease the volume  
Pause/Play: Short press the MF button of one Earpod will resume the music

7.Hands free function (two earbuds paired)  
Answer incoming call : Short press the MF button of any Earpod to answer an incoming call.  
Reject Incoming Call: Press the MF button of any Earpod for 2 seconds and release  
End call: After your phone conversation, Short press the MF button of any Earpod.  
8.Handsfree function (Single earbud )  
Answer incoming call : Short press the MF button of any Earpod to answer an incoming call.  
Reject Incoming Call: Press the MF button of any Earpod for 2 seconds and release  
End call: After your phone conversation, Short press the MF button of any Earpod.  
9.Active SIRI voice assistant:(Only support IOS system)  
Activate voice assistant: touch the Multi function button for 1.5s to turn on.  
Turn off voice assistant: after activate the voice function, short press button for 1.5S to turn off.  
10. Charging earbuds  
when earbuds put in the charging case, No indicator light, The charging case with green light, that shows normal charging.  
11. Charge the charging case  
Charge the charging case, it flashes red light. After full charge, the red light is always on.

Name and content of hazardous substances in products						
Name and content of hazardous substances in products						
Part Name	Harmful materials					
Printed circuit assembly	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Small structural parts such as shell	○	○	○	○	○	○
This form is compiled in accordance with SJ/T 11364. ○: Indicates that the content of the hazardous substances in all homogeneous materials of the part is in below the limit requirements specified in GB/T 26572. ×: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds. The limit requirements specified in GB/T 26572. The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances. Printed circuit board components*: including printed circuit boards and their parts, electronic components, etc., Depending on the product model, the product you purchased may not contain all the above components						
	Electronic and electrical products sold in the People's Republic of China must mark this Logo, the number in the logo represents the product under normal use Environmental protection use period.					

Warranty statement
Disclaimer This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the webpage at any time, without additional line notification. Warranty statement: The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired free; if the manufacturer confirms that it cannot be repaired, free replacement; repaired or replaced product, Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchase date by sale. The ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 Months calculation. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice. The above guarantee does not apply to the following situations: 1. The validity period of the three packs is exceeded; 2. Alteration of the warranty card and product code does not match the product body; 3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage in/paired or damaged; 4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accident bad; 5. The zipper and buckle are damaged due to excessive force;

6. Disconnection or tearing caused by excessive load; 7. Any damage caused by sharp objects; 8. Products with signs of burning or water immersion; 9. Damage caused by unauthorized disassembly; 10. Aging, discoloration, abrasion, rupture and other losses occurred during normal use of the product. 11. If the original identification label of the product is changed or damaged, this guarantee will become invalid. The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should Check on the spot and raise objections to any discrepancies. The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law prof. Service supervision hotline: 400-812-0102 After-sales service Email: frank@szseyan.cn
---

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation . This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC ID: 2A8SE-22090001

