

Android tablet pc

# Content

1. Appearance and button:.....	3
1.1 Touch panel.....	3
1.2 POWER.....	3
1.3 DC port.....	3
1.4 Micro USB.....	3
1.5 MIC.....	3
1.6 earphone jack.....	3
1.7 Volume +, Volume-.....	3
1.8 TF card.....	3
2. First use.....	3
2.1 Battery management and charge.....	3
2.2 Connection with PC.....	4
3. Equipment operation interface.....	5
3.1 Main interface.....	5
3.2 status bar.....	6

4. Equipment basic setting.....	6
4.1 Wi-Fi.....	7
4.2 Sound.....	8
4.3 Display.....	8
4.4 Storage.....	8
4.5 Application Management.....	9
4.6 Language & input.....	10
4.7 Backup & reset.....	11
4.8 Date & time.....	11
5. Specification.....	12

1. Volume+, Volume-
2. Power-power on/power off
3. Reset
4. Earphone jack
5. TF slot
6. Type C-Charge through Type C or can connect to computer for data transmission
7. Speaker

## 2. First use

### 2.1 Battery management and charge

Before first use, please make sure the device is fully charged. If not, just need to connect the Type C adaptor or connect to Computer by USB cable, then you can charge.

The first two times please keep charging about 6 hours, after that you just need to charge 4 hours.

**【Remark】** : This tablet using Built-in polymer battery, Charge must choose.

standard adaptor (Input: AC110~240V 50/60Hz  
Max:180MA.. Output: DC5.0~5.5V/1.5-2A)

During the charging, the battery icon will scroll or have flashing indicate in battery icon.

When finish charging, battery icon will become green and stop rolling.

In order to prolong the service life of the machine, you are advised to use up the battery power to about 15% before charging it.

**【Remarks】** :

a. If you don't to use this Tablet for long time, in order to avoid no power damage, please charge/play the device once a month.

b. After shut down for low battery, connect USB adaptor, device will remind low battery, need to wait some time until the battery is enough power to enter into main menu.

 
c. Device charging should be in standby status for normal charging time.

Because with device and screen power consumption, it may cause longer charging time.

## 2.2 Connection with PC

Use USB cable to connect device to PC. The unit is a “generic USB Device” and does not need any extra software drivers to connect to your PC. After your PC has recognized the unit, you will see a message on the bottom of your PC screen informing you. (If your PC warns: Drivers not installed, ignore this)

To complete the connection, you need to reveal the Notifications Screen on the unit. You will see the notification menu similar to this:

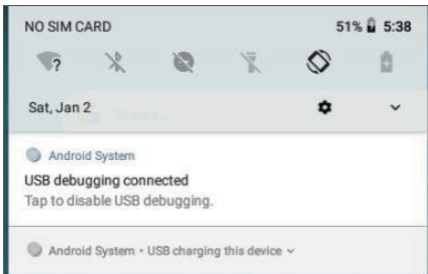

Select USB connected.

You will then see this screen:



 
Select Turn on USB storage.

In the load mode, you can copy, delete the file on the device and the file on the memory card.

3. Equipment operation interface

3.1 Main interface

After start-up, it will enter the home screen.

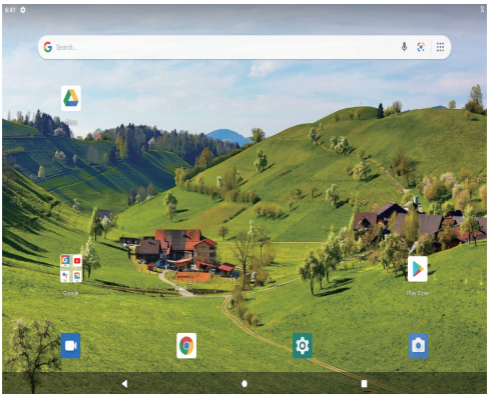


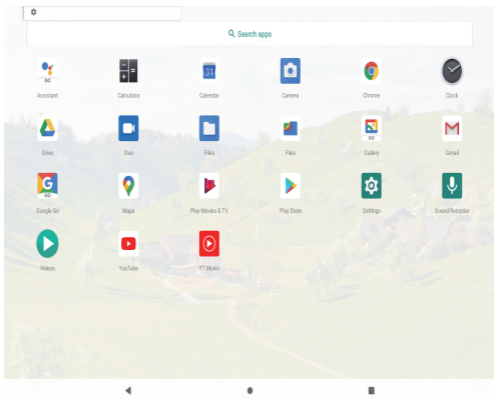 
In home screen, you can manage the so **ware** **ICONS**: long press the **ICONS** 3 seconds, a **er** the icons will be bigger, then you can drag anywhere in the interface.

Delete **ICONS**: long press the **ICON** for 3 seconds, drag the icons to the mark "X Remove", a **er** that you



can delete icon.

In the home screen, when you press “  ”, it will go to main interface.



In the main interface, you can touch the icon to open the APPs

### 3.2 status bar



 
The status bar above of the screen

Top right corner display : battery charge icons, current time.

Bottom display: Volume -,Recent applications, Menu, ESC button, Volume +.

## 4. Equipment basic setting

Setting: Click setting icons  , enter setting interface

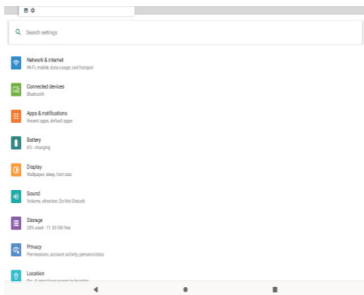


## 4.1 Wi-Fi

Drag "OFF" to "On", it will show the available Wi-Fi signal. Choose yours, then connect it by entering password. You can browse website then.

4.2 Sound: Volume, Default notification sound, Touch sounds, Screen lock sound.

 4.3 Display: Brightness, wallpaper, sleep, Daydream, font size, Accelerometer coordinate system, Cast screen, smart color, intelligent backlight, Demo mode.

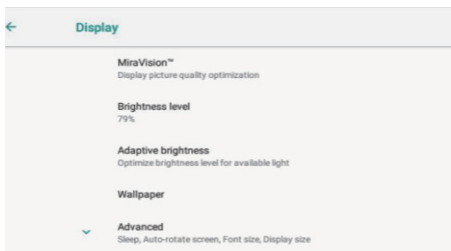

Remove TF card, view the available storage space.

【Remark】: please touch option " Unmount Removable SD card", so that you can remove SD

card safely.

#### 4.4 Application Management

How to Install Android Applications:

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on the unit by using the File Manager application.

a. Copy the .apk files that you want to install onto a SD card or USB device, then insert or connect it to your Device.

 
Tap the File Manager application icon



to

reveal this screen:


b. Tap or and locate the folder in which the .apk application files were saved.

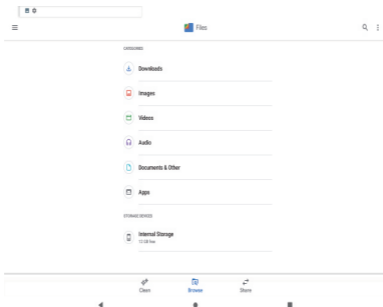

c. Tap on an .apk file to start to install. Tap NEXT to continue the installation, and then see the confirmation of install.

Tap Open to launch the application now, or tap Done to return to File Manager.

## Manage and uninstall Application

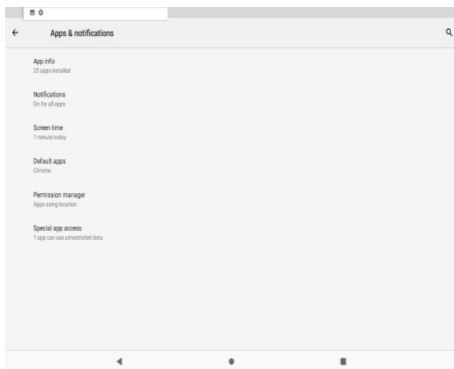 


Google, Android, Google Play and other marks are trademarks of Google LLC.


**【 Remark 】 :**

 Uninstall

1. enter “setting”>”Apps”>”ALL” And there will be all the program list
2. Click the application you want to uninstall, will enter the following interface
3. Click Uninstall, then you can delete the application.

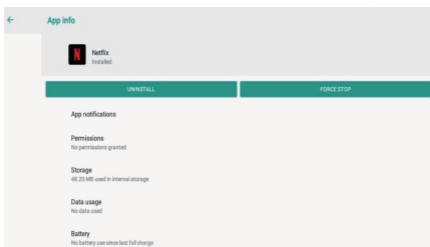

## 4.5 Language & input

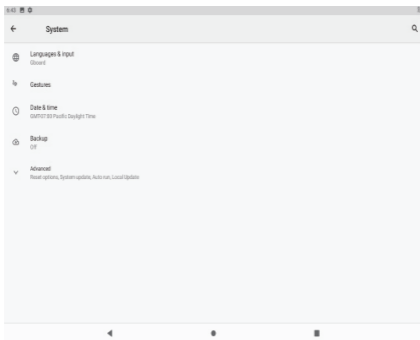 




Select Language: multi languages are available  
Android keyboard: Android keyboard setting.

#### 4.6 Backup & reset

 Backup & RESTORE, Back up my data, Backup account, Automatic restore, Factory data reset, Recover Mode.

Personal Data: Erases all data on tablet.

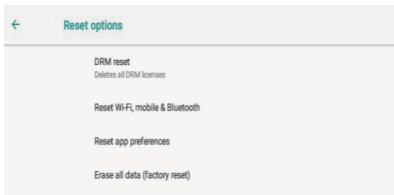

#### 4.7

Select time zone and select date format, time format.



## Date & time



Use network provided time

Date  
September 27, 2021

Time  
6:44 PM

Time zone  
GMT-07:00 Pacific Daylight Time

### TIME FORMAT

Use locale default

Use 24-hour format   
1:33 PM



## FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.