SOLEKICK MagClick[™] 10,000 mAh 15W Wireless Power Bank Instruction Manual 5077-12 1234 R. Functions: 10 1.2-in-1 Tip 2.Type-C Tip 3.Micro Tip 4.USB-A Input Cable 5.Power Display LED Screen 6.Type-C Input/Output Port 7.USB-A Output Port 8.Wireless Charging Surface 9.Magnetic Surface 10.ON/OFF Power Button 11.LED Indicator What's included: 1 x Wireless Power Bank with Built-in Cables 1 x Instruction Manual 1 x USB-A to Type-C Cable Tech Specifications • Capacity: 10000mAh/3.7V/37Wh Type-C Input(20W max): DC 5V/3A 9V/2.22A 12V/1.67A

- Type-C Output(20W max): DC 5V/3A 9V/2.22A 12V/1.67A
- USB-A Output(18W max):
- DC 5V/3A 9V/2A 12V/1 5A
- Wireless Output: 15W
- Built-in cable Output: DC 5V/3.1A(MAX) · Built-in cable Input: DC 5V/2.1A
- Instructions:
- 1. Charging the Powerbank: Be sure the power bank is fully charged before usage.
- Using the built-in USB input cable(4), insert the USB-A tip into a certified AC adapter Or using the included USB-A to Type-C cable, insert the Type-C tip into Input Port(6) 4 and USB-A tip to a certified USB AC adapter or input port of power source. • Once connected, the LED display(5) will show the percentage of charge remaining and when fully charged the LED display will
- show "100%". · Once the power bank is fully charged remove the device from the power source.
- 2. Charging Mobile Phones and Other Electronic Devices: Press the ON/OFF button(10) to turn ON
- the power bank. · Once power bank is ON, connect the appropriate built-in charging cables to your mobile phone/device . Or you can also connect your own charging cable to your mobile phone/device using the appropriate connector. Connect the USB tip of the cable into USB-A Output(7) or Type-C tip into Type-C output(6). · Phone will begin to charge automatically, the LED display will show the percentage of
- mobile device when it is fully charged. 3. Wireless Charging Mobile phones and other electronic devices:
- on the power bank, the LED display(5) will show the remaining power.

mobile device on the wireless charging surface(8), it will begin to charge automatically and there is wireless charging 10. Do not expose the device to fire or excessive temperature. Exposure to fire symbol on the LED screen(5). Once fully charged remove the device. Double press the button to turn off the power bank. 11. Ensure that qualified service professionals use only identical replacement parts to ** Note: When wireless charging, if the LED ensure product safety. 12. Attachments on the back of your phone indicator(11) shows RED the device is either NOT a wireless charging device or

Place the wireless charging supported

there is an object between the the device and charging surface interfering with the Please remove any attachments from the phone before charging on this device, charging process.

- Wireless Charging with Magnetic Surface:
- FCC Statement: If your device supports MagSafe, the magnets in your iPhone will connect to the magnetic surface(9) of the pad for a more following two conditions: (1) This device may not cause harmful

secure charging. This item is also compatible with other (1) This device must accept any interference (2) This device must accept any interference items, the magnetic function just won't work

- SAFETY PRECAUTIONS:
- WARNING-When using this product, basic precautions should always be followed: Read all the instructions before use. Never store or use this product in temperatures below 32°F(0°C) or above
- 115°F(45°C). Do not overcharge your phone. The 3 unit may become hot under excessive
- use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time. The unit will only achieve full performance
- after 2 or 3 completed charge and discharge cycles.

- rating may result in a risk of fire or injury
- 8. Do not use the device if damaged or

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the device and receiver.
- --Connect the device into an outlet on a circuit different from that to which
- the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment





FSC[2.8 mm

165x100mm

Press the ON/OEE button(10) once to turn

remaining charge in the power bank. 5. Disconnect the charging cable from your 6.

- To reduce the risk of injury, close supervision is required when the product is used near children. Do not expose the device to moisture. Do not use the device in excess of its output rating. Overload outputs above the

FC MADE IN CHINA



9 Do not disassemble the device. For

repairs, seek a qualified service

result in a risk of fire or injury.

explosion.

Warning:

professional, incorrect reassembly may

or temperatures above 104°F may cause

can impede the effectiveness of the wireless charger, and lead to overheating.

attachments can interfer with wireless

This device complies with Part 15 of the FCC Rules. Operation is subject to the

received, including interference that may cause undesired operation.

Changes or modifications not expressly

to operate the equipment

should be no less 20cm

approved by the party responsible for compliance could void the user's authority

The distance between user and products

charging and lead to over heating.

MIX Paper from responsible sources FSC® C170910

FSC