

acer



Acer Iconia Tab iM10-22

USER'S MANUAL

Contents

1.Main introduction for tablet

1.1 Diagram for tablet complete machine.....	2
---	----------

1.3 Included accessories.....	3
-------------------------------	---

2.Quick start

2.1 Key function.....	4
------------------------------	----------

2.2 Homepage interface.....	4
------------------------------------	----------

2.3 Access to application program.....	5
---	----------

2.4 Character input.....	5
---------------------------------	----------

3.Connection Establishment

3.1 WIFI Connection	7
----------------------------------	----------

3.2 Bluetooth Connection.....	8
--------------------------------------	----------

3.3 Call Function	9
--------------------------------	----------

3.4 4G Connection	10
--------------------------------	-----------

4.Connect the device to computer.....	11
---------------------------------------	----

5. Troubleshooting.....	13
-------------------------	----

1. Brief introduction for Tablet PC

1.1 Diagram for tablet complete machine



1.2 Functional diagram



1.power key

2.Volume+/-

3.Front camera

4.POGO PIN Port

5.SIM/TF Card slot

6&7&8&9. Speakers

10.Earphone port

11.Type-C port

12.Back camera

13.Flashlight

1.3 Except Tablet PC, the following accessories are included:

Power adaptor × 1

Type-C cable × 1

Earphone × 1

User's manual × 1

Ejection Pin × 1

Pouch × 1

2. Quick start

2.1 Key function

Description for key function

Power key	Long press power key to start up. Under starting up state, long press power key to pop up shutdown option. Under starting up state, short press power key to close the screen. This key also has fingerprint recognition function, you can set fingerprint info accordingly
Volume key	Press it can increase or decrease machine volume

2.2 Homepage interface

The main interface can display wallpaper and frequently used APP,you can move the APP to the main interface according to you preference. And you can also change wallpaper by yourself, enter setting→Wallpaper →Choose wallpaper from (live wallpapers/photos/wallpapers)to set wallpaper of your homepage interface.



Figure 2-1

2. 3 Access to application program

How to visit application program of tablet:

1. Swipe up on the main screen to enter the application program (As shown in Figure 2-2).

2. Select the application program you want to visit.

3. If you want to exit the program interface, press the return key to the last interface, or press the homepage key to return homepage interface directly.

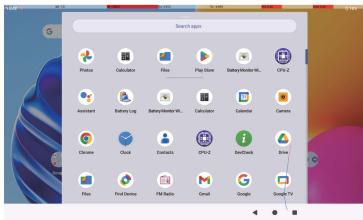


Figure 2-2

2. 4 Character input

Use screen keyboard

When you start the program or select text edit box needing to input characters or numbers, screen keyboard will show. The following input methods are provided for the keyboard to select.

1. Keyboard

2. Input method of a third party (user can install them by himself)