# M-TA7 User manual



# English

## Preface


Thank you for buying this MID. Please read and retain all the

operating instructions before operating the unit.

### I. Note

- 1. Avoid the unit being dropped. Avoid the display been shake seriously, or the display will be damaged or unusual.
- 2. Do not use metal object to touch the device to prevent it from short circuit.
- 3. Please backup your data in case your important data is lost, especially before you upgrade the firmware.
- 4. Do not disassemble. Do not wipe the surface of the unit by alcohol, thinner or benzene.
- 5. Do not disconnect the unit while it is formatting or uploading/downloading, or the procedures may lead to errors.
- 6. Avoid water or foreign objects enter the unit.
- 7. Do not use the unit in places that are extremely hot, cold, dusty, or humid.
- 8. Specifications are subject to change and improvement without notice.

### I. Introduction of cover

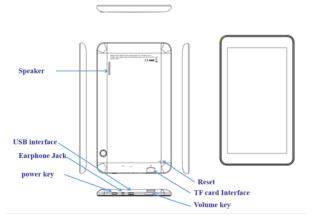

## II. Quick guide start

- $1. \qquad \hbox{Connect the USB to support power and turn on the tablet , disconnect the USB and turn off.}$
- Volume and power key not function No Camera, No battery

### 4.Use of touch screen

## Operating mode in MID

There are various ways to skim the main screen, menu and application program, etc. on your MID.

### Click to select

When you want to use screen keyboard entry, and you want to select items on the homepage interface such as application program, you only use your finger to click.

### Press on

If you want to unlock the available option of a certain item (such as textbox or interlinkage in the webpage), or move shortcut on the homepage interface and menu of main program, only press the item.

## Slide quickly or slide

Quick sliding or sliding means doing rapid vertical or horizontal drag movement by using finger on the picture.

#### Drag

Before you starting to drag, you must press it with your finger and impose a certain pressure, and don't loosen the finger before dragging to the wanted position.

## Copy the document to storage card

Connect MID and computer together with USB cable. Notice bar will indicate connection.

You can click on Notice Box or go to settings, connected devices, USB, then select 'Transfer files

Open your computer, in my computer; examine content in "M-TA7". Find the document you want to copy, copy it to "Internal storage". After completion of copying, click "no data transfer" in MID.

## 7. Memory card

### Copy the document to storage card

You can transmit document between MID and computer, such as music and picture, etc. If you want to see documents in MID, only click the file manager (Files) to look through content in the SD card.

## Delete documents on the storage card of MID

Find document you want to delete.

Press and hold the document name you need to delete; a file menu will pop up.



Click

### Delete. Removing storage card when the MID is in starting up state

If need to remove storage card under starting up state, you must unload the storage card firstly, for fear of failure or damage of the storage card.

Select settings of apk list.

Click Storage.

Find SD card under Portable storage.



to uninstall the SD card.

### III. Connection Establishment

## 1. WIFI Connection

Your MID can be connected onto Wi-Fi network to connect the operation:

- 1) On the homepage interface, slide up and click setting;
- 2) Click and select the System Settings;
- 3) Click "Network& internet" then click "Wi-Fi";
- 4) After opening Wi-Fi, the searched Wi-Fi network can be scanned automatically from the equipment in the windows on the right.
- 5) Select the Wi-Fi network required to be connected, if the password is added, pop up the password input windows and input the corresponding password.
- 6) Click the Connection

## 2. Bluetooth Connection

**Functions of Bluetooth:** 

You can exchange the files between two Bluetooth. You can exchange the files with other computers, mobile phones and PDA. You can synchronously exchange data with mobile phones, PDA and laptop to support the Bluetooth (data of outlook E-mail address).

You can exchange the electronic name card with mobile phones, PDA and laptop to support the Bluetooth.

You can connect the keyboard, mouse and joystick to support the Bluetooth.

## **Application of Bluetooth**

Setting procedure of entering into Connected devices: set ->Bluetooth set, open the Bluetooth equipment

Device name: you can randomly change the name of Bluetooth for your MID.

Detectability: open this function by clicking the place for name of Bluetooth, which indicates that your MID Bluetooth can be searched by other Bluetooth equipments.

Scan and look for equipment: you can detect the equipment desired to be connected by pressing Pair new device.

Bluetooth: after employing the scan to look for the equipment, all Bluetooth equipments searched by your MID can display under this function

## V. Specifications

Product Parameter

Type	Details	Descriptions
	MID model	M-TA7
	Operating	Android™9.0
Basical parameter	system version	Android***9.0
	Network	WIFI 802.11b/g/n +BT
	connections	
	USB interface	Micro USB*1

	battery	No
	Power supply	Input: AC 100V-240V; output: DC
		5V, 2A
	External	Support SDHC/SDXC
	memory card	
	LCD	7" inch (16:9)
Application	Video	Support MEPG,H.263/H.264,etc.
	Audio	Support ACC, WAV, etc (need
		license)
	Games	Support to the third party programs
	photos	Support browsing BMP, JPG, GIF,
		PNG,etc.

## MEANING OF THE DUSTBIN SYMBOL



Protect our environment: do not dispose of electrical equipment in your domestic waste. Please return any electrical equipment that you will no longer use to the collection points provided for their disposal. These simple steps can help to avoid the potential effects that incorrect waste disposal can cause on the environment and human health. This will contribute to recycling and other forms of re-use of electrical and electronic equipment. Information concerning where the equipment can be disposed of can be obtained from your local authorities.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the device and receiver.
- --Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment



