
# **User Manual**

#### PORTABLE CD PLAYER WITH CASSETTE RECORDER

**CD-W16** 

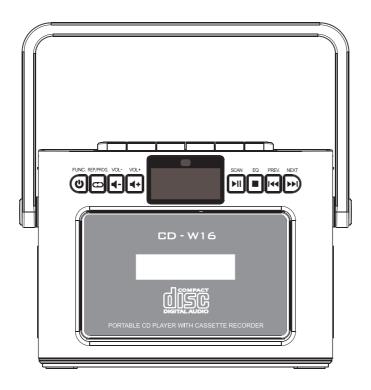

Thank you for purchasing our personal audio products. High-quality CD player is an electronic acoustic technology product carefully designed by our company. To obtain the perfect use effect and prolong the service life of this product, correct use and maintenance are very important, please read this manual carefully before use it.

### **CONTENTS**

- VERY IMPORTANT TIPS
- FUNCTION OF BUTTONS
- REMOTE CONTROL DESCRIPTION
- BATTERY INDICATOR
  REFERENCERATION
- CD/MP3 DISC OPERATION
- USB/TF OPERATION
- AUX OPERATION

- TAPE OPERATION
- RADIO OPERATION
- BLUETOOTH OPERATION
- BLUETOOTH TRANSMISSION MODE
- SPECIFICATIONS
- SAFETY INSTRUCTIONS
- WARRANTY
- PACKING LIST

### **VERY IMPORTANT TIPS**

- When using this product, please follow the prescribed steps, otherwise you may be exposed to harmful radiation. This CD player is a CLASS 1 LASER product.
- ▲ When the CD cover is opened or carelessly closed, an invisible laser will be generated.
- ▲ Please do not touch the bald head at will, otherwise it will affect the playback performance.
- ▲ The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "hazardous voltage" within product's enclosure, which may be sufficient to induce a risk of electric shock to persons.


CLASS 1 LASER PRODUCT APPAREIL À LASER DE CLASSE 1 PRODUCTO LASER DE CLASE 1









# **FUNCTION OF BUTTONS**

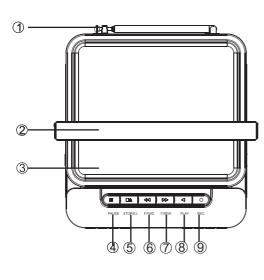


- 1. Antenna
- 2. Handle
- 3. CD Door Switch
- 4. Tape Pause Button
- 5. Tape Stop/Tape Door Open Button
- 6. Tape Fast Forward Button
- 7. Tape Fast Rewind Button
- 8. Tape Playback Button
- 9. Tape Record Button
- 10. Power On/Off/Function Selector Button
- 11. Repeat Button
- 12. Volume Decrease Button-
- 13. Volume Increase Button+
- 14. LCD Display
- 15: Remote Control Receiving Point
- 16. Play/Pause Button/Full Scan
- 17. Stop Button / EQ button
  - 18. Previous Song/Fast Rewind Button
  - 19. Next Song/Fast Forward Button
  - 20. Tape Door Close
  - 21. Speaker
  - 22. Earphone Jack
  - 23. Audio Input Interface
  - 24. USB Socket
  - 25. TF Socket
  - 26. Charge lamp
  - 27. DC 5V Outlets

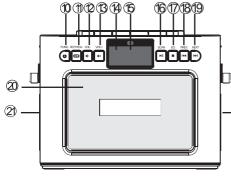

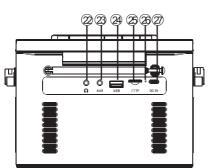

## REMOTE CONTROL DESCRIPTION

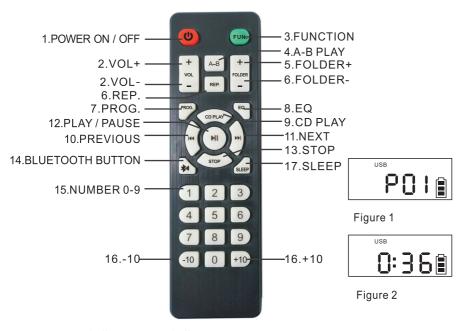

- 1.Power on / off: product on / off button.
- 2.Vol + / -: volume increase / decrease.
- 3. Function: in the power on status, press this function button to select different functions.

The playing sequence is: CD Play-USB- Bluetooth-Radio-Aux Conversion.

- 4.A-B play: A-B repeat button.
- 5.Folder + / -: select a folder to be played.
- 6.Repeat: repeat button to cycle through songs when playing USB flash disk/CD/MP3 discs.
- 7.Programming: press the STOP button on the remote contro to stop the CD/MP3 discs/USB, then press this PROG. button to entry the programming interface (theLCDwill flash and display "P01" on the screen, like above figure 1). Press the previous or next song button to select the track to be programmed, and then press this PROG. button to confirm after programming.

Press the play/pause button to play in the sequence of the programmed track(Screen will display like above figure 2). If you need to stop, just press the STOP button.

8.EQ: when the product is working, press EQ button to change different music effects,

namely: FLA-ROC-POP- JAZ-CLA (Flat - Rock - Pop - Jazz- Classical)

- 9.CD play: press this button to go to the CD play function.
- 10. Previous: short press to the previous song, long press to fast rewind.
- 11. Next: short press to the next song, long press to fast forward.
- 12.Play / pause: song play and pause.
- 13.Stop: stop to play song.
- 14.Bluetooth transmission mode: press this button to go to Bluetooth transmission mode.
- 15.Number 0-9: press the number button 0-9 to directly select the song number when playing USB flash disk / CD / MP3 disc.
- 16.-10 / + 10: step back with 10 tracks per click, and step forward with 10 tracks per click.

#### 17.SLEEP:

- 1. Short press" SLEEP" enter SLEEP MODE LCD shown as"
- 2.Short press " I◀◀ "to set the sleep time:40<50<60<70<80<90<100<110<120<OFF<

10<20<30

- 3.Short press " ▶ 1 " to set the sleep time: 30>40>50>60>70>80>90>100>110>
- 120> OFF>10> 20>30
- 4.Short press" ►II "to confirm the sleep time, LCD shown as " ☐ ☐ ☐ " The device will automatically turn off when the sleep time run finished.

Note: In sleep mode, short press the "SLEEP" button to see the rest of sleep time before the device turns off.

### **BATTERY INDICATOR REFERENCERATION**

- 1. During charging, the battery indicator on the screen will flash, the charging indicator light will remain red.
- 2. After fully charged, the battery indicator on the screen will show full bars and will not flash, the charging indicator light will turn off.
- 3. Please use 5V/2A type-c power adapter to charge the device. The fully charging time is about 5.5 hours.

#### Note:

When the power less than 25%, Maybe the display is not clear, the radio signal is poor, the sound quality is not clear, etc would appear. Please charge it as soon as possible to keep the radio working properly.

#### Description of power level

a. 60% -100% powe	
b. 30% -60% power	
c. 25% -50% power	
d. 3% -10% power	flash slowly
e. 0% -3% power	flash quickly

### **CD/MP3 DISC OPERATION**

1.Long press ( **①** ) 2 seconds to turn on the device, short press the function selector button( **①** ) to select CD / MP3 mode.LCD will show as

- 2.Open the CD compartment door, put the disc printing surface upward on the spindle of the CD movement.
- 3.Close the CD compartment door, the song will play automatically in a few seconds, the LCD will display the number of the current song. The format of the disc, such as "CD", "MP3", etc.
- 4. Short press the Vol + button ( ◀- ) or Vol button ( ◀+) to adjust the volume.
- 5. Short press the play / pause button ( ▶II ) to stop playing, press the button again to continue playing.

- 6. If you need to stop playing halfway, press the stop button ( ) to stop playing.
- 7. During playing, short press the previous/next button ( |◄◀ ) to jump to the previous/next song; long press the previous/next button ( ▶▶I ) 2 seconds to fast rewind or fast forward.

#### Repeat function:

- In the process of playing CD, short press the repeat button ( ), the current song you listen will entre single cycle mode,LCD screen will display as "Figure 3";
- Press the repeat button twice, if your MP3 disc contains a file, it will repeat to play the current folder. Displayed on the LCD as shown in "Figure 4";
- Press the repeat button three times, the whole disc will played randomly. Displayed on the LCD as shown in "Figure 5";
- Press the repeat button four times to resume normal playing.



### **USB/TF OPERATION**

- 1.Insert the USB with MP3 format into the USB socket.
- 2. Short press the function switch button ( **(b**) on the device or the remote, switch to USB play mode LCD shown as" , tthe device will reads the data and play the song.
- 3.USB playing operation is same as "CD/ MP3 Disc Operation".

### **AUX OPERATION**

- 2. The machine has the function of amplifying and outputting all external sound sources (such as mobile phone, MP3 player, tape Walkman, CD player, radio, etc.).

### **TAPE OPERATION**

#### **TAPE PLAY**

1. Press the function selector button ( **()** ) to select the TAPE function.LCD shown



- 2. Press the tape stop / open button (■♠) to open the tape door, place the tape correctly and close the tape door.
- 3. Press the tape playback button (◀) to play, and press Vol + button (◀+) or Vol button (◀-) to adjust the volume appropriately.
- 4.Short press the tape pause button ( $\blacksquare$ ) to temporarily stop playing, and press the tape pause button ( $\blacksquare$ ) again to resume playing.
- 5. To fast forward or fast rewind the tape, just press the tape fast forward button (◀) or the tape fast rewind button (▶), then press tape playback (◀) button again to play.
- 6. When the magnetic stripe in the tape reaches the end, the tape playback will stop automatically.
- If you want to stop playback halfway and take out the tape, short press the Tape
  Stop/Tape Door Open Button ( ■▲ )to stop, and press twice to open the tape door.

#### TAPE RECORDING

- 1. This product has function of built-in microphone input tape. It can record sound under CD/USB/Bluetooth/AUX/Radio mode, Note: voice cannot be recorded.
- 2.Open the tape door and put a blank tape in it. Then press to choose one of the CD/USB/Bluetooth/AUX/Radio mode you want to record. When it playing, press the tape playback button (◀) and tape record button (●) at the same time to start record.
- 4.Press the tape fast rewind button (▶▶) to back to the sound you record, then press the tape playback(◀) button to play.

### **RADIO OPERATION**

1. Press the function selector button (**U**) to enter the radio state.

- 2. Press the ◀- /◀+ button to adjust it to the appropriate volume.
- 3. Turn the channel selection button to select your favorite stations. The LCD will display the corresponding radio frequency.
- 4. Pull out the antenna to get a good reception.

### **BLUETOOTH OPERATION**

- 1. Press the function selector button (**①** ) to select "BT" mode (LCD shown as " LUE ),at this time, Bluetooth works in pairing state.
- 2. Turn on the mobile phone or other Bluetooth device. When it searches for the local Bluetooth device, the Bluetooth name "CD-W16" will be displayed. After successful pairing, you will hear a prompt tone.
- 3. When Bluetooth is playing, short press the play button( ▶|| ) to play / pause.
- 4. After Bluetooth pairing, long press the stop button( ) to clear the Bluetooth connection function.

### **BLUETOOTH TRANSMISSION MODE**

- 1 : In CD/USB/TF/FM/TAPE mode , long Press "to enter bluetooth transmission mode:.(LCD shown as" will flash on the screen)
- 2: When the Bluetooth is under pairing status, it will search Bluetooth devices around for pairing (those with receiving function like Bluetooth speaker/Bluetooth earphone/ Bluetooth headphone).
- 3: After pairing, the icon" \*1 "on LCD screen stops flashing.
- 1.Long press Bluetooth transmit button" again to stop Bluetooth transmission.

#### Note:

1.Before connect the wireless Bluetooth earphone with this player, you need to make sure to disconnect the other electronic Bluetooth device with earphone and set your wireless Bluetooth earphone to the searchable mode.

2.If you cannot search and connect to the Bluetooth device, please restart the Bluetooth or the player.

### **SPECIFICATIONS**

Power source: DC 5v 2a Type-C charging

Bluetooth version: 5.1

CD Format: CD/CD-R/CD-RW/MP3

USB/SD Format: MP3/WMA

Cd playback sound: 31.5hz-16khz±3db

Size: 7.56\*7.56\*5.16in Weight: 2.99lb/1360g

### **SAFETY INSTRUCTIONS**

- 1. Do not expose the machine to rain or damp places, and place and use the machine away from bathtubs, washing boxes, swimming pools, etc.
- 2. Do not put any source of danger on the device (for example, objects filled with liquid, lighted candles).
- 3. Do not use the machine near heat sources, including radiator pipes, heaters or other appliances that generate heat.
- 4. Put the machine on a flat surface to use.
- 5. The machine should be placed in a location with sufficient ventilation space around it, and there should be 5-10 cm of space around the front and rear of the machine, so that the machine can have enough space for ventilation.
- 6. Do not place the machine on a bed, blanket or similar surface to prevent the vents of the machine from being blocked, and do not cover the machine with tablecloths, paper, etc.
- 7. Be careful not to let solids or liquids enter the body from the radio.
- 8: Water vapor may condense on the laser lens under the following conditions:
- -When the unit is moved from a cold place to a warm place;
- -When the heating system has just opened;

- -When the machine is used in a very humid room;
- -When the unit is cooled by the air conditioning system.

When condensation occurs in the unit, the system cannot operate normally.

If this happens, you can temporarily stop using the unit for a few hours before operating it again.

9. The machine should not be exposed to water droplets or splashes, and objects filled with liquids such as vases should not be placed on the equipment.

### Maintenance

Please place the machine in a well-ventilated place, not in the sun or other places that generate high temperature and humidity. During maintenance, please use a soft cloth moistened with a thinner detergent to wipe the body. Do not use strong solvents such as alcohol, stupid or thinner.

# **WARRANTY**

- This CD boombox has full 12-month warranty against manufacturing defects.
- The warranty period begins form the date of purchase.

# **PACKING LIST**

CD Player	1
Type-C Cord	1
Remote Control	1
User Manual	1



Made in china

#### RF exposure statement

This equipment complies with the FCC and ISED radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet é quipement est conforme aux limites d'exposition aux rayonnements de la FCC et de l'ISED é tablies pour un environnement non contrôl é . Cet é metteur ne doit pas ê tre co-localis é ou fonctionner en conjonction avec une autre antenne ou un autre é metteur.

#### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- L'é metteur/r é cepteur exempt de licence contenu dans le pr é sent appareil est conforme aux CNR d'Innovation, Sciences et D é veloppement é conomique Canada applicables aux appareils radio exempts de licence. L'exploitation est autoris é e aux deux conditions suivantes:
- 1. L'appareil ne doit pas produire de brouillage;
- 2. L'appareil doit accepter tout brouillage radio é lectrique subi, m ê me si le brouillage est susceptible d'en compromettre le fonctionnement.